



MIRION
TECHNOLOGIES



Health Physics and Radioprotection



MIRION
TECHNOLOGIES

PROTECT WHAT'S NEXT



At Mirion Technologies, we partner with industry leaders to advance radiation safety and empower the next wave of critical innovation. From R&D labs, to critical nuclear facilities, and on the front lines, we provide proven radiation safety technologies that operate at the highest levels of precision, and deliver trusted expertise that empowers our customers to solve problems and enable breakthrough

Our Mission:

To harness our unrivaled knowledge of ionizing radiation for the greater good of humanity.

TABLE OF CONTENTS

Dosimetry and Telemetry Systems

- DMC 3000™
- DMC 3000™ Bluetooth® Module
- MirionWatch™
- ConnectStudio™
- Enhanced Telemetry Module (eTx)
- Location Telemetry Module (LTx)
- AWM™
- Neutron Module Hp(10)
- Beta Module Hp(0.07)
- LDM 3200™
- LDM 1000™
- LDM 320D™ / LDM 320W™
- DMCUser™
- DosiServ™
- DosiServ™ Lite

Portable Radiation Measurement

- RDS-32™
- Easy-Count™
- AVIOR®-2
- CSPevo® Probes
- SAB-250™
- SABP-525™
- Tele-STTC-2™
- SA-32™
- SB-32™

- SA-100™
- SB-100™
- SABG-100™
- SABG-15+™
- SG-2R™
- SX-2R™
- iPIX™
- GMP-15S™

Contamination and Clearance

- GEM™-5
- Argos™ PAB
- Argos™ Core
- MiniSentry™ 2
- HandFoot-Fibre™
- Sirius™-5
- Sirius™-5 Compact
- Sirius™ Core
- RTM644-Smart™
- RTM662-300
- RTM662-460
- RTM662-460C
- Cronos®-4 and Cronos®-11
- RTM 750™

Supervision

- Vital®



MIRION
TECHNOLOGIES



Dosimetry and Telemetry Systems



MIRION
TECHNOLOGIES

DOSIMETRY

DMC 3000™

Personal Electronic Dosimeter



Mirion Technologies provides a complete line of hardware and software products targeted to Health Physics and Radiation Protection personnel, in order to meet current Nuclear Industry challenges.

DESCRIPTION

Covering a wide range of X-ray and Gamma radiation detection, our DMC 3000 Electronic Dosimeter represents over 25 years of real-world electronic dosimetry experience, continually refined through customer feedback.

The unique, high contrast and backlit LCD display provides a clear indication of wearer's dose and ambient dose rate for deep dose equivalent. More importantly, multiple methods (audible, visual, and tactile) are utilized to alert the wearer of alarm conditions.

The DMC 3000 provides all of this protection, for over 3,000 hours of continuous use, with a single AAA alkaline battery. Best of all, connected with plug and play add-on modules the DMC 3000 offers detection and radio transmission capabilities beyond traditional use.

The DMC 3000 dosimeter offers an enhanced communication protocol for additional features and includes a compatibility mode for previous Mirion Technologies products including calibration tools, access control, turnstiles and telemetry infrastructure.

FEATURES

- ✓ Loud, vibrating and dual ultrabright LED alarm
- ✓ Highly visible backlit display
- ✓ Simple 2-button navigation
- ✓ Additional modules (Beta, Neutron, Telemetry and Neutron Telemetry)
- ✓ Superior X-ray and gamma energy response (Hp(10) and Hp(0.07))
- ✓ Exceeds applicable IEC and ANSI standards
- ✓ Excellent immunity to electromagnetic interference
- ✓ Designed for ruggedness and durability



DOSE RANGE, IEC61526 ED. 3 (DISPLAY & MEASUREMENT)	
<i>Hp</i> (10) γ	<i>Hp</i> (0.07) γ
- Effective range of dose: 0.01 μSv to 100 Sv (0.001 mrem to 10000 rem) - Display resolution: 0.1 μSv to 10 Sv (0.01 mrem to 1000 rem) up to four decimal places - Overload indication: from 10 Sv to > 100 Sv (1000 rem to > 10000 rem)	- Effective range of dose: 0.01 μSv to 100 Sv (0.001 mrem to 10000 rem) - Display resolution: 0.1 μSv to 10 Sv (0.01 mrem to 1000 rem) up to four decimal places - Overload indication: from 10 Sv to > 100 Sv (1000 rem to > 10000 rem)
DOSE RATE RANGE IEC61526 ED. 3 (DISPLAY & MEASUREMENT)	
<i>Hp</i> (10) γ	<i>Hp</i> (0.07) γ
- Effective range of dose rate: 0.05 μSv/h to 20 Sv/h (0.005 mrem/h to 2000 rem/h) - Display resolution: 1 μSv/h to 10.0 Sv/h (0.1 mrem/h to 1000 rem/h) up to three decimal places - Overload indication: from 10 Sv/h to > 50 Sv/h (1000 rem/h to > 5000 rem/h)	- Effective range of dose rate: 0.05 μSv/h to 20 Sv/h (0.005 mrem/h to 2000 rem/h) - Display resolution: 1 μSv/h to 10.0 Sv/h (0.1 mrem/h to 1000 rem/h) up to three decimal places - Overload indication: from 10 Sv/h to > 50 Sv/h (1000 rem/h to > 5000 rem/h)

ON-AXIS ENERGY RESPONSE	
Photon <i>Hp</i> (10) (Ref. ^{137}Cs)	Photon <i>Hp</i> (0.07) (Ref. ^{137}Cs)
$\pm 15\%$ from 15 keV to 1.5 MeV -15% to +20% from 1.5 MeV to 10 MeV	$\pm 30\%$ from 20 keV to 1.5 MeV -15% to +20% from 1.5 MeV to 10 MeV
COMBINED ENERGY AND ANGULAR RESPONSE	
Photon <i>Hp</i> (10) (Ref. ^{137}Cs)	Photon <i>Hp</i> (0.07) (Ref. ^{137}Cs)
-29% to +67% from 16 keV to 10 MeV, 0° to 60°	-29% to 67% from 24 keV to 10 MeV, 0° to 60°
ACCURACY	
Photon <i>Hp</i> (10) (Ref. ^{137}Cs)	Photon <i>Hp</i> (0.07) (Ref. ^{137}Cs)
$\pm 5\%$	$\pm 5\%$
DOSE RATE LINEARITY	
Photon <i>Hp</i> (10) (Ref. ^{137}Cs)	Photon <i>Hp</i> (0.07) (Ref. ^{137}Cs)
$\pm 10\%$ Between 10 Sv/h (1000 rem/h) and 50 Sv/h (5000 rem/h) cumulative dose	

CHARACTERISTIC FOR PULSED RADIATION		
Characteristic	Rated Range	Relative Response
Medical X-ray, pulse width >1 ms, pulse rate mode		
Max. pulse dose rate	0.05 μ Sv/h to 5 Sv/h (0.005 mrem/h to 500 rem/h)	$\pm 20\%$ for pulse width >1 ms (-40% at 10 Sv/h, (1000 rem/h))

Accessories and Options

MODULES

- Beta Module Hp(0.07)
- Neutron Module Hp(10)
- Telemetry Module
- Neutron Telemetry Module

READERS

- LDM 320D/W™
- LDM 2000™
- LDM 3200™
- LDM 1000™

SOFTWARE

- DMCUser™
- DosiFFR™
- DosiCare™
- DosiServ™
- LDMAccess™

CALIBRATOR

- IRD 2000™



TELEMETRY

- WRM2™/WRM3™
- iPAM-Tx
- RDS-31iTx - RDS-32iTx
- TeleView 3000

SIMULATION

- DMC 3000TD
- SCC (Simulation Control Center)



DMC 3000 Beta



DMC 3000 Neutron



DMC 3000 Telemetry



DMC 3000 Neutron Telemetry



ELECTRICAL CHARACTERISTICS

- Battery: standard AAA (LR03) 1.5 V Alkaline
- Autonomy:
 - 12 calendar months battery life (typical, 8 h per day, 5 days per week in run mode, without excessive alarms) (1)
 - 3,000 h battery life in continuous mode, without excessive alarm (1)
 - (1) 0.1% of the time in alarm, with a quality industrial battery

MECHANICAL CHARACTERISTICS

- Case: rugged, high impact polycarbonate-ABS
- Dimensions: 87 x 60 x 21 mm (3.4 x 2.3 x 0.8 in) max. without clip
- Weight: < 88 g (3.1 oz) with alkaline battery and clip
- Replaceable clips: 3 back clips and 1 front-facing clip


ENVIRONMENTAL CHARACTERISTICS

- Temperature range: -10 °C to +50 °C (+14 °F to +122 °F)
- Relative humidity: < 90% at +42 °C (+108 °F)
- Storage: -20 °C to +71 °C (-4 °F to +160 °F) without battery
- Shock, vibration and drop resistant (1.5 meter on concrete)
- Waterproof IP67: 1 m (39 in) during 1 hour
- EMC: complies and exceeds standards by a large margin (CE compliant, certificate number: 153720)
 - MIL STD 461-RS103 (square wave modulation, electric field): exceeds 200 V/m from 10 kHz to 5 GHz
 - MIL STD 461-RS101 (magnetic field) 30 Hz to 100 kHz
- Factory calibration approved under ISO/IEC 17025, COFRAC accreditation N° 2-1663 (See www.cofrac.fr)

FUNCTIONAL FEATURES

DISPLAY FEATURES

- Large LCD display with high quality white backlighting
- Eight alphanumeric digit display for full name display and fix dose/dose rate display format
- Two push buttons for an easy customized data and parameters display

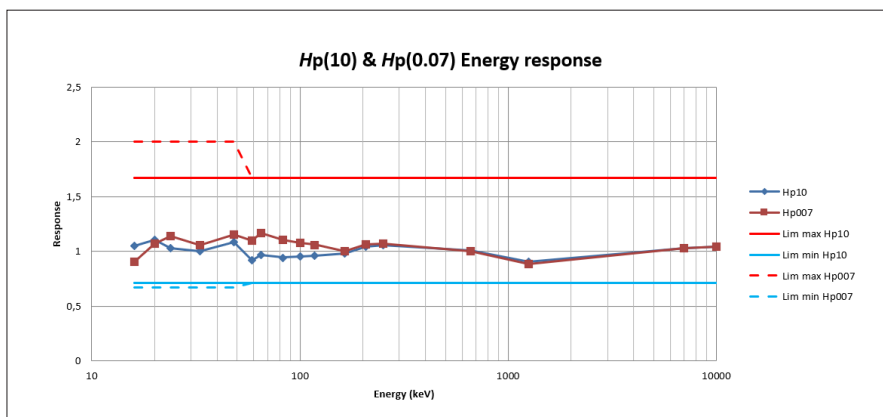

ALARM FEATURES


- Audible and tactile
 - Alarming speaker with level of 85 dB (A) typical (> 90 dB (C) peak) at 30 cm (11.8 in), frequency < 4800 Hz
 - Vibrating alarm
- Visual
 - High efficiency red flash LED on front
 - Three top LEDs for Alarming (Red), gamma counting (Green), and Hp(0.07) or Neutron counting (Blue)
- Customize
 - Adjustable dose and dose rate alarms
 - Adjustable and acknowledgeable dose and dose rate warnings
 - Configurable visual and audible alarm chirp
 - Configurable latched dose rate alarm and warning
 - Remaining time and run time alarms

DISPLAY HISTOGRAM FEATURES

- Dose increments with a 1 μ Sv (0.1 mrem) resolution and dose rate saved on non-volatile memory (EEPROM) in configurable steps (10 s, 60 s, 10 min, 1 hour, 24 hours)
- Event log (alarms, faults, changes) saved during the selected time periods
- Stores data for several consecutive workers' entries and exits (more than 2,500 steps)

COMMUNICATION

- Hands-free communication, frequency: 125 kHz
- Backward compatibility with existing readers
- Enhanced protocol to support additional features with the new readers (LDM 320D, LDM 320W, LDM 2000, LDM 3200, LDM 1000 models)

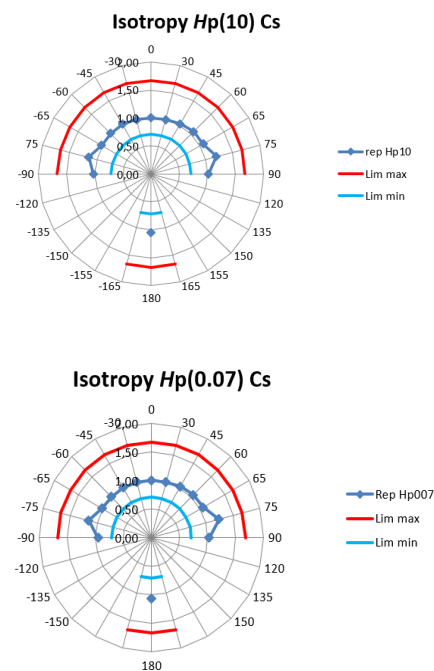

MIRION
TECHNOLOGIES



DOSIMETRY

DMC 3000™ Bluetooth® Module

Connectivity Module for DMC 3000 Dosimeter



Enhance your safety with connectivity.

DESCRIPTION

Designed to enable connectivity and enhance user safety, the Bluetooth module allows for the pairing of the DMC 3000 dosimeter to other devices and the transmission of dosimeter data to a telemetry network.

With the introduction of the Bluetooth module, Mirion Technologies is also pleased to release the MirionWatch™ device for improved alarm reporting and ConnectStudio™ software for efficient network management.

See back for an overview on how these solutions work together, and respective data sheets for additional detail.

ADVANTAGES

- Seamless integration with all existing DMC 3000 dosimeters*
- Maintains current dosimeter form factor with modified battery cover
- Rugged, durable design
- Intuitive operation and device pairing
- Meets or exceeds applicable IEC and ANSI standards
- Connected with Mirion Ecosystem

*Compatible with dosimeter firmware V7.8.6

FEATURES


- ✓ Bluetooth Low Energy compatible
- ✓ Near Field Communication (NFC) compatibility
- ✓ Low power optimized battery for long battery life
- ✓ No additional power supply
- ✓ Excellent Electromagnetic Compatibility (EMC) immunity
- ✓ Waterproof IP67 (1 m, 1 hour)

RELATED PRODUCTS

- DMC 3000 Dosimeter
- MirionWatch Device
- Mirion ConnectStudio Software
- Mirion WRM Network Telemetry
- DMCUser™ / DosiServ™ Software
- AWM™ Adaptive Wireless Monitor
- TelemetryStudio / TeleView 3000 Software / Orion™ Real-Time Location System
- LDM 3200™ NFC Reader / LDMAccess



NEW MIRION CONNECTED ECOSYSTEM

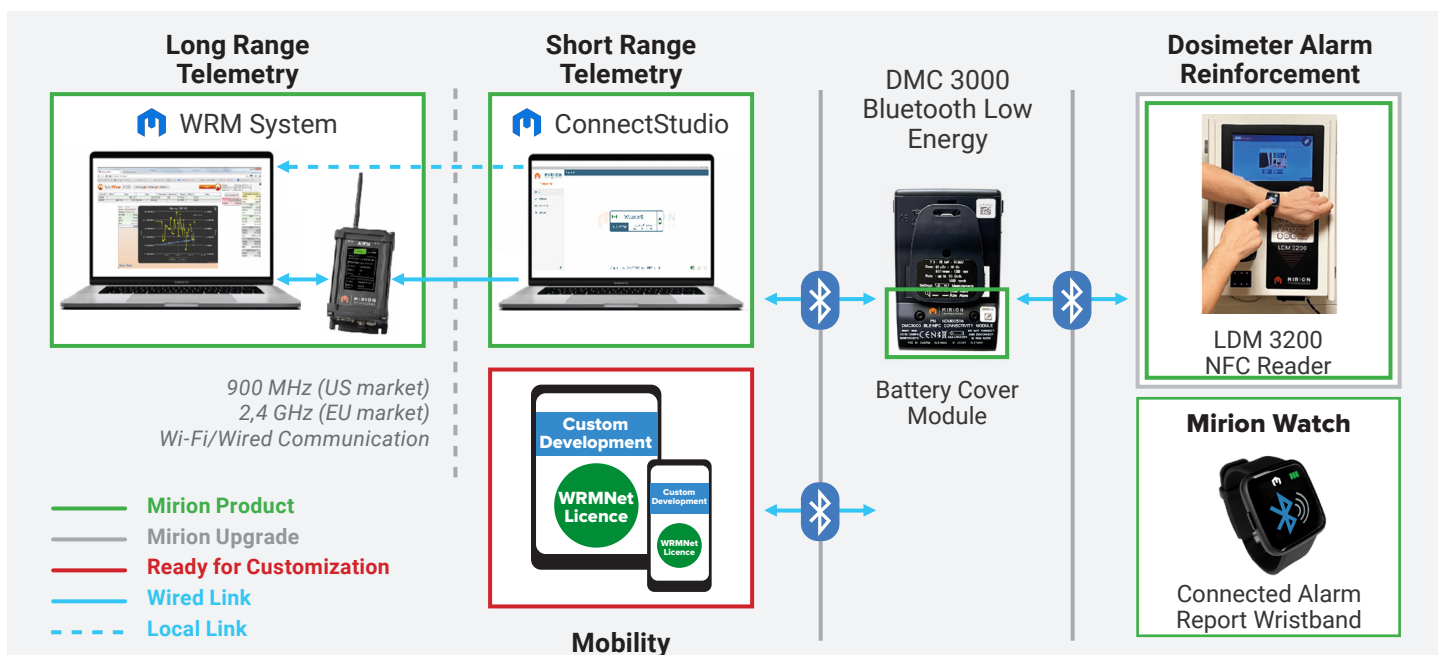

SHORT RANGE TELEMETRY

Transmit power output and sensitivity:
Power output

- **Sensitivity:** -106 dBm (2.4 GHz)
- **Frequencies:** 2.4 GHz
- **Transmission interval:** Adjustable 1 or 4 seconds
- **Transmission range:** (20-25 m) line of sight
Meets the EPRI Low power guideline of <4 V/m at 1 ft

PERFORMANCE

- Bluetooth standard compliant
- NFC standard compliant
- CE: standard compliant
- FCC certification number: 2AWTM-BLE3000
- IC certification number: 26297-BLE3000

COMPATIBILITY WITH BLUETOOTH LOW ENERGY ECOSYSTEM

- DMC 3000 firmware V7.8.6 or higher
- Mirion ConnectStudio software (V1.2)
- MirionWatch device
- Mirion WRM protocol (WRM2/3)
- AWM (firmware V8.0.0 or higher)
- DosiServ 2023 and LDM Access (V2.0)
- LDM 3200 NFC reader

COMPATIBILITY WITH LOT

- WRMNet library (WRM3)
- Bluetooth protocol (V4.2)
- NFC Standard

ELECTRICAL CHARACTERISTICS

Internal power: AAA alkaline battery

Battery life: six months (4 s interval; normal use, 0.1% alarm)

MECHANICAL CHARACTERISTICS

Rugged, high impact polycarbonate-ABS case.

Dimensions (DMC 3000 + Bluetooth module):

- 60 x 88 x 21 mm (2.4 x 3.5 x 1.1 in.) with standard clip

- 86 x 56 x 21 mm (2.2 x 3.4 x 0.8 in.) without clip

Weight (Bluetooth module + dosimeter with alkaline batteries and a standard clip): <92.2 g (3.24 oz)

Weight (Bluetooth module alone): 9 g (0.31 oz)

ENVIRONMENTAL CHARACTERISTICS

Temperature range: -10 °C to 50 °C (14 °F to 122 °F) / 0 °C to 50 °C (32 °F to 122 °F) for the telemetry function

Relative humidity: <90% at 42 °C (108 °F)

Storage: -20 °C to 71 °C (-4 °F to 160 °F) without battery

Shock, vibration and drop resistant

Waterproof: IP67 1 m (39 in.) for 1 hour

EMC: complies with and exceeds standards by a large margin (CE compliant, refer to chapter §6.1 EU declaration of conformity)

- MIL STD 461 RS 103 (pulsed electric field): exceeds 200 V/m from 80 MHz to 5 GHz
- MIL STD 461 RS 101 (magnetic field 30 Hz to 100 kHz): norm of the regulation +6dB
- ETSI 301-489 -1 and 17 electromagnetic compatibility (EMC) for radio equipment
- ETSI 301-328 (harmonized European standard for access to radioelectric spectrum)



MIRION
TECHNOLOGIES



MIRION
TECHNOLOGIES

DOSIMETRY

MirionWatch™

Device for DMC 3000™ Bluetooth® Module



Enhance your safety with connectivity

DESCRIPTION

The MirionWatch device strengthens alarm alerting and reporting for personnel working in challenging environments.

Paired with the DMC 3000 dosimeter via our newly-released Bluetooth module, the MirionWatch device provides a wristband-based vibrational alert when an alarm threshold is met, acting as a reinforcement of the primary dosimeter alert. The vibrational alert is easily felt by the user, and an intuitive interface on the MirionWatch device displays alert details.

The MirionWatch device can fully integrate with the Mirion connected ecosystem (software and reader), offering a complete user experience.

ADVANTAGES

- Reinforcement of the dosimeter alarm
- Designed to use and pair easily with the DMC 3000 dosimeter
- High sensitivity alarm alert vibration
- Intuitive display for user safety
- Compatible with Mirion connected ecosystem

RELATED PRODUCTS

- DMC 3000 dosimeter (from FW V7.8.6); Bluetooth Low Energy module; ConnectStudio™ software (V1.2); Mirion WRM network; DosiServ™ software 2023; LDM 3200™ reader and LDMAccess; MirionWatch charger rack

FEATURES

- ✓ Wristband vibration alerts particularly useful for more challenging environments
- ✓ Designed for ruggedness and durability
- ✓ Quickly displays information on alarm type
- ✓ Smart pairing and battery management
- ✓ Low power optimized for long battery life
- ✓ Easy to decontaminate
- ✓ Waterproof IP67 (1 m, 1 hour)
- ✓ IPS touch display (legible in direct sunlight)
- ✓ Pairing notification by vibration
- ✓ Color indicator display



FUNCTIONALITY

DOSIMETER ALARM REINFORCEMENT FOR CHALLENGING ENVIRONMENTS

Comfortable to be worn for daily tasks, the MirionWatch unit provides additional protective awareness and reporting to the dosimeter with a wristband vibration alarm. Ideal for challenging conditions such as, hazardous situations, hot radiological tasks, or noisy environments.



NO DOSIMETERS LEFT BEHIND IN RCA

A MirionWatch device paired with a DMC 3000 dosimeter provides a connected signal between the units. If the paired distance is exceeded without both units, the MirionWatch will vibrate and remind the wearer to retrieve their dosimeter.



SMART BATTERY MANAGEMENT AND PAIRING

The MirionWatch device is designed to be easy to operate, automatically manage its battery use, and quickly pair with your DMC 3000 dosimeter via the new Bluetooth module. The device provides a minimum of 8-hour wear time to perform your tasks with confidence and safety.

In case of lost contact, the MirionWatch unit will reconnect to the most recently paired dosimeter automatically.



ELECTRICAL CHARACTERISTICS

- Battery life: Five days with normal use (eight hours/day)
2-pin USB charging dock (USB Type A – 500 mA)
- Time required for full charge: 2 hours

MECHANICAL CHARACTERISTICS

- **Display:** square 1.3 inch 240x240 IPS color capacitive touch display
- **Solid build:**
 - Dimensions: 37.5 x 40 x 11 mm
 - Weight: 38 grams
 - Made with zinc alloy and scratch resistant

ENVIRONMENTAL CHARACTERISTICS

- Temperature range: -10 °C to 50 °C (14 °F to 122 °F) / 0 °C to 50 °C (32 °F to 122 °F) for the telemetry function
- Relative humidity: <90% at 42 °C (108 °F)
- Storage: -20 °C to 50 °C (-4 °F to 160 °F)
- Shock, vibration and drop resistant
- Waterproof IP67 1 m (39 in) for one hour

COMPATIBILITY

- Compatible with DMC 3000 firmware V7.8 or higher
- Compatible with LDM 3200 reader (NFC optional)
- Compatible with WRMNet library and Mirion WRM3™ telemetry
- Compatible with Wristband Charger Rack
- Compatible with Bluetooth/NFC Standard



MIRION
TECHNOLOGIES

Copyright © 2023 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



MIRION
TECHNOLOGIES

DOSIMETRY

ConnectStudio™

Connectivity Management Software



Enhance your safety with connectivity.

DESCRIPTION

ConnectStudio software helps strengthen exposure monitoring and supervision by enabling connectivity of the new DMC 3000 dosimeter with Bluetooth module, MirionWatch device, and the related ecosystem.

With ConnectStudio software, users can supervise paired dosimeters within a short-range telemetry network. An intuitive operational display supports local action based on telemetry feedback. In addition, ConnectStudio software can serve as a gateway to Mirion WRM network for a remote supervision through AWM radio.

ADVANTAGES

- Supports efficient pairing of new DMC 3000™ Bluetooth Module and MirionWatch™ device
- Enables easy connection to Mirion WRM Network for long-range telemetry
- Facilitates wireless, short-range supervision

FEATURES

- ✓ Simplified pairing management
- ✓ Operational telemetry supervision at a glance
- ✓ Data transmission to Mirion WRM network

RELATED PRODUCTS


- DMC 3000 with Bluetooth cover module
- MirionWatch device
- Mirion AWM™ Adaptive Wireless Monitor
- Mirion WRM Network
- Mirion telemetry supervision software



FUNCTIONALITY

To simplify the pairing and connection with Mirion connected objects

ConnectStudio software allows for an easy pairing with the NFC reader, and to the DMC 3000 Bluetooth module and Mirion Bluetooth products. The software manages the connections, and reconnections automatically in case of a lost signal.

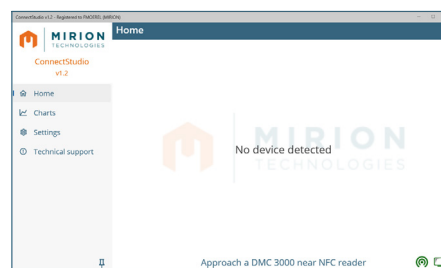

Gateway between Bluetooth connection and Mirion WRM network

ConnectStudio software provides a bridge to the legacy Mirion WRM system (remote supervision) through the AWM connection.

RECOMMENDED HW CONFIGURATION

- Windows 10 version 1809 minimum
- Android version 12
- 10" display
- 8 Go RAM
- BLE 4.2

RECOMMENDED MATERIAL

The maximum number of simultaneously connected dosimeters to ConnectStudio software can vary from six to more than 15 depending on the tablet limitations.

Standard tablet: HP Pro x2, Hp Elite X2, Microsoft Surface Pro 7
Rugged Tablet: RuggON Rextorm PX501; Getac UX10

NFC reader:


- Any NFC reader configurable as a smartcard reader
- ACS ACR122U; ACS ACR1252U

Port cable to AWM connection: recommended converter

- Digi Edgeport 1 RS232 DB9 to USB converter
- (Digi part number 301 – 1001 – 15)

OPERATIONAL TELEMETRY SUPERVISION

ConnectStudio software offers a quick operational display providing dosimeter data for each wearer. The information can be displayed with a graphical view or tile view. This functioning view allows for any necessary quick action in case of an alarm or pre-alarm (dose/dose rate/time alarm). All Mirion telemetry software is compatible with ConnectStudio software for these advanced supervisory features.

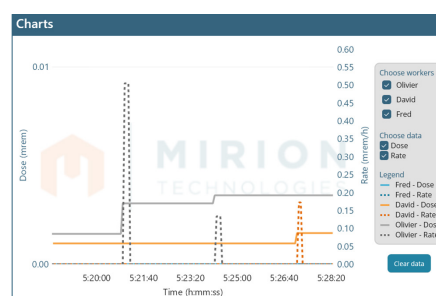

COMPATIBILITY

- Compatible with DMC 3000 Bluetooth Low Energy
- Compatible with WRMNet library and Mirion WRM3™ telemetry
- Compatible with AWM (from firmware 8.00)
- Compatible with Bluetooth/NFC Standard (custom IoT)



MIRION
TECHNOLOGIES



DOSIMETRY

Enhanced Telemetry Module (eTx)

For the DMC 3000 Dosimeter Management Software



The eTx is the last state-of-the-art telemetry module for DMC 3000.

DESCRIPTION

This enhanced module is able to transmit worker's data (worker information, gamma radiological data and setpoints) to WRM3 Telemetry System components. eTx module is also backward compatible with WRM2 Telemetry System.

The add-on eTx Module attaches to the DMC3000 dosimeter is providing a connectivity feature to transmit measurements and wearer information to WRM2 and WRM3 telemetry systems. The module provides also a supplemental visual alarm indication (LED).

RELATED PRODUCTS

- Telemetry Systems: WRM3™ and WRM2™
- Readers: LDM 3200™, LDM 320D/W™, LDM 1000™
- Software: LDMAccess™, DMCUser™, Teleview 3000™ and TelemetryStudio™

FEATURES

- ✓ Transmits radiological information, in pre-configured intervals to WRM3 or WRM2 Telemetry receivers
- ✓ Low-power optimized for long battery life
>50 h* for 900 MHz module and
>100 h* for 2,4 GHz module
- ✓ 900 MHz and 2.4 GHz Options
- ✓ Module power supply: AAA battery or micro USB connector
- ✓ Designed for ruggedness and durability
- ✓ Waterproof IP67 (1 m 1 hour)

**With Duracell industrial battery*



PHYSICAL CHARACTERISTICS

- **Transmit power output and sensitivity:**
 - 125 mW (900MHz), 10 mW - 63 mW (2.4 GHz) locally regulated
 - Sensitivity: -106 dBm (900 MHz), -100 dBm (2.4 GHz)
- **Frequencies:** 900 (902-928) MHz or 2.4 ISM frequency range
- **Transmission interval:** user configurable

ELECTRICAL CHARACTERISTICS

- **Internal power:** AAA Alkaline Battery (LR03)
- **External power:** battery adaptor 1.5 V - 3.6 VDC, external power 100 - 220 VAC with USA and Euro adapter or through micro USB connector

MECHANICAL CHARACTERISTICS

- Rugged, high impact polycarbonate-ABS case
- Dimensions with DMC 3000:
 - 141 x 60 x 21 mm (5.6 x 2.4 x 0.8 in) max. without clip
 - 141 x 60 x 28mm (5.6 x 2.4 x 1.1 in) with standard clip
- Weight with DMC 3000 and battery: 163 g (5.74 oz)
- Weight eTx module only: 81 g (2.86 oz)
- Worn by a replaceable clip

ENVIRONMENTAL CHARACTERISTICS

- **Temperature range:** -10 °C to 50 °C (14 °F to 122 °F)
- **Storage:** -20 °C to 71 °C (-4 °F to 160 °F)
- **Shock, vibration and drop resistant**
- **IP67 protection:** 1 m (39 in) during 1 hour
- **EMC:** complies and exceeds standards by a large margin (CE compliant certificate number: DOC013768)
 - MIL STD 461-RS103 (pulsed electric field): exceeds 200 V/m from 80 MHz to 5 GHz
 - MIL STD 461-RS101 (magnetic field 30 Hz to 100 kHz)
- **Agency approvals:** FCC (900 MHz) (USA), IC (Canada), and CE (Europe) (2.4 GHz)

PRODUCT CHARACTERISTICS

ALARM FEATURES AND COMMUNICATION



- DMC 3000 alarming speaker, vibrator, high efficiency red flash LED, 3 top LEDs and display indicators
- The DMC 3000 alarms are reported to the eTx module. The LEDs of the eTx module blink red between each transmission to the supervisor. Note that the buzzer has the same pattern



Red flashes of the left and right LED: eTx Module in alarm

COMPATIBILITY

- Compatible with DMC 3000 firmware V7.8.x or higher
- Compatible with WRM2 or WRM3 system (AWM and more)

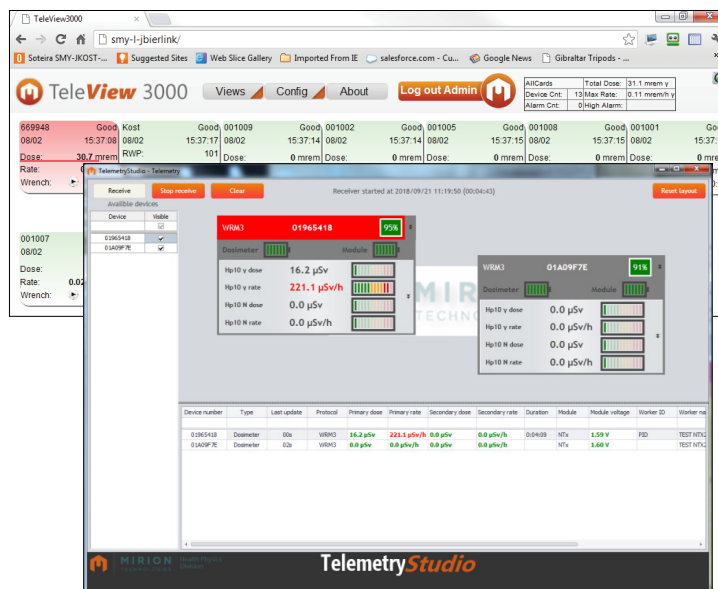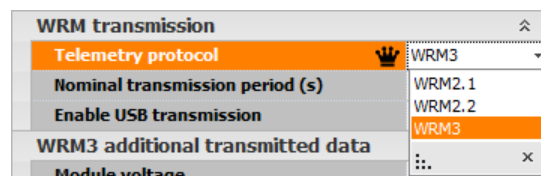

Example of a telemetry system



MIRION
TECHNOLOGIES



DOSIMETRY

Telemetry Module

For DMC 3000™

For US Market Only



The Telemetry Module is an accessory device for the DMC 3000 that physically integrates into the dosimeter's case.

DESCRIPTION

The Telemetry Module is an accessory device for the DMC 3000 that physically integrates into the dosimeter's case. The purpose of the Telemetry Module is to transmit a worker's radiological data (accumulated dose, dose rate and alarm status) to other WRM2 Telemetry System components (Base Station, Repeater, etc.).

Although the Telemetry Module has been specifically designed as the most advanced addition to our dosimetry family (DMC 3000), it features seamless communication with all existing WRM2 Telemetry receivers.

Additionally, the Telemetry Module provides access to a variety of accessories, including health and supplemental visual alarm indicators for high stress and noisy environments via supplied Bluetooth connectivity.

FEATURES

- ✓ Transmits radiological information, in pre-configured intervals to WRM2 Telemetry receivers
- ✓ Low-power optimized for long life
- ✓ Heart Rate Monitor
- ✓ Vibrating wristband for threshold alarms
- ✓ WRM2 900 MHz
- ✓ Battery Type: AAA (LR03 1.5v)
- ✓ External Power: 1.5V-3.6V through battery adapter
- ✓ Battery Life: >40 hours



OPERATING CHARACTERISTICS

- **Transmit Power Output:** 100 mW (900MHz), 10 mW - 63 mW (2.4Ghz) locally regulated
- **Receiver Sensitivity:** -106 dBm (900 Mhz), -100 dBm (2.4 Ghz)
- **Frequencies:** 900 (902-928) MHz or 2.4 ISM Frequency range
- **Over the air data stream:** 19.2k bps for WRM2 900 MHz or 250 K bps for WRMDM 2.4Ghz
- **Transmission interval:** 4 seconds or user configurable
- **Agency Approvals:** FCC (900MHz) (USA), IC (Canada)
- **Bluetooth V2.0:** 21EDR (SPP, HFP- AG) 63 mW
- **WRM2 Range:** 1.7 mi (900MHz), 1 mi (2.4Ghz)

ELECTRICAL CHARACTERISTICS

- Internal Power:
- AAA Alkaline Battery (LR03)
- External Power:
- 1.5v - 3.6 vDC external power
- 100 - 220 VAC with USA and Euro Adapter

MECHANICAL CHARACTERISTICS

- Height: 4.8" (121 mm)
- Width: 2.3" (58 mm)
- Thickness: 0.98" (25 mm)
- Weight: 54 g without DMC 3000 and 165 g with the DMC 3000 and AAA Battery

PHYSICAL CHARACTERISTICS

- **Case:** Blue ABS plastic
- **LED:** Red, Green, Yellow, Blue, Magenta, Cyan and White LED's
- **Antenna Connectors:** Wired
- **PC Communications:** Micro-USB
- **Controls:** Accelerometer, tap.
- **Ruggedness:** drops on each face from 1.5m
- **Operating Temp:** -10 °C to 50 °C (14 °F to 122 °F)
- **Relative Humidity:** 10-95% Relative Humidity (without condensation)



MIRION
TECHNOLOGIES



MIRION
TECHNOLOGIES

AWM™

Adaptive Wireless Monitor



DESCRIPTION

The Adaptive Wireless Monitor (AWM) is a dynamic new wireless remote monitor system that now represents an ALL-in-ONE solution for nuclear industry remote monitoring.

This compact system can be deployed as a base station, MESH repeater, external transmitter device, active dive repeater, etc.; which minimizes the different types of inventory that must be maintained.

The AWM includes a DB9 RS-232 communication port, USB communication port, Power-over-Ethernet (POE) or Wi-Fi. The AWM uses a colored touchscreen for on-screen defined configurations.

RELATED PRODUCTS

- DMC 3000 eTx™, DMC 3000 NTx™, DMC 3000 LTx™, DMC 3000™ Bluetooth®, TelemetryStudio™, Orion™, Teleview 3000™ Telepole, ABPM 203M™, RDS-32™

FEATURES

- ✓ Adaptable to interface with a wide range of radiation monitors and other measuring devices
- ✓ WRM2, WRM3, Ethernet and Wi-Fi capability
- ✓ Touch-screen user interface allows configuration in the field
- ✓ Power-over-Ethernet
- ✓ > 8 hour battery backup

AWM™ ADAPTIVE WIRELESS MONITOR

MECHANICAL CHARACTERISTICS

- Display: on-screen configuration
- Dimensions: 7.1 x 4.1 x 2.25 in (180 x 104 x 57 mm)
- Weight: 32 oz

OPERATING CHARACTERISTICS

- WRM2, WRM3, Ethernet and Wi-Fi capable
- Power-over-Ethernet
- WRM2 Radio 900 MHz or 2.4 GHz frequency
- Communication ports:
 - 1) DB9 Serial (RS 232)
 - (1) Micro-USB
 - (1) Power-over-Ethernet (POE)

ELECTRICAL CHARACTERISTICS

Power options

- 9V – 24V external power adapter
- Power Over Ethernet (POE) power (48V – 57V), POE 802.3af conformance, 0.5W typical
- USB power
- Internal 6Ah Lithium-Polymer (LiPo) battery pack (> 8h backup life)

ENVIRONMENTAL CHARACTERISTICS

- Rugged aluminum enclosure
- Operating temperature range: -13 °F to +131 °F (-25 °C to +60 °C)
- Storage Temperature range: -40 °F to +158° F (-40 °C to +70 °C)
- Relative humidity: up to 85% at 95 °F (35 °C)



AWM and Mirion Telemetry Network





DOSIMETRY

Neutron Module *Hp*(10)

For the DMC 3000™ Dosimeter



The Neutron Module provides operational dosimetry for Military, First Responders and nuclear workers where there is a Neutron radiation risk.

DESCRIPTION

Powered by the DMC 3000, the add-on module does not require any supplementary battery and remains operational over 2400 hours in continuous use. Calibration and functional parameters are stored in the module.

The add-on Neutron Module for the DMC 3000 dosimeter is able to measure *Hp*(10) at a wide range of energy levels. These measurements are displayed on the high contrast backlit LCD and with the different LEDs.

RELATED PRODUCTS

- Telemetry module, Beta module
- Readers: LDM 2000™, LDM 3200™, LDM 320D/W™, LDM 1000™
- Software: LDMAccess™, DMCUser™, DosiCare™, DosiServ™

FEATURES

- ✓ Dose and dose rate Neutron *Hp*(10) displayed
- ✓ Totalized dose for gamma and neutron with *Hp*(10) displayed
- ✓ High and accurate gamma rejection in Neutron channel (Plug and Play)
- ✓ Connect and ready for use
- ✓ Full Neutron energy range coverage
- ✓ Designed for ruggedness and durability
- ✓ Exceeds applicable IEC and ANSI standards
- ✓ Excellent EMC Immunity



PHYSICAL CHARACTERISTICS

Measurement range Hp(10) (DMC 3000 + module)
Neutron energy range: 0.025 eV to 15 MeV
Dose Range, IEC 61526 Ed. 3 (Display & Measurement)
Hp(10) N
Effective Range of Dose: 2 µSv to 100 Sv (0.2 mrem to 10000 rem) Display Resolution: 0,1 µSv to 10 Sv (0.01 mrem to 1000 rem) up to four decimal places Overload Indication: from 10 Sv to >50 Sv (1000 rem to >5000 rem)
Dose Rate Range, IEC61526 Ed. 3 (Display & Measurement)
Hp(10) N
Effective Range of Dose Rate: 1 µSv/h to 10Sv/h (0.1 mrem/h to 1000 rem/h) Display Resolution: 100 µSv/h to 10 Sv/h (10 mrem/h to 1000 rem/h) up to three decimal places Overload Indication: from 10 Sv/h to >50 Sv/h (1000 rem/h to >5000 rem/h)
Accuracy Hp(10) Neutron
≤ ± 10% (AmBe, 0.75 mSv/h, 75 mrem/h, target 1.3) - Hp(10) Typical Energy response from thermal to fast Neutron (see curve)
Dose Rate Linearity Hp(10)
< ± 20% up to 10 Sv/h, 1000 rem/h

Display Neutron measurement Hp(10)



ELECTRICAL CHARACTERISTICS

- Powered by DMC 3000
 - Ten calendar month battery life for Neutron module and DMC 3000 (typical, 8 h per day, 5 days per week in run mode, without excessive alarms)*
 - 2400 h battery life for DMC 3000 with Neutron module and DMC 3000 in continuous run, without excessive alarms*
- *0.2% of the time in alarm with Duracell industrial battery

MECHANICAL CHARACTERISTICS

- Rugged, high impact polycarbonate-ABS case
- Dimensions with DMC 3000:
131 x 60 x 21 mm (5.1 x 2.4 x 0.8 in) max. without clip
131 x 60 x 28 mm (5.1 x 2.4 x 1.1 in) with standard clip
- Weight with DMC 3000: < 138 g (4.9 oz)
- Replaceable clip (option)

ENVIRONMENTAL CHARACTERISTICS

- Temperature range:** -10 °C to 50 °C (14 °F to 122 °F)
- Storage:** -20 °C to 71 °C (-4 °F to 160 °F)
- Shock, vibration and drop resistant**
- IP67 protection:** 1 m (39 in) during one hour
- EMC:** complies and exceeds standards
(C € compliant certificate number: DOC003215)
- MIL STD 461-RS103 (pulsed electric field):
exceeds 200 V/m from 10 kHz to 5 GHz
- MIL STD 461-RS101 (magnetic field 30 Hz to 100 kHz)

PRODUCT CHARACTERISTICS

HISTOGRAM FEATURES

- Additional Hp(10) Neutron measurement (dose, dose rate and maximum dose rate) saved on non volatile memory (EEPROM) simultaneously with Hp(10) Gamma measurement in configurable steps (10 s, 60 s, 10 min, 1 hour, 24 hours)

DISPLAY FEATURES

- Additional Hp(10) Neutron measurement displayed on DMC 3000 high quality white backlighting LCD
- Blue LED indication for Neutron dose increment

ALARM FEATURES AND COMMUNICATION


- DMC 3000 alarm speaker, vibrator, high efficiency red flash LED, three top LEDs and display indicators
- Hp(10) Neutron dose/rate alarms, adjustable over the display range
- Hp(10) Neutron dose/rate warnings, adjustable over the display range and acknowledgeable

CALIBRATION

- Factory calibration in accordance with ISO/IEC 17025
- Parameters saved into the module

COMPATIBILITY

- With all DMC 3000 (firmware upgrade needed if firmware lower than V7.x)

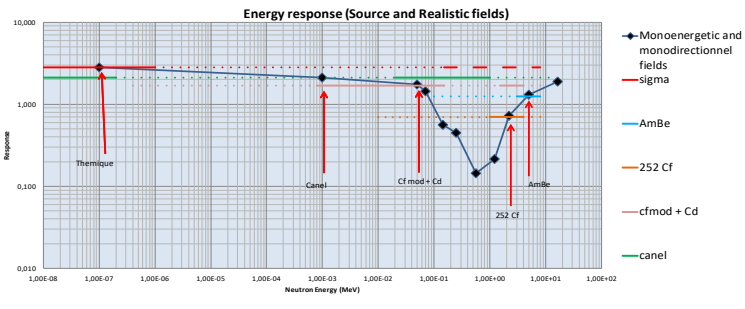



MIRION
TECHNOLOGIES

DOSIMETRY

Beta Module *Hp*(0.07)

For the DMC 3000 dosimeter™



The Beta Module provides operational dosimetry for hospital personnel, first responders, and nuclear workers where there is a Beta radiation risk.

DESCRIPTION

The additional Beta Module connected to the DMC 3000 dosimeter is able to measure the shallow dose equivalent (SDE) radiation at a wide range of energy levels.

The high contrast backlit LCD provides a clear indication for the display of *Hp*(0.07) measurements and alarms.

Powered by the DMC 3000, the add-on module does not require any supplementary battery and remains operational over 2000 hours in continuous use. Calibration and functional parameters are stored in the module.

FEATURES

- ✓ Dose and dose rate *Hp*(0.07) displayed
- ✓ Connect and ready for use
- ✓ High efficiency beta measurement
- ✓ Superior energy response
- ✓ Meets or exceeds applicable IEC and ANSI standards
- ✓ Excellent EMC immunity
- ✓ Designed for ruggedness and durability

RELATED PRODUCTS

- Telemetry module, Neutron module
- Readers: LDM 2000™, LDM 3200™, LDM 320D/W™, LDM 1000™
- Software: LDMAccess™, DMCUser™, DosiCare™ and DosiServ™



PHYSICAL CHARACTERISTICS

<i>Hp</i> (0.07) Measurement range (DMC 3000 + module)
• Beta $E_{\text{mean}} > 60$ keV (Emax: 0.22 MeV to 2.3 MeV)
Dose Range, IEC 61526 Ed. 3 (Display & Measurement)
<i>Hp</i> (0.07) β
- Effective range of dose: 0.02 μSv to 100 Sv (0.002 mrem to 10000 rem) - Display resolution: 0.1 μSv to 10 Sv (0.01 mrem to 1000 rem) up to four decimal places - Overload indication: from 10 Sv to >100 Sv (1000 rem to >10000 rem)
Dose Rate Range IEC61526 Ed. 3 (Display & Measurement)
<i>Hp</i> (0.07) β
- Effective range of dose rate: 0.05 $\mu\text{Sv/h}$ to 20 Sv/h (0.005 mrem/h to 2000 rem/h) - Display resolution: 1 $\mu\text{Sv/h}$ to 10.0 Sv/h (0.1 mrem/h to 1000 rem/h) up to three decimal places - Overload indication: from 10 Sv/h to >50 Sv/h (1000 rem/h to >5000 rem/h)
Accuracy <i>Hp</i> (0.07) Beta
- Relative <i>Hp</i>(0.07) Beta response of Pm-147, Kr-85 and Sr-90/Y-90 within $\pm 20\%$ (*) (*) in reference to the typical curve (Beta energy response)
<i>Hp</i> (0.07) Dose Rate Linearity
• $< \pm 20\%$ up to 10 Sv/h, (1000 rem/h)

Display of *Hp*(0.07) measurement



ELECTRICAL CHARACTERISTICS

- Powered by DMC 3000
 - 9 calendar months battery life for beta module and the DMC 3000 (typical, 8 h per day, 5 days per week in run mode, without excessive alarms*)
 - 2000 h battery life for DMC 3000 with beta module and DMC 3000 in continuous run, without excessive alarms*
- *0.2% of the time in alarm with Duracell™ industrial battery



MECHANICAL CHARACTERISTICS

- Rugged, high impact polycarbonate-ABS case
- Dimensions with DMC 3000:
 - 122 x 60 x 21 mm (4.8 x 2.4 x 0.8 in) max. without clip
 - 122 x 60 x 28 mm (4.8 x 2.4 x 1.1 in) with standard clip
- Weight with DMC 3000 < 112 g (3.9 oz) clip included
- Replaceable standard clip

ENVIRONMENTAL CHARACTERISTICS

- Temperature range: -10°C to 50°C (14°F to 122°F)
- Storage: -20°C to 71°C (-4°F to 160°F)
- Shock, vibration and drop resistant
- IP50 protection
- EMC: complies and exceeds standards
(C ϵ compliant certificate number: DOC003214)
 - MIL STD 461-RS103 (pulsed electric field): exceeds 200 V/m from 10 kHz to 5 GHz
 - MIL STD 461-RS101 (magnetic field 30 Hz to 100 kHz)

PRODUCT CHARACTERISTICS

HISTOGRAM FEATURES

- Additional *Hp*(0.07) measurement (dose, dose rate and maximum dose rate) saved on non volatile memory (EEPROM) simultaneously with *Hp*(10) measurement in configurable steps (10 s, 60 s, 10 min, 1 hour, 24 hours)

DISPLAY FEATURES

- Additional *Hp*(0.07) measurement displayed on DMC 3000 high quality backlighting LCD
- Blue LED indication for *Hp*(0.07) for dose increment

ALARM FEATURES AND COMMUNICATION


- DMC 3000 alarming speaker, vibrator, high efficiency red flash LED, 3 top LEDs and display indicator
- Hp*(0.07) dose/rate alarms, adjustable over the display range
- Hp*(0.07) dose/rate warnings, adjustable over the display range and acknowledgeable

CALIBRATION

- Factory calibration in accordance with ISO/IEC 17025
- Parameters saved into the module

COMPATIBILITY

- With all DMC 3000 (firmware upgraded if lower than V7.x)

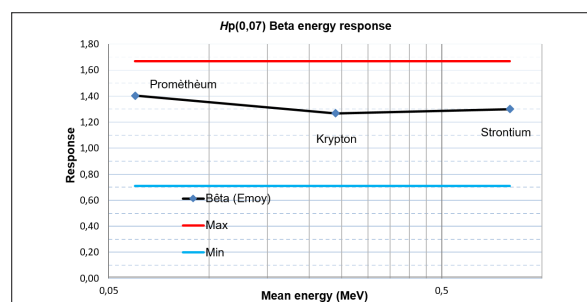



DOSIMETRY

LDM 3200™

RCA Entry/Exit Reader



A reader for nuclear industrial purposes

DESCRIPTION

The LDM 3200 unit is a reader dedicated for use by workers, to manage access for entrance/exit radiological controlled areas.

At the entrance of the controlled area, the LDM 3200 reader allows the user to fill in the data required by the dosimetry system and to activate the dosimeter. At the exit of the controlled area, the reader acquires the dosimeter data and transfers it automatically to the dosimetry system.

The reader is compatible with all Mirion Technologies dosimetry systems and can be used in addition to LDM 2000 readers.

The LDM 3200 reader is equipped with a multilingual touchscreen and can get adapted to site-specific badge readers.

RELATED PRODUCTS

- LDMAccess™ software
- DMC 2000GN™, DMC 3000™ and modules
- DosiCare™ and DosiServ™ software
- LDM 1000™ reader
- Compatibility with CARD™ software

FEATURES

- ✓ Flat and rugged device
- ✓ 10.1" touchscreen
- ✓ Dosimeter sleeve
- ✓ Rugged keypad
- ✓ Configurable languages (with integrated software)
- ✓ Connection to the dosimetry system via Ethernet
- ✓ Downloadable configuration
- ✓ Offline standalone mode with local data backup
- ✓ Digital I/O allowing the control of access control devices (turnstiles/body monitor)
- ✓ Barcode reader

LDM 3200™ RCA ENTRY / EXIT READER

FUNCTIONS

- Compatible with LDM 2000™ unit: possible replacement or use within an existing base of LDM 2000 reader
- DosiServ and DosiCare software compatible for access control mode
- Displayed worker data inputs (identification/RWP/task code)
- Parameters (reader mode) are automatically loaded at connection time by dosimetry system
- Local database to store transactions made in offline mode
- Automatically restores local data when the network is available
- Dynamic language choice by each worker (six standard languages with possible customization)

MATERIAL CHARACTERISTICS

OVERALL

- Dimensions: 525 x 405 x 165 mm (20.7 x 16 x 6.5 in)
- Weight: < 13.5 kg (29.8 lb)
- Painted steel base
- IP30
- Rugged numeric metal keypad
- Dosimeter sleeve compatible with DMC 2000 and DMC 3000 (and associated modules)
- Hinged opening for an easy maintenance
- Lockable housing

PC-BASED SYSTEM

- OS: Windows 10
- 10.1" touchscreen type TFT

ELECTRICAL CHARACTERISTICS

- 100-230 V AC (50-60 Hz)
or 10-36 V DC (optional)

TEMPERATURE RANGE

- 0 °C to 40 °C (32 °F to 104 °F)

INTERFACE

- Two extra USB ports for maintenance
- 10/100 BaseT network – RJ45
- RS232 port for body monitor communication (area exit)
- Four digital inputs and outputs for external devices (turnstiles/body monitor)
- Four wiring cable glands

OPTIONS

- Badge reader (customer specific)
- Barcode reader
- NFC Reader for MirionWatch™ device
- Inclined wall mount
- Integrated backup power supply (20 minutes) with automatic reader shutdown

ASSOCIATED SOFTWARE

LDM 3200 can be delivered with pre-installed software: LDMAccess or previous version LDM 3000 software



MIRION
TECHNOLOGIES

Copyright © 2023 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



MIRION
TECHNOLOGIES

LDM 1000™

Enter or Exit Radiological Controlled Area reader



DESCRIPTION

The LDM 1000 is a reader dedicated to the control access of radiological areas.

At the entrance of the controlled area, the LDM 1000 allows the user to fill in the data required by the dosimetry system and to activate the dosimeter. At the exit of the controlled area, the reader acquires dosimeter data and transfers it automatically to the dosimetry system.

It is compatible with Mirion technologies dosimetry systems et can be used in addition to LDM 3200™ and LDM 2000™.

The LDM 1000 is equipped with a multilingual touchscreen and can get connected to site specific badge readers.

LDM 1000 is available in two versions that cover all the needs for entrance or exit gates:

- LDM 1000i: this space-saving version is dedicated for portal integration at exit gates
- LDM 1000c: this version with a reinforced support can be installed on a wall, without integration.

RELATED PRODUCTS

- LDMAccess™ software
- DMC 2000™, DMC 3000™ and modules
- DosiCare™ and DosiServ™ software
- LDM 3200™, LDM 2000™ reader

FEATURES

- ✓ Basic and accessible device with 7" touchscreen
- ✓ Dosimeter sleeve
- ✓ Compatible with all Mirion dosimeters
- ✓ Configurable languages (with integrated software)
- ✓ Connection to the dosimetry system via Ethernet
- ✓ Downloadable configuration
- ✓ Offline standalone mode with local data backup
- ✓ Can be directly paired with turnstiles or body monitor devices



FUNCTIONS

- Possible replacement of a LDM 2000 by a LDM 1000 or use within an existing mix-population of MIRION readers
- DosiServ and DosiCare software compatible for access control mode
- Displayed worker data inputs (identification / RWP / task code)
- Parameters (reader mode) are automatically loaded at the connection time by the dosimetry system
- Local database to store transactions made in offline mode
- Automatically restores local data when the network is available
- Dynamic language choice by each worker (6 standard languages with possible customization) (include software options)

MECHANICAL CHARACTERISTICS

LDM 1000i

- Dimensions:
 - Height: 315 mm
 - Width: 216 mm
 - Depth: 104 mm (integrated part included: 44 mm)
- Weight: 2.1 kg
- Compatible with DMC 2000, DMC 3000, modules et SOR™

LDM 1000c

- Dimensions:
 - Height: 315 mm
 - Width: 216 mm
 - Depth: 122 mm (with fixing hooks)
- Weight: 4.2 kg
- Mounting holes : M8
- Compatible with DMC 2000, DMC 3000, modules et SOR™

ELECTRICAL CHARACTERISTICS

- Power supply 110 – 230V AC
- Input voltage range: from 85V to 264V AC
- Input voltage frequency: 50 or 60 Hz
- Power consumption @ 115 VAC: 16W typ.
- Power consumption @ 230 VAC: 17W typ.
- Minimum recommended wire section: 0.75 mm²
- Voltage regulator: 2A

ENVIRONMENTAL CHARACTERISTICS

- Operating temperature range: from 0 °C to +40 °C
- Storage temperature range: from -10 °C to +55 °C
- Humidity range: 30% to 90%, non-condensing
- IP certifications:
 - LDM 1000i: IP40 (front face only)
 - LDM 1000c: IP30
- EMC: exceeds IEC 61000-6.2 and ETSI EN301 489–1 requirements

OPTION

- Software LDMAccess



LDM 1000i



LDM 1000c



MIRION
TECHNOLOGIES



LDM 320 D™

LDM 320 W™

Hands-Free Dosimeter Readers



DESCRIPTION

The LDM 320D and LDM 320W readers operate using software packages installed on computer (PC) and communicate with DMC 3000, DMC 2000 and SOR families in dosimeters-free data exchange mode.

When used with the DosiCare, DosiFFR, or compatible access control software, the LDM 320 reader is used as an interface to turn on (switching into counting mode) or to switch off the dosimeter (pause mode).

When used with the DMC User software, it operates as an interface to read and write the internal data of the DMC 3000, SOR and DMC 2000 dosimeters.

FEATURES

The LDM 320D and LDM 320W are compact and low-cost dosimeter readers.

- ✓ Hertzian communication with dosimeters
- ✓ No directional alignment required
- ✓ 3 Indicator LEDs for operation and access control
- ✓ Manageable digital inputs/outputs
- ✓ DSP based digital process
- ✓ Compatible with the DMC 2000 and SOR families as well as the DMC 3000 dosimeter
- ✓ Compatible with software packages: DosiCare, DosiFFR, DMCUser and LDMAccess
- ✓ Wall-mounted (W) or desk versions (D)



DESCRIPTION

- Two-color electroluminescent diode used as ON/OFF and data exchange indication
- Two-color electroluminescent diode used as READY/BUSY indication
- Two-color electroluminescent diode used as ACCESS/NO ACCESS indication
- 1 female connector, 2 x 13-pins, 1.27 mm pitch, for accessory options (four digital inputs, four digital outputs, power supply)
- Upgradeable Firmware
- Multi antennas (x3) for better (adaptative) communication with dosimeters

ELECTRICAL CHARACTERISTICS

- Self powered through USB port
- EMC: complies with and exceeds standards
- CE compliant (CE certificate: 151508)

MECHANICAL CHARACTERISTICS

LDM 320 D		
Length	109 mm	(4.3 in)
Width	100 mm	(3.9 in)
Depth	29 mm	(1.1 in)
Weight	150 g	(5.3 oz)

LDM 320 W		
Length	157 mm	(6.2 in)
Width	99 mm	(3.9 in)
Depth	75 mm	(2.9 in)
Weight	400 g	(14.1 oz)


ENVIRONMENTAL CHARACTERISTICS

- Operating temperature: 0 °C to +50 °C (32 °F to 122 °F)
- Storage temperature: -10 °C to +60 °C (+14 °F to 140 °F)
- Humidity: 90% HR (without condensation)
- IP LDM 320D: IP52
- IP LDM 320W: IP30

COMMUNICATION WITH DOSIMETERS

- Short range low frequency bidirectionnal data exchange at 125 kHz
- Nominal range: LDM 320D
 - DMC 2000/SOR: 25 cm* (9.8 in) maximum
 - DMC 3000: 5 cm (1.9 in) maximum

The low range configuration reduces the range of communication of about 5 cm (1.9 in).

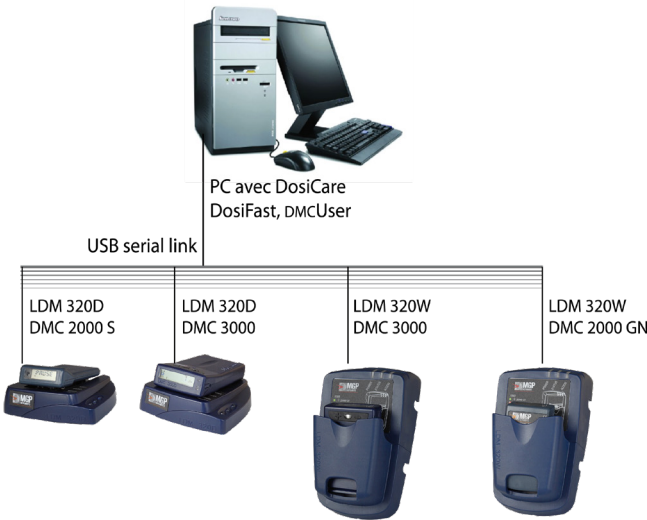

MIRION
TECHNOLOGIES

Copyright © 2024 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



DOSIMETRY

DMCUser™

Electronic Dosimeters Management and Maintenance Software



DESCRIPTION

DMCUser is the companion software to support operational electronic dosimetry management and maintenance in commercial nuclear, defense, homeland security and medical applications. It allows full customization, configuration, maintenance and diagnostic of any dosimeters belonging to the DMC/SOR product line.

DMCUser software is compatible with a wide range of Mirion products as an integrated platform.

RELATED PRODUCTS

- DMC 2000GN™, DMC 3000™ and modules, SOR™ dosimeters
- LDM 320D™ and LDM 320W™ readers
- DosiServ™, DosiCare™ and DosiFFR™ software
- IRD 2000™ Irradiator

FEATURES

- ✓ Dosimeter data management
- ✓ Dosimeter customization (including display) and configuration management
- ✓ Single dosimeter or batch configuration
- ✓ Access to historically recorded data for in-depth incident analysis
- ✓ Graphical interface
- ✓ Test of dosimeters alarming features (audio/visual/vibration) prior to activation
- ✓ Data and histories protected backup



FUNCTIONAL CHARACTERISTICS

READING AND DISPLAY OF DOSIMETER'S DATA

(MEASUREMENTS)

- Clear and indication diagnostic of defaults
- Automatic detection of external modules (beta, neutron, telemetry)

READING AND DISPLAY OF DOSIMETER'S PARAMETERS

- User data displayed (configuration via access control)
- Customization of user interface including:
 - units (mrem, mSv, μ Sv)
 - displayed data
 - selected language (English or French)
- Ability to access and configure alarm thresholds
- Ability to access and configure dosimeter status
- Ability to access and configure selective calibration settings (gamma and connected modules)

MANAGEMENT OF DOSIMETERS IN BATCH


- Export data parameters to external files
- Personal parameter can be apply to single dosimeters or in batch

HISTORICAL DATA MANAGMENT

- Ability to retrieve last historical data recorded or all data recorded into a dosimeter
- Graphical visualisation of dosimeter measurements and alarms
- Histories backup
- Histories can be printed and exported into excel format

EQUIPMENT CONFIGURATION


- Standard PC Windows® 7, 8, 10, USB port to connect the reader (automatic recognition)
- Demo version available on www.mirion.com
- Registered license includes:
 - all fonctions
 - new released software upgrade (no extra cost)

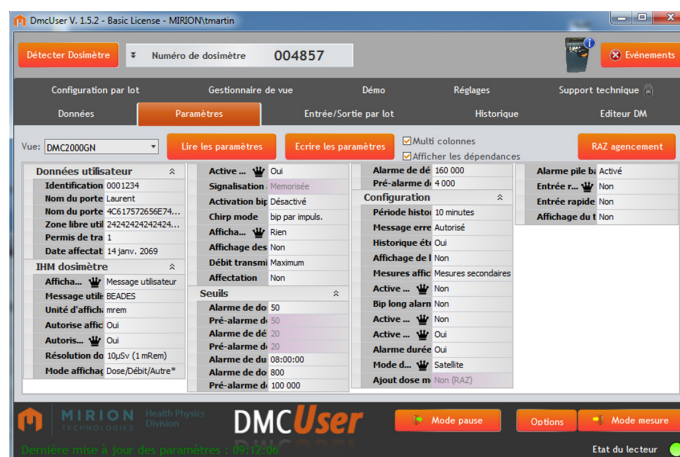

Dosimeters setup



Dose measurement historical

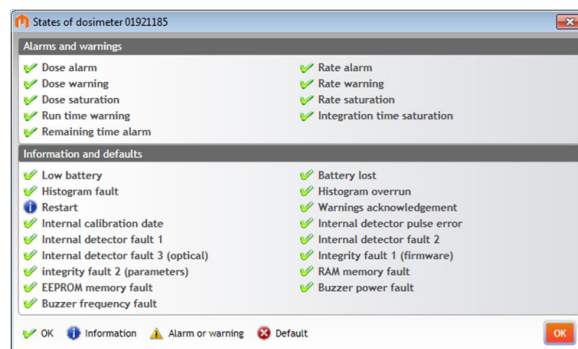


Dosimeter status



MIRION
TECHNOLOGIES

DosiServ™

Health Physics Dose Management Software

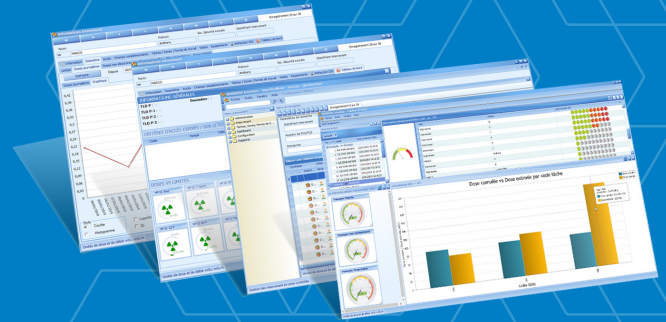

DESCRIPTION


The DosiServ dosimetry system is an integrated state-of-the-art dose management system.

It is intended to:

- Handle electronic dose data for workers (individual), Jobs (RWP Radiological Work Permit) in various controlled areas
- Offer access control capabilities through dosimeters readers.

RELATED PRODUCTS

- LDM 1000™: industrial dosimeter reader
- LDM 3200™: PC based dosimeter reader
- LDM 320™: reader heads
- DBR™: reader for DIS dosimeters
- LDM Access™: control access software
- DosiFFR™: First Fast Responder software
- DosiCal™: IRD 2000 Calibrator Management Software
- DMC 2000™, DMC 3000™: modules

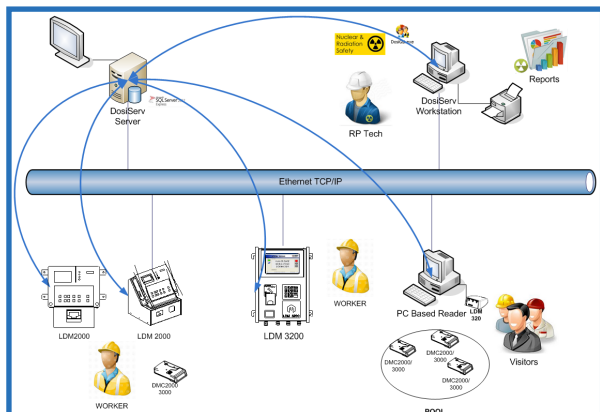

FEATURES

- ✓ Real-time access control capabilities:
 - Medical/training due dates checking when connecting an electronic dosimeter
 - Control of the worker's accumulated doses versus configurable dose limits
 - Check of any other worker qualification mandatory by Radiation Protection procedure
- ✓ Electronic dosimeter configuration and reading in real time
- ✓ Storage of worker's official dose data (built-in reports are available)
- ✓ A true ALARA approach through collective dosimetry features
- ✓ Connection to body monitors to record contamination events at exit time
- ✓ Compatible with the major IT platforms



FUNCTIONAL CHARACTERISTICS

NETWORK BASED SYSTEM

Readers and client stations connect to the dosimetry server via TCP/IP (Web access capability for client stations).

OFFLINE MODE

If the network becomes unavailable readers will locally store data and update automatically once the connection is restored.

REAL-TIME ACCESS CONTROL


When connecting the dosimeter the system will check:

- Worker identification
- RWP, task authorization
- Area authorization
- Worker qualifications (medical, training, etc.)
- TLD dosimeter (barcode) can be verified

Once access granted the system will program the appropriate dosimeter alarm set points

DATA STORAGE

At exit time the system records transaction's details and workers data are updated

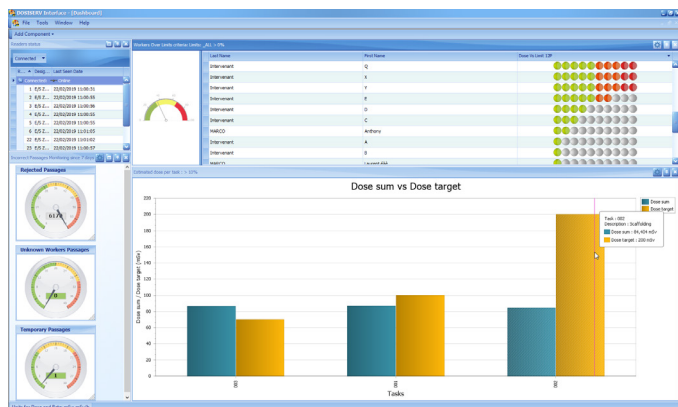

SUPERVISION

- The system is delivered with various dose reports (customer training is available to create custom report)
- Dashboard application offering a powerful and customizable overview of the dosimetry system in real time

INTERFACING

- The system is delivered with Web services in order to facilitate exchange with external systems (i.e human resources/security system)

- Connection with system dedicated to First Fast Responders (DosiFFR Software)
- Collection of dose information from DIS dosimeters (DBR reader needed)

MULTILINGUAL

- PC based reader provides up to 6 configurable languages
- Client station is delivered in French, English and Chinese, other languages can be added anytime

SECURITY

- Access to the system is password protected (MS Windows active directory support)
- Any important data modification is stored into a LogBook
- Data access can be filtered per user profile
- Encrypted Client/Server communication
- Extended Reader Features (LDM 3000/LDM Access)
- Ability to configure history data collection and store it in the DosiServ database
- Ability to configure Smart Offline Mode (Standalone Extended Access Control)
- Ability to configure the list of task/RWP codes in entry area

MANAGEMENT OF THE DOSIMETER FLEET

- Import dosimeter data and calibration dates with DosiCal software
- Import dosimeters batches and their calibration date via a LDM 320 reader
- Ability to activate dosimeter control and their calibration dates in an entry area

HARDWARE SETUP

- **Client workstation (minimum requirements)**
 - Operating system Windows Seven
 - Memory 2 GB
 - Drive 256 GB
- **Server (minimum requirements)**
 - Operating system Windows Server 2003
 - Memory 8 GB
 - Drive 1 To
- **Platforms**
 - Windows 7, 8 & 10 (32 & 64 bits)
 - Windows Server 2008, 2012 & 2016
 - Citrix : XenApp 6.5 & 7.5
- **Supported databases**
 - Oracle 11g, 12c, 18, 19c
 - SQL Server -SQL express 2008 to 2019




MIRION
TECHNOLOGIES



DosiServ™ Lite

**Electronic Dosimetry Management Software for
Healthcare Facilities and Research Institutions**

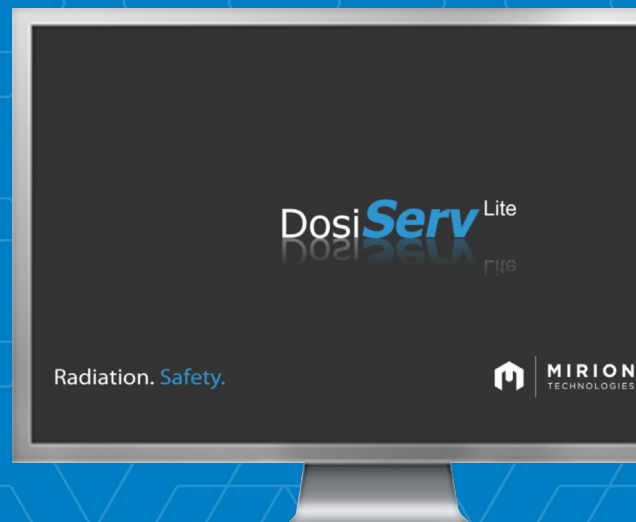

DosiServ Lite software provides secure, real-time access to dose data via electronic dosimeters, ensuring compliance with safety thresholds and protecting workers from excessive radiation exposure. Designed for small nuclear and radiological facilities, including medical units and hospitals, it features automatic alarms, customizable alert settings and comprehensive data management tools – empowering teams to maintain safety standards and meet regulatory requirements with confidence.

In compliance with new regulations, DosiServ Lite collects and stores individual dosimetric data, and offers a secure Web interface for visualization of individual dosimetric summaries.

The solution offers historical data import capabilities via Excel/CSV files.

A user-friendly, intuitive interface enables easy follow-up of agent dosimetric activity with real-time control of credentials, and implementation of automated alerts in case legal dose limits are exceeded. The software also supports follow-up of cumulated doses and assignments/return activities.

DosiServ Lite enables upgrading to the entire DosiServ software family.

FEATURES

- ✓ User-friendly, intuitive interface
- ✓ Regulatory compliance
- ✓ Easy installation and setup
- ✓ Windows compatible; standard laptop or desktop PC platform
- ✓ Remote Dosimeter issuing points (up to five)
- ✓ ALARA approach (As Low As Reasonably Achievable) through collective dosimetry features
- ✓ Real-time configuration and reading of electronic dosimeters
- ✓ Real-time access control of accumulated doses against configurable dose limits
- ✓ Storage of official worker dose data with integrated reports available
- ✓ Compatibility with major IT systems

PROTECT WORKERS, ENSURE COMPLIANCE: REAL-TIME RADIATION SAFETY MONITORING

Safe, Secure and Compliant: In environments where monitoring individuals exposure to radiation is critical, DosiServ Lite provides secure, real-time access to personal dosimetry data, alerts and continuous oversight to ensure compliance with safety thresholds:

- Check the radiation dose summary of a worker and receive other relevant health data via email.
- Automatic alarm setpoints connected to a dosimeter are activated when a worker is exposed to too much radiation. These alarms can be customized based on the worker's job role or the specific task they are performing.
- Manage and configure a network of access point readers, ensuring seamless dosimeter integration.
- Get real-time verification of worker's health credentials, such as medical exam due dates and training. The system also tracks the worker's remaining dose credits to ensure they stay within safe radiation exposure limits.

Cumulative Totals Follow Up: Manage dose records across flexible timeframes - including 1 month, 3 months, 1 year (calendar or sliding), and up to 5 years.

Pool or Assigned Dosimeters: Supports both pool and assigned dosimeters, offering flexibility in distribution and management.

Logged On Agent Follow Up: When a worker logs into the system, their dosimeter data is tracked and monitored in real-time, providing timely alerts and updates.

Data Management: DosiServ Lite's robust data management provides comprehensive daily dose history reports and summaries for individuals and groups, including collective dosimetry for all individuals with the same work code. It easily extracts data from Excel or CSV files for integration with other systems, and utilizes a Local Dose Management (LDM) system to manage and monitor radiation dose data.

Workers Dose Report

Worker ID: 25345
Last Name: Jackson
First Name: David Wayne
Dose Type: HP100 HP100 HP100

	3/10/2020	3/10/2020	3/10/2020	3/10/2020	3/10/2020	3/10/2020	3/10/2020	3/10/2020	3/10/2020
HP100	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
HP100	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
HP100	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
Max HP100	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
Total HP100	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
Max HP100	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
Total HP100	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
Max HP100	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
Total HP100	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0

Worker Information

Search Parameters: ID Number, Last Name, First Name, Dosimeter No., Company, Section, Clear, Search, Showing personal items

Summary: General worker information, Additional worker information, Access and audit in service, Consolidated dose across device

ID Number	Last Name	First Name	Dosimeter No.	Company	Section	Access and audit in service	Consolidated dose across device
25345	Jackson	David Wayne	HP100 HP100 HP100	My Company	My Company	No Zone Interlocks	No Zone Interlocks
25346	Jackson	David Wayne	HP100 HP100 HP100	My Company	My Company	No Zone Interlocks	No Zone Interlocks
25347	Jackson	David Wayne	HP100 HP100 HP100	My Company	My Company	No Zone Interlocks	No Zone Interlocks
25348	Jackson	David Wayne	HP100 HP100 HP100	My Company	My Company	No Zone Interlocks	No Zone Interlocks

Worker Profile

Information, Summary, Access, Manage

Worker Information: Title, Last Name, First Name, SSN, Social Security Number, Address, City, State, Country, Phone No., Email

Dosimeter Information: Dosimeter No., Dosimeter Type, Dosimeter Status, Dosimeter Location, Dosimeter History

Other worker information: Health physics category, Company, Section, Employment type

SYSTEM CONFIGURATION

- Operating system to Windows® 11, on PC and Windows® 2022 Server
- Possible virtualization
- Microsoft SQL Server Express® integrated database
- Possible extensions for:
 - Additional admin stations
 - Additional readers/issuing point

RELATED PRODUCTS

- Readers: LDM 320™, LDM 1000™, LDM 3200™
- Dosimeters: DMC 2000S, DMC 2000X, DMC 2000 XB, DMC 2000GN™ and DMC 3000™, DMC 3000 neutron, DMC 3000 Beta, DMC 3000 BLE, DMC 3000 Beta BLE, DMC 3000Tx, DMC 3000 eTx, DMC 3000 NTx, DMC 3000 LTx
- LDM Access & DosiServ

CHARACTERISTICS

- Secure online access to agent dosimetric summary
- Automatic loading of dosimeter alarm setpoints upon activation
- Customization of the dose and dose rate alarms, according to the position occupied or task code used
- Real-time verification of worker's credentials (medical exam due date, training due date) and remaining dose credits
- Pool electronic dosimeters usage
- Schedule board for:
 - Automatic alert for any deactivation in the presence of a dose or dose rate alarm or pre-alarm
 - Automatic alert when a worker comes close to dose limits (configurable)
- Reader connection monitoring
- Individual dosimetry management with flexible cumulative total tracking for 1 month, 3 months, 1 year (calendar or sliding), 5 years
- Daily dose history
- Summaries: Individuals, groups of individuals, over a selectable period
- Collective dosimetry summary per work code
- Data extraction capability from an Excel file or CSV



Copyright © 2025 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



MIRION
TECHNOLOGIES



Portable Radiation Measurement



MIRION
TECHNOLOGIES

RDS-32™

Radiation Survey Meters

The RDS-32 Survey Meters are small handheld, battery operated radiation survey instruments. Due to its versatile functions and durability it is suited for a wide range of applications in civil defense, industrial use, nuclear power plants, laboratories, etc.

The meter features excellent ergonomics; lightweight and easy handling, with visual, audible, and vibration functions. Each meter includes an additional battery cover with belt clip to make it wearable, freeing the user's hands to focus on their primary job.

With both Warning and Alarm levels users can know when they are approaching their limit without constantly monitoring their device and can act accordingly.

To extend the capabilities of the instrument, a wide variety of external Smart probes are available to meet user needs with any RDS-32 version. GMP-12/GMP-25 probes, and the full CSP™ probe range can be connected to all RDS-32 versions with an adequate cable. The selection includes probes for gamma and neutron dose rate and alpha and/or beta contamination with various detection areas and scaler counting.




FEATURES

- ✓ H*(10) dose equivalent rate according to latest standards
- ✓ External alpha, beta, gamma and neutron probes for direct connection
- ✓ RDS-32WR meter for wider dose rate range
- ✓ iTx versions for wireless monitoring
- ✓ 4-way navigation keys, practical shortcuts
- ✓ Intuitive user interface
- ✓ Large graphic screen, configurable backlight
- ✓ Automatic display rotation with tilt sensor
- ✓ High impact durable case construction, IP67 immersion proof
- ✓ Internal memory allows versatile histogram functions and the ability to manually store measurements
- ✓ Configuration and firmware upgrade done through the CSW-32™ Software with a USB cable-link
- ✓ Complies with IEC 60846 standards, designed to meet ANSI 42.17A, 42.17C standards

RDS-32 RADIATION SURVEY METERS

RDS-32 VERSIONS

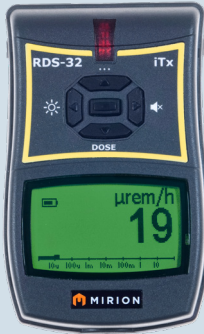STANDARD RANGE		WIDE RANGE	
			
RDS-32	RDS-32iTx	RDS-32WR	RDS-32iTxWR
✓ GM tube ✓ Dose rate up to 100 mSv/h (10 rem/h) ✓ iTx version with internal radio		✓ GM tube + Si diode ✓ Dose rate up to 10 Sv/h (1000 rem/h) ✓ iTx version with internal radio	

PROBE SELECTION

- Wide selection of dose rate and contamination probes
- Quick to connect
- Compatible with full range of CSP probes
- Compatible with GMP-series GMP-25, GMP-25i, GMP-12SD/ GSD/UW probes
- Dual display to show both external and internal detector readings simultaneously




RDS-32 RADIATION SURVEY METERS

ACCESSORIES

- CSW-32 Configuration Software with USB cable-link
- Telescopic pole
- Power Cradle to allow AC power option and provide multiple mounting options
- RDS-32 Holder that is fixed on CSP probe body with dedicated bracket to form a one hand operating system
- Alarm box for stationary monitoring
- Wireless telemetry capability for iTx versions

CSW-32™
Configuration Software
with USB Cable-Link

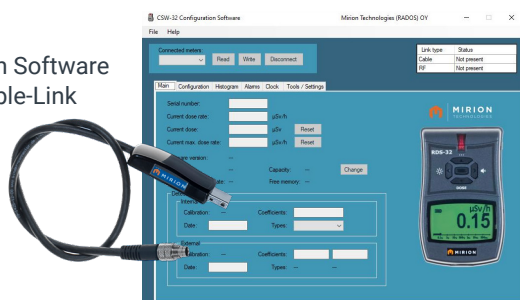

RDS-32 + SAB-100™
Alpha/Beta Probe



RDS-32 + Tele-STTC™2
Wide Range Telescopic Probe



* Change from GM tube to Si diode at 30 mSv/h in increasing field and back from Si diode to GM tube at 10 mSv/h in decreasing field

RADIOLOGICAL CHARACTERISTICS

- Radiation detected gamma and X-rays. Alpha, beta, and neutron radiation with external probes
- Operational quantity: ambient dose equivalent H*(10)

DETECTOR	
RDS-32 RDS-32iTx	one energy-compensated GM tube
RDS-32WR RDS-32iTxWR	energy-compensated GM tube and energy-compensated Si diode*
IEC ENERGY RANGE	
RDS-32 RDS-32iTx	48 keV to 1.8 MeV
RDS-32WR RDS-32iTxWR	55 keV GM tube / 65 keV* Si diode to 1.8 MeV
HIGH ENERGY RESPONSE TO Cs-137	
4.4 MeV	GM tube 220% Si diode 120%
6.7 MeV	GM tube 260% Si diode 200%
DOSE RATE MEASUREMENT RANGE	
RDS-32 RDS-32iTx	0.05 µSv/h to 100 mSv/h (5 µrem/h to 10 rem/h)
RDS-32WR RDS-32iTxWR	0.05 µSv/h to 10 Sv/h (5 µrem/h to 1000 rem/h)
IEC DOSE RATE MEASUREMENT RANGE	
RDS-32 RDS-32iTx	0.3 µSv/h to 100 mSv/h (0.03 mrem/h to 10 rem/h)
RDS-32WR RDS-32iTxWR	0.3 µSv/h to 10 Sv/h (0.03 mrem/h to 1000 rem/h)
DOSE MEASUREMENT RANGE	
RDS-32 RDS-32iTx	0.1 µSv to 10 Sv (0.01 mrem to 1000 rem)
RDS-32WR RDS-32iTxWR	0.1 µSv to 10 Sv (0.01 mrem to 1000 rem)
DOSE RATE LINEARITY	
RDS-32 RDS-32iTx	-15% to +22% 0.3 µSv/h to 0.1 Sv/h (0.03 mrem/h to 10 rem/h)
RDS-32WR RDS-32iTxWR	-15% to +22% 0.3 µSv/h to 10 Sv/h (0.03 mrem/h to 1000 rem/h)

RDS-32 RADIATION SURVEY METERS

FUNCTIONAL CHARACTERISTICS

- Four navigation keys and a select key to operate the instrument
- Three keypad direct functions: Backlight, Mute and Dose and one user-defined shortcut
- Direct access to dose/time to dose screen from keypad: level of dose in percentage of alarm level and time before reaching it
- Configurable units: Sv(/h), rem(/h), with external detectors cps, cpm, dpm, Bq and Bq/cm²
- Audible, visual and vibration alarm with configurable levels
- Versatile histogram functions: internal and external dose rate, dose, diagnostic logging depending on configuration, time stamp, optional location control for mapping and repeating area control analysis
- Histogram data stored in XML format; allowing additional histogram analyzing capabilities when downloaded from CSW-32 software to a spreadsheet
- Real-Time Clock (RTC) function with 3 hrs battery back up
- Graphical LCD display; special symbols for alarm, external probe, battery, communication, vibration alarm, chirp and mute
- Automatic display rotation via tilt sensor (behavior setup through CSW-32 software)
- Dual display in probe mode; measurements from internal and external detector simultaneously:

Display with Gamma Probe



Display with Alpha/Beta Probe



- Scaler/time with gross or net measurement (background deduction) for improved statistics:



MECHANICAL CHARACTERISTICS

- Case: high impact durable glass fiber reinforced polymer; drop tested from 1 m height on concrete floor on each side
- Ergonomic design, rubber grip around the case
- Binder-702 series connector
- Enclosure class IP67 (IEC 60529), including battery compartment
- Dimensions: 116 x 72 x 32 mm (4.57 x 2.83 x 1.26 in)
- Weight without batteries/with batteries:
 - RDS-32: 160 g / 210 g (0.35 lb / 0.46 lb)
 - RDS-32iTx: 170 g / 220 g (0.37 lb / 0.49 lb)
 - RDS-32WR: 195 g / 245 g (0.43 lb / 0.54 lb)
 - RDS-32iTxWR: 205 g / 255 g (0.45 lb / 0.56 lb)
- Wrist strap, battery covers with and without a belt clip



Ergonomic design



Connector, charging contacts, fixing lug for wrist strap



Hands-free operation using belt clip

ELECTRICAL CHARACTERISTICS

- Power supply: Batteries 2 x AA/LR6, alkaline or NiMH
- Operation time with fresh Alkaline batteries more than 2 months
8 h use/24 h (600 h in background radiation, radios disabled, display backlight off, LED off)
- Operation time with fully charged NiMH batteries more than 1.5 months 8 h use/24 h with 2900 mAh capacity (in background radiation, radios disabled, display backlight off, LED off)
- Contacts for external power and charging of NiMH battery
- Alarm audio level 86 dBA at 30 cm

RDS-32 RADIATION SURVEY METERS

ENVIRONMENTAL CHARACTERISTICS


- Operating temperature:
 - RDS-32/RDS-32iTx: -25 °C to +60 °C (-13 °F to 140 °F)
 - RDS-32WR/RDS-32iTxWR: -25 °C to +50 °C (-13 °F to 122 °F)
- Storage temperature -40 °C to +70 °C (-40 °F to 158 °F)
- Relative humidity 10% to 95% at +35 °C (95 °F)
- RF-immunity: Fulfills following standards: IEC 61000-4-2 (2008), IEC 61000-4-3 (2006 +A1:2007 + A2:2010), IEC 61000-4-6 (2013), IEC 61000-4-8 (2009)
- RF Emissions: Fulfills following standards: EN 55032B
- FCC approval 2AHL8-RDS-32
- IC Approval 26167-RDS32
- IEC 60846-1 (all models), 60846-2 (WR models) compliant

COMMUNICATION PROTOCOLS

- USB communication with suitable adapter
- iTx versions: WRM radio 900 MHz or 2.4 GHz
- Maximum possible emitting Tx power:
 - 298 mW at 900 MHz
 - 86 mW at 2.4 GHz
- Bluetooth® Low Energy 4.2 protocol, Class 2 communication

ORDER CODES

1233-321	RDS-32 Survey Meter (Sv)
1233-322	RDS-32 Survey Meter (rem)
1233-323	RDS-32WR Survey Meter (Sv)
1233-324	RDS-32WR Survey Meter (rem)
1233-325	RDS-32iTx Survey Meter (2.4 GHz, Sv)
1233-326	RDS-32iTx Survey Meter (900 MHz, rem)
1233-327	RDS-32iTxWR Survey Meter (2.4 GHz, Sv)
1233-328	RDS-32iTxWR Survey Meter (900 MHz, rem)
1233-331	CSW-32 Configuration and calibration software with USB cable-link
1233-333	USB cable-link
NOM006819	RDS-32/CSP probe bracket with holder for one hand operation

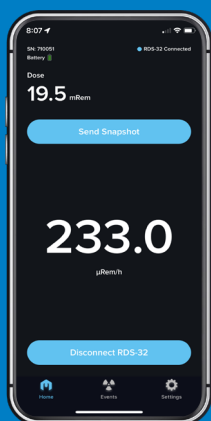

Connect your RDS-32™ meter with Bluetooth Low Energy to SpirVIEW Mobile™ Supervisory Software and the RadResponder Network with our app via Bluetooth technology.



MIRION
TECHNOLOGIES



Copyright © 2024 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



EASY-COUNT™

Field Smear/Filter Counter



DESCRIPTION

The Easy-Count unit is a field deployable smear counter for measurement of surface contamination. It is designed to be used with the Colibri or RDS-31/32 survey meters (specific model for each meter including dedicated holder and cable). The silicon PIPS detector with 17 cm² detection area makes it an ideal tool for direct measurement of alpha and beta emitters. PIPS technology brings numerous benefits to a field deployable smear counter.

These benefits are:

- An improved MDA (much lower gamma background compared to other technologies)
- Very good alpha/beta discrimination
- A durable entrance window (not pressure sensitive). It is also easy to clean!

The Easy-Count counter is an addition to the Canberra™ Smart Probe (CSP) family. It includes all key components of hardware circuitry (high voltage power supply, amplifier, discriminator, etc.). Also, the intelligence associated with controlling those components is located in the counter – including control and storage of key parameters, settings, calibrations, device ID, alarm settings (ten values for each unit to display with default setting), etc. Thus the counter is a fully integrated subsystem taking and transmitting the measurement to the instrument, which is used for display.

With high voltage and digitization of the data occurring in the counter, measurement quality is not dependent on external device quality (cable, host instrument). Moreover, a CSP uses a serial protocol to communicate with the host which can be an instrument or a PC.

CARACTÉRISTIQUES

- ✓ Lightweight field deployable Alpha/Beta smear counter
- ✓ Seamless operation with Colibri® or RDS-32™ survey meter (specific models)
- ✓ Alpha/Beta surface contamination measurement
- ✓ 17 cm² silicon PIPS® detector
- ✓ Excellent MDA
- ✓ High efficiency with improved sample to detector distance
- ✓ Belongs to the CSP™ family
- ✓ Calibration via PC
- ✓ Requires Colibri TTC or VLD Survey Meter (Software Version ≥ 3.1), RDS-31™ survey meter (firmware version ≥ 3.05.5) or RDS-32 with any firmware




EASY-COUNT™ FIELD SMEAR/FILTER COUNTER



Calibration and QA measurements can be performed directly with the counter, without using any instrument, by connecting the Easy-Count unit to a computer with CSPA™ (Canberra Smart Probe Software), allowing your instruments to remain deployed in the field.

Once calibrated, the Easy-Count counter is ready to be used as a plug and play “probe” to start a QA measurement in CPM, DPM, DPM/100 cm², c/s, Bqeq, Bqeq/cm². The Colibri version includes a specific bracket and CSP coiled cable, and the RDS version includes a specific holder and RDS coil cable.

Easy-Count counter accepts many different sizes of smears and planchets, which are loaded into the counter on a tray that ensures a reproducible geometry. This tray is easily accessible via a front panel door. It includes a rotating sample trap to keep the measured object in place. RDS version features an additional ring to support smear in planchet procedure and prevents the smear from damaging the internal detector.

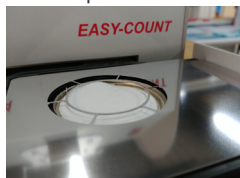


A push-button located on the Easy-Count housing helps select the counting mode. When pressed, the probe switches to the next mode in a list of three and the LED is activated accordingly: Alpha only – LED off, Beta only – LED on and Alpha+Beta – LED blinking.

Easy-Count counter can be easily upgraded (firmware) via CSPA, a USB cable and a PC.

SPECIFICATIONS

NUCLEAR

- Display units: CPM, DPM, DPM/100 cm², c/s, Bq_{eq}, Bq_{eq}/cm²
- Emitters: Alpha and Beta
- Detector: silicon 1700 mm² PIPS detector
- Detection area: 17 cm²
- Measurement range: 0 to 10000 c/s, 0 to 600 kcpm. Activity equivalent range depends on calibration emitter. Conversion coefficients are factory set with ²³⁹Pu for Alpha channel and with ⁶⁰Co for Beta channel.
- Dead time: 8 µs with digital saturation at 10000 c/s
- Energy range: Beta >100 keV, Alpha > 3 MeV
- Gamma Sensitivity for ¹³⁷Cs: 8 c/s per µGy/h (4800 cpm per mR/h)

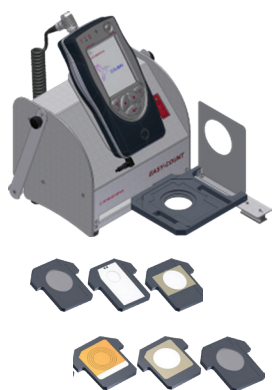

- Background: ambient ≤100 nSv/h (10 µR/h): Alpha <0.01 c/s (<0.6 cpm), Beta <0.8 c/s (<48 cpm)
- Cross talk: Alpha to Beta (²³⁹Pu) <5%, Beta to Alpha (⁹⁰Sr-⁹⁰Y) <0.2%

ERGONOMIC

- Display: provided by survey meter.
- Alarm setpoints: 10 values for each unit to display. Saved in probe memory and can be modified with CSPA and PC.
- Select Default alarm threshold using survey meter keypad.

ELECTRICAL

- Power: supplied by survey meter (low voltage only): +5 V
- Powered by the connected survey meter. RDS holder includes powering and/or charging capabilities when RDS-32 is loaded with rechargeable NiMH batteries.
- Consumption: 15 mA maximum
- Up to 22 hours of battery life with Colibri TTC Basic and up to 20 hours with RDS-32 meter (alkaline batteries)

MECHANICAL

- Housing: aluminium
- Dimensions: 23.4 x 17.8 x 33.7 cm (9.2 x 7.0 x 13.3 in)
- Weight: 2.1 kg (4.62 lb) without Colibri meter

ENVIRONMENTAL

- Temperature: from -10 °C to +40 °C (+14 to +104 °F)
- Storage temperature: from -10 °C to +40 °C (+14 to +104 °F)
- Relative humidity: 40% to 85% at 35 °C
- Cleaning: housing easy to decontaminate

NORM

- CE: meets CE requirements

ORDERING REFERENCES

- EASY-COUNT/C for Colibri: NOM006476
- EASY-COUNT/RDS for RDS-31/32: NOM006960
- USB cable for EASY-COUNT/C calibration: NOM006288
- USB cable for EASY-COUNT/RDS calibration: NOM007145
- Calibration/setup software SI unit, English CSPA/E: NOM006299
- Calibration/setup software US unit, English CSPA/R: NOM006298
- Calibration/setup software SI unit, French CSPA/F: NOM006289

	Nuclide	Emitter	Typical efficiency over 2 π (%)	Guaranteed efficiency over 2 π (%)	Response to activity (c/s)/Bq	MDA (Bq)
EASY-COUNT/RDS	²⁴¹ Am	Alpha	62	47	0.32	0.34
	²³⁹ Pu	Alpha	57	43	0.31	0.35
	⁹⁰ Sr + ⁹⁰ Y	Beta	43	33	0.26	3.75
	³⁶ Cl	Beta	51	39	0.32	3.05
	⁶⁰ Co	Beta + Gamma	19	15	0.09	10.8
EASY-COUNT/C	²⁴¹ Am	Alpha	70	53	0.35	0.31
	²³⁹ Pu	Alpha	63	47	0.34	0.32
	⁹⁰ Sr + ⁹⁰ Y	Beta	44	33	0.26	3.75
	³⁶ Cl	Beta	52	39	0.32	3.05
	⁶⁰ Co	Beta + Gamma	19	15	0.09	10.8

MDA: background = 0.01 c/s (alpha) and 0.8 c/s (beta), measured during 100 s in a 0.1 µGy/h ambience.
Measuring time on source = 10 s
Statistic: false alarm = 5% and non-detection = 5%



MIRION
TECHNOLOGIES

Copyright © 2024 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



MIRION
TECHNOLOGIES

AVIOR[®]-2

Desktop Dose Rate and Survey Meter

The AVIOR-2 unit is a versatile alarm desktop, portable or wall-mounted dose rate and survey meter for contamination control and dose-rate assessment.

DESCRIPTION

The extensive experience of Mirion in nuclear measurement combined with valuable feedback from our users, drove us to create a product that better supports situations encountered in the field such as laboratories, industrial sites, nuclear power plants, open air yards, and emergency situations.

The AVIOR-2 meter is equipped with two Canberra[™] Smart Probe (CSP[™]) inputs and features a simultaneous display of both probes. When an Alpha/Beta CSP probe is connected, the display automatically toggles to a dual screen and provides the user with discriminated alpha from beta measurement results, allowing to check and measure for contamination twice as fast as most instruments available on the market.

A dedicated OneHand/OneFoot mode to operate with SAB-250 and SABP-525 smart probes offers an affordable system to control contamination in areas with limited footprint.

RELATED PRODUCTS

CSP Probes: SAB-250[™], SABP-525[™], SPAB-15[™], SG-1R[™], SG-2R[™], SAB-100[™], SAB(G)-100[™], SA-100[™], SB-100[™], SX-2R[™] probes...



FEATURES

- ✓ Measurement of contamination and dose rate
- ✓ Two simultaneous probe channels
- ✓ Dual alpha/beta display for each probe
- ✓ Customized alarm setpoint for each connected probe
- ✓ Multiple measurement modes: Frisking, Scaler-Timer and Go/No-go
- ✓ Specific OneHand/OneFoot mode with body detection and automatic background management
- ✓ Manual background deduction for net measurement of contamination
- ✓ Backlit graphical digital display
- ✓ Analog-like bar graph with digital display
- ✓ Backup built-in rechargeable battery with no memory effect
- ✓ Rugged, lightweight and easy to use
- ✓ Upgradable product through firmware upgrade



PHYSICAL CHARACTERISTICS

- Units displayed (depending on probe): c/s, Bq_{eq}, Bq_{eq}/cm², Sv/h, Sv_{eq}/h
- Alarm threshold:
 - CSP probe: 10 values for each unit to display, stored in probe memory. Each value is editable via PC setup Canberra Smart Probe Software (CSPS™) or directly on the AVIOR-2 meter
- Response time:
 - As fast as 1/4 s for bargraph display depending on probe, on a semi-logarithmic scale
 - 1 s for clear digital readout display

ELECTRICAL CHARACTERISTICS

- Built-in rechargeable Li-ion battery pack
- Battery Life with Backlight: (Maximum/turned off): 31/70 hours with one SAB-100 probe connected, 29/60 hours with SA-100 and SB-100 probes connected
- Built-in charger
- Universal Mains power input, 100–240 V ac, 50/60 Hz. Rear-panel IEC-type connector. Cordset included.
- Display of remaining charge with battery pictogram

ENVIRONMENTAL CHARACTERISTICS

- Operating temperature: -10 °C to +50 °C. Between -10 °C and -20 °C, the instrument remains operational but the display becomes more difficult to read.
- Storage temperature: -25 °C to + 60 °C
- Ingress protection: IP54

MECHANICAL CHARACTERISTICS

HOUSING

- Molded rugged Polycarbonate

DIMENSIONS

- 184 x 105 x 105 mm (7.2 x 4.1 x 4.1 in.) (L x W x H)

WEIGHT

- 950 g (33.5 oz), battery included
- Connector for external probes: S 104 A066 137+ Fisher socket (CSP) or equivalent

FUNCTIONAL CHARACTERISTICS

- Two simultaneous CSP probe channels
- Specific OneHand/OneFoot mode with body detection and automatic background management

DISPLAY

- Grand display: Large LCD display with constant backlight

ALARMS

- Audible: > 85 dB(A) at 30 cm (11.8 in.)
- Visual: Flashing alarm pictogram and LED for each channel (Red, orange, green)

KEYBOARD

- Ruggedized keyboard with five buttons featuring primary and secondary functions: Enter (Power on), Up arrow (Backlight), Down arrow (Audio on/off), Left arrow (Lock), Right arrow (Data Log)

OPERATING CONTROL

- Complete and automatic self-test when switching on. Periodical self-control of key operational functions when operating

WALL MOUNTING




- Back panel with dedicated print for wall accessory

NORMS

- EMC: Conform
- IEC: Conform to IEC60846-2002 and IEC60325-2006
- CE: Conform

AVIOR-2 ALARMS

- Green/Orange/Red LED
- Linked to display channel
- Audible sound
- Can be muted by pressing any button when alarming
- Visual display
- Visual display depending on window arrangement

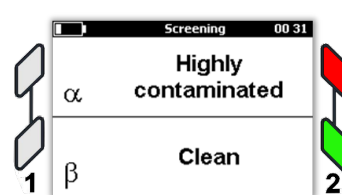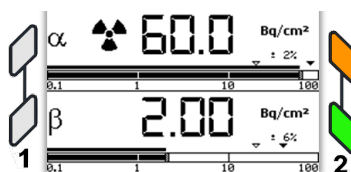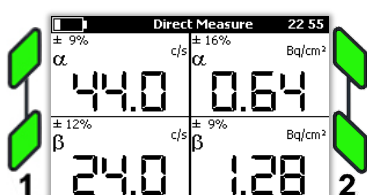

Alarm Displays

AVIOR-2 SYSTEM CONFIGURATIONS ARE A COMPLETE RANGE OF SOLUTIONS

AVIOR-2 meters cover multiple applications with one instrument for contamination or dose rate measurements, with or without background subtraction and with minimal training requirements.



AVIOR-2H/F-S Self-standing Hand/Foot System

- Hand/Foot monitoring
- Probes are permanently attached
- SAB-250 probe for hand, SABP-525 probe for foot
- Small footprint
- Simple to move with integrated wheels
- Dynamic background reduction

AVIOR-2H/H-S Self-standing Hand/Hand System

- Dual hand monitoring SAB-250 probe for each hand
- Small footprint
- Simple to move with integrated wheels
- Dynamic background reduction



AVIOR-2H Wall-mounted Hand System

- Hand frisking or counting for glove boxes
- Probe is either permanently attached or available for frisking (setup in AVIOR-2 system)
- Large area SAB-250 probe can be taken from holder after hand check in frisking mode
- Zero footprint
- Dynamic background reduction



*Can be upgraded
with Foot probe*

AVIOR-2H/F-W Wall-mounted Hand System

- Hand/Foot monitoring
- Minimal footprint
- Foot probe is placed at wall corner
- Fixed system
- Dynamic background reduction



Self-standing Frisking System

- Using 100 cm² probe, alpha, beta, or alpha/beta with discrimination
- Basic and economical cost
- No dynamic background reduction
- Extremely small footprint

Self-standing Hand System

- Hand counting or frisking (setup in AVIOR-2 system)
- Probe can be permanently attached
- Large area SAB-250 probe can be taken from holder after hand check in frisking mode
- Small footprint
- Simple to move with integrated wheels
- Dynamic background reduction





Part Number	Product Name	Description
NOM006566/ EM105053	AVIOR-2	Desktop survey meter with two CSP inputs
NOM006594/ EM105470	AVIOR-2 I/O	Desktop survey meter with two CSP inputs I/O: relay outputs, RS485 Modbus, 24 V DC input, audio jack
NOM006554/ EM104616	SAB-250	Alpha/beta external 250 cm ² probe
NOM006603/ EM106271	SABP-525	Alpha/beta 525 cm ² foot probe
ANT007271/ EM102034	AVIOR/Wall	Wall mounting for AVIOR-2/MIP-2
ANT007294/ EM105105	SAB-250/Wall	Wall mounting for SAB-250
ANT007293/ EM105083	AVIOR-2-SAB-250/COMBO WALL	Wall mounting combo for AVIOR-2 and SAB-250
NOM006574/ EM105118	AVIOR-2H/F-W	AVIOR-2 hand/foot complete system (wall-mounted). Includes: AVIOR-2, SAB-250 probe, SABP-525 probe, combo wall, cable-2, coil cable
NOM006575/ EM105119	AVIOR-2H	AVIOR-2 hand complete system (wall-mounted). Includes: AVIOR-2, SAB-250 probe, combo wall, coil cable
NOM006595/ EM105575	AVIOR-2H/F-S	AVIOR-2 hand/foot complete system (self-standing). Includes: AVIOR-2, SAB-250 probe, SABP-525 probe, hand/foot support, Cable-2, Cable coil
NOM006599/ EM105722	AVIOR-2H/H-S	AVIOR-2 hand/hand complete system (self-standing). Includes: AVIOR-2, two SAB-250 probes, hand/hand support, two coil cables
NOM006585/ EM105325	CSP-METER COIL CABLE	0.7 meter extends to 1.5 meters with 90 degree angle connector on one end
NOM006565/ EM105028	CSP-Meter cable 2	Generic CSP probe/monitor cable 2 m length with 90 degree connector on one end
ANT007297/ EM105378	H/F Support	Self-standing hand/foot structure for AVIOR-2, SAB-250 and SABP-525
ANT007301/ EM105819	H/H Support	Self-standing hand/hand structure for AVIOR-2 and two SAB-250
NOM006202/ EM18364	Digital stand	AVIOR-2, MIP-2 and MIP-10 Digital stand includes a hook for SBM-2D
NOM006366/ EM86510	CSP Probe holder for stand	CSP probe holder that adapts on Digital stand



MIRION
TECHNOLOGIES

Copyright © 2023 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



PORTABLE RADIATION MEASUREMENT

AB-100™ Detection Module



CSPevo®
POWERED BY LIGHTLink®

The AB-100 module, part of the CSPevo® family, offers a lightweight, ergonomic design that reduces user fatigue and enhances ease of use, making it ideal for reliable frisking and smear counting. Its robust construction minimizes maintenance, while improved detection homogeneity ensures accurate results. It integrates with Mirion smart probes and the RDS-32™ survey meter for flexibility in various applications.

The AB-100 module is ideal for detecting Alpha and Beta emitters simultaneously. It offers surface contamination measurement, extensive application coverage, and superior detection performance from a Phoswich detector, featuring a 100 cm² detection area.

The CSPevo family, enhanced with LightLink® technology, combines interchangeable modules, handles and survey meters for flexible user experience and efficiency. An evolution of the Canberra Smart Probes (CSP™) product family, the CSPevo family ensures backwards compatibility with existing CSP products.

FEATURES

- ✓ **LightLink Technology:** Enhances light collection and robustness and reduces risk of breakage
- ✓ **Detection Homogeneity:** Over 85% detection homogeneity ensures reliable and consistent results
- ✓ **USB-C Compatibility:** Facilitates connectivity with third-party systems and calibration software
- ✓ **Improved Ergonomics:** Lightweight and comfortable design for prolonged use without discomfort
- ✓ **Broad Integration Options:** Flexible integration with legacy CSP meters and RDS-32 survey meter
- ✓ **One-Handed Operation Capability:** For seamless functionality when the other hand is occupied and/or in challenging environments

A lightweight design facilitates one-handed operation – ideal for frisking and contamination assessment. Optimized for always-ready use, the CSPevo family ensures reliable performance and seamless integration across diverse radioprotection environments.

Canberra Smart Probe Family

The AB-100 module, part of the Canberra Smart Probe family (CSP and CSPevo), enhances field operations with inter-compatibility for seamless integration and a design that ensures quick readiness. Building on a legacy of exceptional performance, CSP and CSPevo products offer versatile plug and play capabilities and fast readiness for field operations.

Learn more:



POWERED BY LIGHTLINK TECHNOLOGY

The AB-100 leverages advanced light collection based on Mirion LightLink technology for increased robustness and superior detection homogeneity.

Mirion LightLink technology represents a revolutionary advancement in radiation detection, enhancing a wide array of products from handheld devices to contamination monitors. Detectors equipped with LightLink technology incorporate modern plastic scintillators, robust Silicon Photomultipliers and the latest in readout electronics.

This next-generation technology not only improves ergonomics and reduces susceptibility to damage but also extends operational lifespan through lower power requirements and a design that eliminates high-voltage components. With superior light collection efficiency and a design that avoids light decay, LightLink technology ensures hyper-accurate detection and devices that are always ready for use — redefining industry standards in operational productivity and reliability.

LIGHTLink®

Robust, Reliable, Ready to Integrate

The AB-100 module is ideal for radiation protection teams and system integrators looking for a robust, reliable, and easy-to-integrate solution.

It is designed to withstand mechanical shocks, ensuring exceptional reliability in demanding environments. LightLink technology eliminates the need for photomultiplier tubes (PMT), significantly increasing the robustness of the probe, while minimizing breakage and decreasing downtime. Its compact size and low sensitivity to magnetic fields help facilitate integration into third-party systems.

Outstanding Performance, Minimal Downtime

Users benefit from rapid maintenance and minimal downtime due to innovative technology that eliminates the need for light decay time.

System Compatibility Provides Enhanced Versatility

The AB-100 detection module is compatible with different handles and can be connected to various host instruments. Suitability for varying applications and user needs — including self-frisking and on-site surveys — increases detection module versatility.

These handles work in two ways:

- **With a cable** that matches a CSP meter or RDS-32 survey meter type connector
- **Without a cable** leveraging an integrated holder for an RDS-32 meter

The integrated setup provides a convenient one-handed operation for most scenarios, while the cable-based handles are useful for measuring hard-to-reach areas where it is important to maintain visibility of the meter display.



With cable for meter/probe connection



Without cable RDS-32 meter integrated

FLEXIBLE HANDLE OPTIONS

Three different handles are available for the AB-100 detection module, enabling the adaptation of the probe for different applications and environmental conditions. Each handle is secured to the AB-100 detection module with one screw and can be tightened without a specific tool.



RDS-I-HANDLE: For One-Hand Operations

The **RDS-I-HANDLE** connects to the RDS-32 meter wirelessly. When paired with the AB-100 module, it is perfect for one-hand operations. The RDS-32 meter attaches to the handle and releases manually.



CSP-C-HANDLE & RDS-C-HANDLE: For Hard-to-Reach Areas

The **CSP-C-HANDLE** and **RDS-C-HANDLE** enable traditional use of the AB-100 detection module with field-deployed meters. The coil cable, with either RDS or CSP connector, allows the probe to access hard-to-reach areas while monitoring the meter display.



SPECIFICATIONS

Nuclear Characteristics:

- **1 Unit to Display:** Depending on survey meter (c/s, Bq, Bq/cm² with SI units and CPM, DPM, DPM/100 cm² with US units)
- **Emitters:** Alpha and Beta
- **Detector:** ZnS(Ag) adhered to 0.25 mm thick plastic scintillation material
- **Detection area:** 101.25 cm² (67.5 x 150 mm – 2.66 x 5.9 in.)
- **Detection uniformity:** ≥85% for Alpha and Beta (IEC 60325)
- Removable aluminized Mylar entrance window on metallic frame, thickness: 6 µm (0.84 µg/cm²) made of 2 layers of 3 µm each.
- **Protection Grid Transparency:** 83%. Honeycomb mesh of 7.1 mm held to detector housing via 2 screws only.
- **Measurement Range:** 0 to 10,000 c/s (600 kcpm) for Alpha channel and 0 to 100,000 c/s (6,000 kcpm) for Beta channel. Conversion coefficients are factory set with ²³⁹Pu for Alpha channel and with ⁶⁰Co for Beta channel.
- **Dead Time:** Beta ≤3 µs, Alpha ≤80 µs
- **Energy Range:** Alpha 3 MeV to 8 MeV, Beta 100 keV to 2.2 MeV
- **Gamma Sensitivity for ¹³⁷Cs:** Beta 42 c/s per µSv/h, Alpha 0.2 c/s per µSv/h
- **Background:** Ambient ≤100 nSv/h (10 µR/h): Alpha ≤0.05 c/s (≤3 cpm), Beta ≤5.0 c/s (≤300 cpm)
- **Cross Talk:** Alpha to Beta (²³⁹Pu) ≤5.0%, Beta to Alpha (⁹⁰Sr-⁹⁰Y) ≤0.1%



Easily and quickly insert the detection module needed for your unique application needs.

Detection efficiencies and MDAs with 100 cm² ISO 8769 sources in contact with probe:

Nuclide	Emitter	Typical efficiency over 2π (%)	Guaranteed efficiency over 2π (%)	Response to activity (c/s)/Bq	MDA (Bq)
²⁴¹ Am	Alpha	46	35	0.22	1.84
²³⁹ Pu	Alpha	49	37	0.23	1.75
⁹⁰ Sr+ ⁹⁰ Y	Beta	48	36	0.62	4
³⁶ Cl	Beta	49	37	0.30	8
¹³⁷ Cs	Beta + Gamma	40	30	0.25	10
⁶⁰ Co	Beta + Gamma	25	19	0.13	19
¹⁴ C	Beta	6	4.5	0.02	118

- **MDA:** Background = 0.01 c/s (Alpha) and 4.0 c/s (Beta), measured during 100 s in a 0.1 µSy/h ambience.
- Measuring time on source = 10 s.
- **Statistic:** False alarm = 5% and non-detection = 5%

Ergonomic:

- **Display:** Provided by survey meter
- **Alarm Setpoints:** 10 values for each unit to display. Saved in probe memory. They can be changed with CSPS™ and PC.
- Default alarm threshold is chosen in a list by use of survey meter keypad.
- **Connection:** CSP-EVO USB-C versatile interface

Electrical:

- **Power:** Dual voltage with automatic selection supplied by survey meter or computer (+5 V or +3.3 V).
- **Battery Life:** 50 hours approx. with AVIOR™-2 meter (Backlight level 1, no alarm and one probe connected). 140 hours approx. with RDS-32 power with NiMH rechargeable batteries and 180 hours with Alkalines batteries (No radio, no backlight and no alarm)
- **Consumption:** ≤25 mW. 5 mA maximum with 5 V power and 7.6 mA maximum with 3.3 V power.

Mechanical:

- **Housing:** Molded ABS/PC easily decontaminable
- **Drop:** Tested from 1 meter height on concrete
- **Dimensions:**
 - AB-100 alone -
Length x width x height: 187 x 84 x 71 mm (7.4 x 3.3 x 2.8 in.)
 - AB-100 with RDS-I-HANDLE -
Length x width x height: 278 x 84 x 151 mm (10.9 x 3.3 x 5.9 in.)
 - AB-100 with RDS-C-HANDLE or CSP-C-HANDLE -
Length x width x height: 278 x 84 x 121 mm (10.9 x 3.3 x 4.8 in.)
- **Weight:**
 - AB-100 alone: 370 g (13 oz)
 - AB-100 with RDS-I-HANDLE: 570 g (20.1 oz)
 - AB-100 with RDS-C-HANDLE or CSP-C-HANDLE: 640 g (22.6 oz)

Environment:

- **Operating Temperature:** -20 °C to +50 °C (-4 °F to +122 °F)
- **Storage Temperature:** -25 °C to +60 °C (-13 °F to +140 °F) device in shipping package
- **Relative Humidity:** 10% to 95% at 35 °C (95 °F)
- **Cleaning:** Housing easy to decontaminate
- **Ingress Protection:**
 - AB-100: IP53
 - RDS-I-HANDLE: IP54
 - RDS-C-HANDLE/CSP-C-HANDLE: IP64

Norms:

- **EMC:** Conform
- **CE:** Meets CE requirements
- **IEC:** Type tested to IEC 60325-2002 (DOC023441)
- **ANSI:** Type tested to ANSI 42.17A-2003 (DOC023440)

ORDERING INFORMATION

- **AB-100:** NOM008006
- **RDS-I-HANDLE:** NOM008005
- **CSP-C-HANDLE:** NOM008216
- **RDS-C-HANDLE:** NOM008214
- **Calibration/Setup Software (CSPS):**
 - CSPS-F (French – SI units): NOM006289
 - CSPS-E (English – SI/US units): NOM006299



MIRION
TECHNOLOGIES

Copyright © 2025 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



PORTABLE RADIATION MEASUREMENT

A-100™ Detection Module

The A-100 Detection Module is optimized for precise alpha contamination monitoring, offering highly selective alpha detection with minimal gamma influence. Built on advanced LightLink® technology, the 100 cm² detectors deliver reliable performance and consistent results.

The CSPevo® 100 cm² Detection Module, part of the CSPevo® family, offers lightweight, ergonomic design that reduces user fatigue and enhances ease of use, making it ideal for reliable frisking and smear counting. Its robust construction minimizes maintenance, while improved detection homogeneity ensures accurate results. It integrates with Mirion smart probes and compatible survey meters (i.e. RDS-32™ and AVIOR®-2) for flexibility in various applications.

The CSPevo family, enhanced with LightLink technology, combines interchangeable modules, handles and survey meters for flexible user experience and efficiency. An evolution of the Canberra™ Smart Probes (CSP™) product family, the CSPevo family ensures backwards compatibility with existing CSP products.



CSPevo®
POWERED BY LIGHTLink®

FEATURES


- ✓ **Advanced LightLink Technology:** Enhances light collection and robustness and improves product availability
- ✓ **High Detection Homogeneity:** Over 85% detection homogeneity ensures reliable and consistent results
- ✓ **USB-C Compatibility:** Facilitates connectivity with third-party systems and calibration software
- ✓ **Lightweight, Ergonomic Design:** Reduces operator fatigue and improves comfort during extended frisking and contamination monitoring tasks
- ✓ **Broad Integration Options:** Flexible integration with legacy CSP meters and RDS-32 survey meter
- ✓ **One-Handed Operation:** Allows seamless use in situations where the operator's other hand is occupied

A lightweight design facilitates one-handed operation – ideal for frisking and contamination assessment. Optimized for always-ready use, the CSPevo family ensures reliable performance and seamless integration across diverse radioprotection environments.

Cable-handle for meter/probe connection

Cable-free use with the RDS-32 meter

Snap-on handle & meter connection

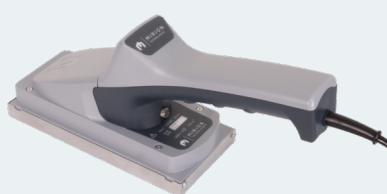

SPECIFICATIONS

Nuclear Characteristics:

- **Units to Display:** Depending on survey meter (c/s, Bq, Bq/cm² with SI units and CPM, DPM, DPM/100 cm² with US units)
- **Emitters:** Alpha
- **Detector:** ZnS(Ag) adhered to 0.25 mm thick polyester plastic material
- **Detection area:** 101.25 cm² (67.5 x 150 mm – 2.66 x 5.9 in.)
- **Detection uniformity:** ≥85% (IEC 60325)
- Removable aluminized Mylar entrance window on metallic frame, thickness: 6 µm (0.84 µg/cm²) made of 2 layers of 3 µm each
- **Protection Grid Transparency:** 83%. Honeycomb mesh of 7.1 mm held to detector housing via 2 screws only
- **Measurement Range:** 0 to 10,000 c/s (600 kcpm). The conversion factor is factory-set to ²³⁹Pu
- **Dead Time:** ≤80 µs
- **Energy Range:** 3 MeV to 8 MeV
- **Gamma Sensitivity for ¹³⁷Cs:** ZERO c/s per µSv/h (tested at 10 mSv/h)
- **Background:** Ambient ≤100 nSv/h (10 µR/h): ≤0.01 c/s (≤0.6 cpm)
- **Beta influence (⁹⁰Sr-⁹⁰Y):** 0.01% or less

Norms:

- **EMC:** Conform
- **CE:** Meets CE requirements
- **IEC:** Type tested to IEC 60325-2002 (DOC025689)
- **ANSI:** Type tested to ANSI 42.17A-2003 (DOC025689)

Electrical:

- **Power:** Dual voltage with automatic selection supplied by survey meter or computer (+5 V or +3.3 V)
- **Battery Life:** 50 hrs approx. with AVIOR-2 meter operating on back-up battery (Backlight level 1, no alarm, one probe connected). 140 hrs approx. with RDS-32 powered with NiMH rechargeable batteries and 180 hrs with Alkaline batteries (No radio, backlight, LED, or alarm)
- **Consumption:** ≤25 mW. 5 mA maximum with 5 V power and 7.6 mA maximum with 3.3 V power

Ergonomic:

- **Display:** Provided by survey meter
- **Alarm Setpoints:** 10 values for each unit to display. Saved in probe memory. They can be changed with CSPS™ and PC. Default alarm threshold is chosen in a list by use of survey meter keypad
- **Connection:** CSP-EVO USB-C versatile interface

Mechanical:

- **Housing:** Molded ABS/PC easily decontaminable
- **Drop:** Tested from 1 meter height on concrete
- **Dimensions (Length x Width x Height):**
 - A-100 alone: 187 x 84 x 71 mm (7.4 x 3.3 x 2.8 in.)
 - With RDS-I-HANDLE: 278 x 84 x 151 mm (10.9 x 3.3 x 5.9 in.)
 - With RDS-C-HANDLE or CSP-C-HANDLE: 278 x 84 x 121 mm (10.9 x 3.3 x 4.8 in.)
- **Weight:**
 - A-100 alone: 370 g (13 oz)
 - With RDS-I-HANDLE: 570 g (20.1 oz)
 - With RDS-C-HANDLE or CSP-C-HANDLE: 640 g (22.6 oz)

Environment:

- **Operating Temperature:** -20 °C to +50 °C (-4 °F to +122 °F)
- **Storage Temperature:** -25 °C to +60 °C (-13 °F to +140 °F) device in shipping package
- **Relative Humidity:** 10% to 95% at 35 °C (95 °F)
- **Cleaning:** Housing easy to decontaminate
- **Ingress Protection:**
 - A-100: IP53
 - RDS-I-HANDLE: IP54
 - RDS-C-HANDLE/CSP-C-HANDLE: IP64

ORDERING INFORMATION

- **A-100:** NOM008874
- **RDS-I-HANDLE (cable-free for RDS-32):** NOM008005
- **RDS-C-HANDLE (wired for RDS-32):** NOM008214
- **CSP-C-HANDLE (wired for CSP meter):** NOM008216
- **Calibration/Setup Software (CSPS):** CSPS-F (French – SI units): NOM006289, CSPS-E (English – SI/US units): NOM006299

Detection efficiencies and MDAs with 100 cm² ISO 8769 sources in contact with probe:

Nuclide	Emitter	Typical efficiency over 2π (%)	Guaranteed efficiency over 2π (%)	Response to activity (c/s)/Bq	MDA (Bq)
²⁴¹ Am	Alpha	46	35	0.218	1.86
²³⁹ Pu	Alpha	46	35	0.196	2.08

- **MDA:** Background = 0.01 c/s (Alpha), measured during 100 s in a 0.1 µSv/h ambience
- Measuring time on source = 10 s
- **Statistic:** False alarm = 5% and non-detection = 5%



Copyright © 2026 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



PORTABLE RADIATION MEASUREMENT

B-100™ Detection Module

The B-100 Detection Modules provide enhanced surface contamination measurement options for beta emitters. Module B-100/A (with Mylar window) comes with a superior detection performance for low beta energies, while module B-100/B with aluminium window ensures consistent focus on beta-only detection.

The CSPevo® 100 cm² Detection Module, part of the CSPevo family, offers lightweight, ergonomic design that reduces user fatigue and enhances ease of use, making it ideal for reliable frisking and smear counting. Its robust construction minimizes maintenance, while improved detection homogeneity ensures accurate results. It integrates with Mirion smart probes and compatible survey meters (i.e. RDS-32™ and AVIOR®-2) for flexibility in various applications.

The CSPevo family, enhanced with LightLink technology, combines interchangeable modules, handles and survey meters for flexible user experience and efficiency. An evolution of the Canberra™ Smart Probes (CSP™) product family, the CSPevo family ensures backwards compatibility with existing CSP products.



CSPevo®
POWERED BY LIGHTLink®

FEATURES


- ✓ **Advanced LightLink® Technology:** Enhances light collection and robustness and improves product availability
- ✓ **High Detection Homogeneity:** Over 85% detection homogeneity ensures reliable and consistent results
- ✓ **USB-C Compatibility:** Facilitates connectivity with third-party systems and calibration software
- ✓ **Lightweight, Ergonomic Design:** Reduces operator fatigue and supports comfortable use during extended contamination monitoring tasks
- ✓ **Broad Integration Options:** Flexible integration with legacy CSP meters and RDS-32 survey meter
- ✓ **One-Handed Operation:** Allows seamless use in situations where the operator's other hand is occupied or mobility is limited

A lightweight design facilitates one-handed operation – ideal for frisking and contamination assessment. Optimized for always-ready use, the CSPevo family ensures reliable performance and seamless integration across diverse radioprotection environments.

Cable-handle for meter/probe connection

Cable-free use with the RDS-32 meter

Snap-on handle & meter connection

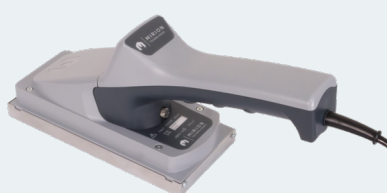

SPECIFICATIONS

Nuclear Characteristics:

- **Units to Display:** Depending on survey meter (c/s, Bq, Bq/cm² with SI units and CPM, DPM, DPM/100 cm² with US units)
- **Emitters:** Beta - Gamma
- **Detector:** 0.25 mm thick plastic scintillator
- **Detection area:** 101.25 cm² (67.5 x 150 mm – 2.66 x 5.9 in.)
- **Detection uniformity:** ≥85% (IEC 60325)
- **Entrance windows:** on metallic frame, quick to remove
 - B-100/A: Aluminized Mylar that improves beta efficiency but also detects alpha particles with thickness: 6 µm (0.84 µg/cm²) made of 2 layers of 3 µm each
 - B-100/B: Aluminium window that guarantees a very good alpha rejection with thickness: 20 µm (5.4 mg/cm²) made of 2 layers of 10 µm each
- **Protection Grid Transparency:** 83%. Honeycomb mesh of 7.1 mm held to detector housing via 2 screws only
- **Measurement Range:** 0 to 100,000 c/s (600 kcpm). The conversion factor is factory-set using ⁶⁰Co.
- **Dead Time:** ≤3 µs
- **Energy Range:** B-100/A: 50 keV to 2.2 MeV, B-100/B: 100 keV to 2.2 MeV
- **Gamma Sensitivity for ¹³⁷Cs:** 45 c/s per µGy/h
- **Background:** Ambient ≤100 nSv/h (10 µR/h): ≤5 c/s (≤300 cpm)
- **Typical Alpha Influence ²³⁹Pu:** B-100/A: 45%, B-100/B: 1% or less

Norms:

- **EMC:** Conform
- **CE:** Meets CE requirements
- **IEC:** Type tested to IEC 60325-2002 (DOC025689)
- **ANSI:** Type tested to ANSI 42.17A-2003 (DOC025689)

Electrical:

- **Power:** Dual voltage with automatic selection supplied by survey meter or computer (+5 V or +3.3 V)
- **Battery Life:** 50 hrs approx. with AVIOR-2 meter operating on back-up battery (Backlight level 1, no alarm, one probe connected). 140 hrs approx. with RDS-32 powered with NiMH rechargeable batteries and 180 hrs with Alkalines batteries (No radio, backlight, LED, or alarm)

- **Consumption:** ≤25 mW. 5 mA maximum with 5 V power and 7.6 mA maximum with 3.3 V power

Ergonomic:

- **Display:** Provided by survey meter
- **Alarm Setpoints:** 10 values for each unit to display. Saved in probe memory. They can be changed with CSPS™ and PC. Default alarm threshold is chosen in a list by use of survey meter keypad
- **Connection:** CSP-EVO USB-C versatile interface

Mechanical:

- **Housing:** Molded ABS/PC easily decontaminable
- **Drop:** Tested from 1 meter height on concrete
- **Dimensions (Length x Width x Height):**
 - B-100 alone: 187 x 84 x 71 mm (7.4 x 3.3 x 2.8 in.)
 - With RDS-I-HANDLE: 278 x 84 x 151 mm (10.9 x 3.3 x 5.9 in.)
 - With RDS-C-HANDLE or CSP-C-HANDLE: 278 x 84 x 121 mm (10.9 x 3.3 x 4.8 in.)
- **Weight:** B-100 alone: 370 g (13 oz), with RDS-I-HANDLE: 570 g (20.1 oz), with RDS-C-HANDLE or CSP-C-HANDLE: 640 g (22.6 oz)

Environment:

- **Operating Temperature:** -20 °C to +50 °C (-4 °F to +122 °F)
- **Storage Temperature:** -25 °C to +60 °C (-13 °F to +140 °F) device in shipping package
- **Relative Humidity:** 10% to 95% at 35 °C (95 °F)
- **Cleaning:** Housing easy to decontaminate
- **Ingress Protection:** B-100: IP53, RDS-I-HANDLE: IP54, RDS-C-HANDLE/CSP-C-HANDLE: IP64

ORDERING INFORMATION

- **B-100/A:** NOM008875
- **B-100/B:** NOM008876
- **RDS-I-HANDLE (cable-free for RDS-32):** NOM008005
- **RDS-C-HANDLE (wired for RDS-32):** NOM008214
- **CSP-C-HANDLE (wired for CSP meter):** NOM008216
- **Calibration/Setup Software (CSPS):** CSPS-F (French – SI units): NOM006289, CSPS-E (English – SI/US units): NOM006299

Detection efficiencies and MDAs with 100 cm² ISO 8769 sources in contact with probe:

Nuclide	Emitter	Typical efficiency over 2π (%)		Guaranteed efficiency over 2π (%)		Response to activity (c/s)/Bq		MDA (Bq)	
		B-100/A	B-100/B	B-100/A	B-100/B	B-100/A	B-100/B	B-100/A	B-100/B
⁹⁰ Sr+ ⁹⁰ Y	Beta	58	48	44	36	0.76	0.62	3.1	3.75
³⁶ Cl	Beta	59	47	44	35	0.36	0.29	6.4	8.1
¹³⁷ Cs	Beta + Gamma	54	39	41	29	0.34	0.24	6.9	9.6
⁶⁰ Co	Beta + Gamma	46	24	35	18	0.22	0.11	11	20
¹⁴ C	Beta	25	-	19	-	0.08	-	30	-

- **MDA:** Background = 3.5 c/s (Beta), measured during 100 s in a 0.1 µSy/h ambience

- Measuring time on source = 10 s
- **Statistic:** False alarm = 5% and non-detection = 5%



Copyright © 2026 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



PORTABLE RADIATION MEASUREMENT

ABG-100™ Detection Module



CSPevo®
POWERED BY LIGHTLink®

The ABG-100 Detection Module is a versatile multi-purpose 100 cm² frisker designed for enhanced gamma sensitivity. Built on advanced LightLink® technology, it provides reliable surface contamination measurements in multiple operating modes: Alpha only, Beta and Gamma and Alpha/Beta/Gamma.

The CSPevo® 100 cm² Detection Module offers a lightweight, ergonomic design that reduces user fatigue and enhances ease of use, making it ideal for reliable frisking and smear counting. Its robust construction minimizes maintenance, while improved detection homogeneity ensures accurate results.

It integrates with Mirion smart probes and compatible survey meters (i.e. RDS-32™ and AVIOR®-2) for flexibility in various applications. The CSPevo family, enhanced with LightLink technology, combines interchangeable modules, handles and survey meters for flexible user experience and efficiency. An evolution of the Canberra™ Smart Probes (CSP™) product family, the CSPevo family ensures backwards compatibility with existing CSP products.

FEATURES

- ✓ **Advanced LightLink Technology:** Enhances light collection and robustness and improves product availability
- ✓ **High Detection Homogeneity:** Over 85% detection homogeneity ensures reliable and consistent results
- ✓ **USB-C Compatibility:** Facilitates connectivity with third-party systems and calibration software
- ✓ **Lightweight, Ergonomic Design:** Reduces operator fatigue and supports comfortable use during extended contamination monitoring tasks
- ✓ **Broad Integration Options:** Flexible integration with legacy CSP meters and RDS-32 survey meter
- ✓ **One-Handed Operation:** Allows seamless use in situations where the operator's other hand is occupied

A lightweight design facilitates one-handed operation – ideal for frisking and contamination assessment. Optimized for always-ready use, the CSPevo family ensures reliable performance and seamless integration across diverse radioprotection environments.

Cable-handle for meter/probe connection

Cable-free use with the RDS-32 meter

Snap-on handle & meter connection



SPECIFICATIONS

Nuclear Characteristics:

- **Units to Display:** Depending on survey meter (c/s, Bq, Bq/cm² with SI units and CPM, DPM, DPM/100 cm² with US units)
- **Emitters:** Alpha and Beta-Gamma
- **Detector:** ZnS(Ag) adhered to 1.5 mm thick plastic scintillation material
- **Detection area:** 101.25 cm² (67.5 x 150 mm – 2.66 x 5.9 in.)
- **Detection uniformity:** ≥85% (IEC 60325)
- Removable aluminized Mylar entrance window on metallic frame, thickness: 6 µm (0.84 µg/cm²) made of 2 layers of 3 µm each.
- **Protection Grid Transparency:** 83%. Honeycomb mesh of 7.1 mm held to detector housing via 2 screws only.
- **Measurement Range:** 0 to 10,000 c/s (600 kcpm) for Alpha and 0 to 100,000 c/s (6,000 kcpm) for Beta. The conversion factors are factory-set using ²³⁹Pu for the alpha channel and ⁶⁰Co for the beta channel.
- **Dead Time:** Beta ≤3 µs, Alpha ≤80 µs
- **Energy Range:** Beta: 50 keV to 2.2 MeV, Alpha: 3 MeV to 8 MeV
- **Gamma Sensitivity for ¹³⁷Cs:** Beta 45 c/s per µGy/h
- **Background:** Ambient ≤100 nSv/h (10 µR/h): alpha ≤ 0,05 c/s (3 cpm), beta ≤ 10,0 c/s (600 cpm)
- **Cross Talk:** Alpha to Beta (²³⁹Pu) ≤5.0%, Beta to Alpha (⁹⁰Sr-⁹⁰Y) ≤0.1%

Norms:

- **EMC:** Conform
- **CE:** Meets CE requirements
- **IEC:** Type tested to IEC 60325-2002 (DOC025689)
- **ANSI:** Type tested to ANSI 42.17A-2003 (DOC025689)

Electrical:

- **Power:** Dual voltage with automatic selection supplied by survey meter or computer (+5 V or +3.3 V)
- **Battery Life:** 50 hrs approx. with AVIOR-2 meter operating on back-up battery (Backlight level 1, no alarm, one probe connected). 140 hrs approx. with RDS-32 powered with NiMH rechargeable batteries and 180 hrs with Alkaline batteries (No radio, backlight, LED, or alarm)

- **Consumption:** ≤25 mW. 5 mA maximum with 5 V power and 7.6 mA maximum with 3.3 V power

Ergonomic:

- **Display:** Provided by survey meter
- **Alarm Setpoints:** 10 values for each unit to display. Saved in probe memory. They can be changed with CSPA™ and PC. Default alarm threshold is chosen in a list by use of survey meter keypad
- **Connection:** CSP-EVO USB-C versatile interface

Mechanical:

- **Housing:** Molded ABS/PC easily decontaminable
- **Drop:** Tested from 1 meter height on concrete
- **Dimensions (Length x Width x Height):**
 - ABG-100 module alone: 187 x 84 x 71 mm (7.4 x 3.3 x 2.8 in.)
 - With RDS-I-HANDLE: 278 x 84 x 151 mm (10.9 x 3.3 x 5.9 in.)
 - With C-HANDLES: 278 x 84 x 121 mm (10.9 x 3.3 x 4.8 in.)
- **Weight:** ABG-100 alone: 370 g (13 oz), with RDS-I-HANDLE: 570 g (20.1 oz), with RDS-C-HANDLE or CSP-C-HANDLE: 640 g (22.6 oz)

Environment:

- **Operating Temperature:** -20 °C to +50 °C (-4 °F to +122 °F)
- **Storage Temperature:** -25 °C to +50 °C (-13 °F to +122 °F) device in shipping package
- **Relative Humidity:** 10% to 95% at 35 °C (95 °F)
- **Cleaning:** Housing easy to decontaminate
- **Ingress Protection:** ABG-100: IP53, RDS-I-HANDLE: IP54, RDS-C-HANDLE/CSP-C-HANDLE: IP64

ORDERING INFORMATION

- **ABG-100:** NOM008877
- **RDS-I-HANDLE (cable-free for RDS-32):** NOM008005
- **RDS-C-HANDLE (wired for RDS-32):** NOM008214
- **CSP-C-HANDLE (wired for CSP meter):** NOM008216
- **Calibration/Setup Software (CSPA):** CSPA-F (French, SI units): NOM006289 or CSPA-E (English, SI/US units): NOM006299

Detection efficiencies and MDAs with 100 cm² ISO 8769 sources in contact with probe:

Nuclide	Emitter	Typical efficiency over 2π (%)	Guaranteed efficiency over 2π (%)	Response to activity (c/s)/Bq	MDA (Bq)
²⁴¹ Am	Alpha	46	35	0.22	1.9
²³⁹ Pu	Alpha	46	35	0.20	2.1
⁹⁰ Sr+ ⁹⁰ Y	Beta	52	39	0.67	4.4
³⁶ Cl	Beta	51	38	0.31	9.5
¹³⁷ Cs	Beta + Gamma	46	35	0.29	10.3
⁶⁰ Co	Beta + Gamma	33	25	0.16	19
¹⁴ C	Beta	8	6	0.03	121.1

- **MDA:** Background = 0.01 c/s (Alpha), 6 c/s (Beta), measured during 100 s in a 0.1 µSv/h ambience

- Measuring time on source = 10 s
- **Statistic:** False alarm = 5% and non-detection = 5%




Copyright © 2026 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



SAB-250™

Alpha/Beta Probe

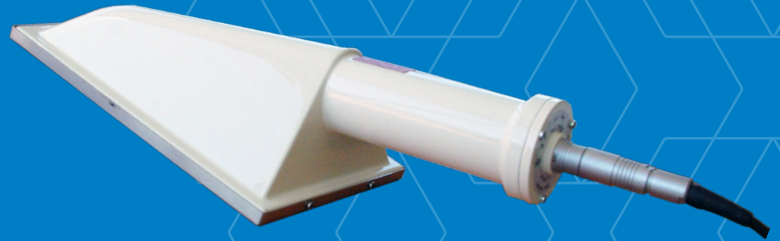

The SAB-250 probe is for measurement of surface contamination and designed to be used with any CSP™ survey meter. Its phoswich detector with 250 cm² detection area makes it an ideal tool for direct measurement of Alpha and Beta emitters covering applications like hand monitoring fixed station, workers body/clothes frisking, or large area check for dismantling operations.

DESCRIPTION

The SAB-250 probe includes a sensor for automatic background subtraction when docked on the wall mount, either in the fixed position for hand counting or in frisking mode.

The small body diameter is similar to other CSP probes and supports easy handling of the probe with less risk of dropping.

The SAB-250 probe can use two different entrance windows:

- SAB-250: Mylar 6 µm
- SAB-250/R: Mylar 6 µm with additional very thin grid to add more protection for harsh environments.



FEATURES

- ✓ Alpha/Beta surface contamination measurement
- ✓ 250 cm² Phoswich scintillation detector
- ✓ Belongs to CSP™ family
- ✓ Calibration via PC
- ✓ Easy removable grid for decontamination
- ✓ Ergonomic counting mode selector on probe body

SAB-250 probe is part of Canberra™ Smart Probe (CSP) family, that drives numerous benefits, such as plug and play capabilities and exceptional readiness for field operations. Please refer to the “hand-held probes” brochure for further details.



PHYSICAL CHARACTERISTICS

- Display units: c/s, Bq, Bq/cm², cpm, dpm, dpm/100 x cm² (depending on survey meter)
- Emitters: Alpha & Beta
- Detector: ZnS(Ag) adhered to 0.25 mm thick plastic scintillation material
- Detection area: 249 cm². Removable aluminized Mylar entrance window on metallic frame, thickness: 6 µm
- Protection grid transparency: 83%
- Measurement range:
 - 0 to 7 000 c/s, 0 to 420 kcpm
 - Activity equivalent range depends on calibration emitter
 - Conversion coefficients are factory set with Pu-239 for alpha channel and with Co-60 for beta channel
- Dead time: < 20 µs
- Energy range:
 - Alpha > 3 MeV
 - Beta > 150 keV
- Area response uniformity:
 - > 80% Alpha
 - ≥ 57% Beta
- Gamma sensitivity (Cs-137):
 - Alpha: < 0.3 c/s per µGy/h
 - Beta: < 70 c/s per µGy/h
- Neutron sensitivity (Cf-252):
 - Beta < 1 c/s per µSv/h
 - Alpha < 0.004 c/s per µSv/h
- Background (ambient < 100 nGy/h (10 µR/h):
 - Alpha < 0.1 c/s (< 6.0 cpm)
 - Beta < 35 c/s (< 600 cpm)
- Cross talk:
 - Alpha to Beta (Pu-239) < 15%
 - Beta to Alpha (Co-60) < 0.15%



ENVIRONMENTAL CHARACTERISTICS

- Temperature: -10 °C to +50 °C (+14 °F to +122 °F)
- Relative humidity: 40% to 93% at 35 °C
- Cleaning: housing easy to decontaminate
- Ingress protection: IP20

MECHANICAL CHARACTERISTICS

- Housing: stainless steel
- Protection grid: stainless steel
- Dimensions: length x width x height: 360 x 150 x 125 mm (14.2 x 5.9 x 4.9 in)
- Weight: < 1.2 kg (2.6 lb) without cable

NORMS

- EMC: Conform
- CE: Conform
- IEC: Built to meet IEC 60325:2004
- ANSI: Built to meet ANSI N42.17A

The wall mounting of the SAB-250 probe can be used with an automatic background subtraction, either in fixed position for Hand Counting, or in Frisking mode.

The operating mode is selected on the equipment menu.



ORDERING REFERENCES

- SAB-250: NOM006554 (EM104616)
- SAB-250/R: NOM006617 (EM106702)
- CSP Cable (1.5 m length): NOM006282 (EM77336)
- CSP Cable (10 m length): NOM006513 (EM99006)
- CSP Cable (20 m length): NOM006512 (EM98830)
- CSP Coil Cable (0.7-1.5 m extensible length): NOM006283 (EM77337)
- WRDS-31 Straight Cable (1.5 m length): 1233-319
- RDS-31 Coil Cable (0.7-1.6 m extensible length): 1233-320
- CSP-PC USB Cable: NOM006288 (EM78466)
- Calibration/Setup Software (CSPS): CSPS-F: NOM006289 (EM78468), CSPS-R: NOM006298 (EM80642), CSPS: NOM006299 (EM80643)

Detection efficiencies and MDAs with 100 cm² ISO 8769 sources in contact with probe

	Nuclide	Emitter	Typical efficiency over 2π (%)	Guaranteed efficiency over 2π (%)	Response to activity (c/s)/Bq	MDA (Bq)
SAB -250	Am-241	Alpha	44	33	0.21	3.8
	Pu-239	Alpha	40	30	0.18	4.3
	Co-60	Beta	16	12	0,08	28
	Cl-36	Beta	32	25	0.2	10
	Sr-90 + Y-90	Beta	40	31	0.19	10

MDA: Background = 0.02 c/s (alpha) and 7 c/s (beta), measured during 100 s in a 0.1 µGy/h ambience. Measuring time on source = 10 s

Statistic: false alarm = 5% and non-detection = 5%.



MIRION
TECHNOLOGIES

Copyright © 2023 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



MIRION
TECHNOLOGIES

SABP-525™

Foot Alpha/Beta Probe



DESCRIPTION

The SABP-525 probe for measurement of surface contamination is designed to be used with any CSP survey meter. Its phoswich detector with 525 cm² detection area makes it an ideal tool for direct measurement of Alpha and Beta emitters for workers foot check.

The SABP-525 includes a presence sensor. When it is connected to the AVIOR-2, and the worker's foot is correctly positioned on the probe, the net measurement starts.

An adequate probe angle is driven by a removable support to ensure comfortable control when probe is independently positioned on the floor.

RELATED PRODUCTS

- MIP-10 Digital
- MIP-2
- AVIOR™-2000™
- AVIOR™-2™
- Radiagem™ 2000
- Colibri®
- Or any computer based system developed with CSP-PL programming library

FEATURES

- ✓ Alpha/Beta surface contamination measurement
- ✓ ZnS(Ag) 525 cm² Phoswich plastic scintillation detector
- ✓ Belongs to CSP™ family
- ✓ Calibration via PC
- ✓ Easy removable grid for decontamination
- ✓ Ergonomic counting mode selector on probe body





PHYSICAL CHARACTERISTICS

- Display units: c/s, Bq, Bq/cm² (depending on survey meter)
- Emitters: alpha and beta
- Detector: plastic scintillator 0.25 mm thick, covered by ZnS(Ag) for alpha detection, mounted on a PMMA support 35 mm thick
- Detection area: 525 cm²
3 layers of aluminized Mylar® 0.4-0.45 mg/cm²
- Grid transparency:
Internal protective thin grid 0.25 mm thick: 80 %
External protective grid 3 mm thick: 91 %
- Measurement range: 0 to 7 000 c/s, 0 to 420 kcpm
- Activity equivalent range depends on calibration emitter.
Conversion coefficients are factory set with ²³⁹Pu for alpha channel and with ⁶⁰Co for beta channel
- Dead time: < 20 µs
- Energy range: alpha > 3 MeV, beta > 150 KeV
- Area response uniformity: > 60% alpha, ≥ 50% beta
- Gamma sensitivity (¹³⁷Cs)
Alpha: < 0.3 c/s per µGy/h, beta: < 150 c/s per µGy/h
- Background (ambient < 100 nGy/h (10 µR/h)):
Alpha < 0.1 c/s (< 6.0 cpm)
Beta < 20 c/s (< 1200 cpm)
- Cross talk:
Alpha to Beta (²³⁹Pu) < 30%
Beta to Alpha (⁶⁰Co) < 0.1%

ELECTRICAL CHARACTERISTICS


- Power: supplied by survey meter or PC (low voltage only): +5 V
- Consumption: < 100 mA

ENVIRONMENTAL CHARACTERISTICS

- Temperature: -10 °C to +45 °C (+14 °F to +113 °F)
- Relative humidity: 40% to 85% at 35 °C (+95 °F)
- Cleaning: housing easy to decontaminate
- Ingress protection: IP30

MECHANICAL CHARACTERISTICS

- Housing: painted aluminum
- Protection grid: stainless steel
- Dimensions: length x width x height: 485 x 220 x 215 mm (19 x 8.6 x 8.5 in.)
- Weight: < 10 kg (22 lb) without cable

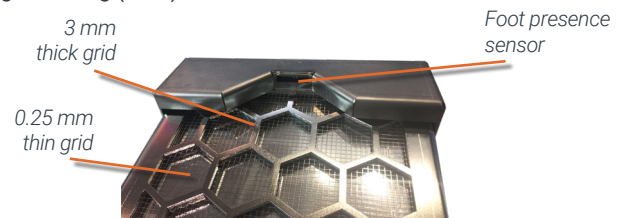

ERGONOMIC CHARACTERISTICS

- Display: provided by survey meter
- Alarm setpoints: 10 values for each unit to display. Saved in probe memory. They can be edited with CSPS software on PC or with AVIOR-2 or Colibri.
- Default alarm threshold is chosen in the list by use of survey meter keypad.

NORMS

- EMC: conform
- CE: conform
- IEC: built to meet IEC 60325:2004
- ANSI: built to meet ANSI N42.17A

Detection efficiencies and MDAs with 100 cm² ISO 8769 sources in contact with probe

	Nuclide	Emitter	Typical efficiency over 2π (%)	Guaranteed efficiency over 2π (%)	Response to activity (c/s)/Bq	MDA (Bq)
SABP-525	²⁴¹ Am	Alpha	19	15	0.1	5.7
	²³⁹ Pu	Alpha	18	14	0.09	6.4
	⁶⁰ Co	Beta	17	14	0.09	70
	³⁶ Cl	Beta	28	24	0.18	37
	⁹⁰ Sr + ⁹⁰ Y	Beta	32	27	0.2	32

MDA: Background = 0.02 c/s (alpha) and 7 c/s (beta) measured over 100 s in a 0.1 µGy/h ambience. Measuring time on source = 10 s

Statistic: false alarm = 5% and non-detection = 5%.



MIRION
TECHNOLOGIES

Copyright © 2024 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



Tele-STTC-2™

Wide Range Gamma Telescopic Probe



The compact size, exceptionally light weight, and easy-to-deploy mechanism of the Tele-STTC-2 make this probe an ideal tool for measurement of areas that are difficult to access or require remote measurement high exposure areas.

DESCRIPTION

Tele-STTC-2 supports ALARA principles by allowing the operator to obtain measurements both quickly and at increased distances, due to its maneuverability.

Tele-STTC-2 requires minimal space when packed and the pole can be extended with secured 1/4 turn rings for each extension segment.

Molded rings are added to original locking rings to facilitate handling (except on Tele-STTC-2L/R31 model). The unit is so lightweight that even when unfolded, it doesn't need to be offset, and the pole and meter can be used together even for short range measurements.

The meter remains at the user's eye level even when the pole is opened.

A shoulder strap can be used to secure Tele-STTC-2 when used in the open position or simply to keep it attached while being carried. The unit consists of a detector integrated on a telescopic carbon fiber-based pole on which a meter is attached by a connecting clip. The meter is removable and can therefore be used independently. Tele-STTC-2 can be used with the Radiagem™.



FEATURES

- ✓ Telescopic pole with H*(10) ambient gamma dose equivalent rate measurement probe
- ✓ Gamma dose rate measurement up to 10 Sv/h (1000 rem/h)
- ✓ Energy-compensated Geiger Mueller detector
- ✓ Remote measurement up to 4.09 m (13.4 ft)
- ✓ Compact size when folded
- ✓ Extremely lightweight and rugged
- ✓ Integrated cable for meter
- ✓ Calibrated via a personal computer (PC) which enables the direct generation of electronic format calibration data. Eliminates the need for paper and transcription errors

Colibri® or RDS-31™ personal survey meters, which are not included. The detector integrated into the Tele-STTC-2 is designed for gamma dose equivalent rate measurement and extends the distance from the radiation source when used with the selected survey meter. It uses the time-to-count algorithm from CANBERRA, hence enabling a unique range of measurement with only one Geiger Mueller detector. By using only one detector, the Tele-STTC-2 offers a better angular response than any other probe with an equivalent measurement range and comes in a smaller form factor. Additionally, the multiple detector switching effect present with other instruments is not an issue for the Tele-STTC-2. The Tele-STTC probe's firmware can be upgraded via CUPS, with the USB – PC cable and a PC.

TELE-STTC-2™ WIDE RANGE GAMMA TELESCOPIC PROBE

NUCLEAR CHARACTERISTICS

- **Display units** sv/h, sv or rem, rem/h depending on
 - survey meter connected
 - $H^*(10)$ ambient gamma dose equivalent rate according to CIPR60
- **Emitters:** gamma
- **Detector:** energy compensated geiger mueller
- **Sensitivity:** 0.74 c/s for $\mu\text{sv/h}$ (Cs-137)
- **Measurement range:** 0.1 $\mu\text{sv/h}$ to 10 sv/h (10 $\mu\text{rem/h}$ to 1000 rem/h).
- **IEC approved measurement range:** 0.7 $\mu\text{sv/h}$ to 10 sv/h (70 $\mu\text{rem/h}$ to 1000 rem/h)
- **IEC energy range:** gamma 36 keV to 1.5 MeV.
- **6.2 MeV response to true Dose Equivalent Rate:** 1.5
- **Background:** ambient $<0.1 \mu\text{gy/h}$ (10 $\mu\text{r/h}$) 0.10 c/s
- **Maximum integrated dose:** approximately 500 sv

ERGONOMIC

- **Display:** 1 provided by survey meter or PC
- **Alarm setpoints:** 10 values for each unit to display. Saved in probe memory. They can be changed with CSPA and PC

ELECTRICAL

- **Power:** supplied by survey meter (low voltage only)
- **Consumption:** 9 mA to 40 mA depending on dose rate.

MECHANICAL CHARACTERISTICS

- **Probe housing:** aluminium.
- **Pole:** carbon fiber and stainless steel (meter stand).
- **Storage:** storage case for Tele-STTC-2 is included
- **Dimensions:**
 - Closed pole: 1080 mm (3.54 ft)
 - Opened pole: 4090 mm (13.4 ft)
- **Weight:** 11.7 kg (3.75 lb) without meter
- **Storage case:** included

ENVIRONMENT

- **Temperature:** -10 °C to +50 °C (+14 °F to +122 °F)
- **Relative humidity:** 40% to 95% at 35°C
- **Cleaning:** housing easy to decontaminate
- **Ingress protection:** IP54

NORM

- **EMC:** conform
- **CE:** meets CE requirements
- **IEC:** designed to meet IEC 60846

ORDERING REFERENCES

- Tele-STTC-2/R2000 (for Radiagem) NOM006621 (EM106943)
- Tele-STTC-2/C (for Colibri) NOM006620 (EM106942)
- Tele-STTC-2/R31 (For RDS-31) NOM006622 (EM106944)
- Tele-STTC-2L/R31 (For RDS-31, pole without additional molded ring) NOM006673 (EM108412)
- CSP-PC USB cable NOM006288 (EM78466)
- Calibration/Setup Software (CSPA):
 - CSPA-F: NOM006289 (EM78468)
 - CSPA-R: NOM006298 (EM80642)
 - CSPA-E: NOM006299 (EM80643)

Note: Radiagem, RDS-31 and Colibri are not included with Tele-STTC-2 and should be ordered separately.



Tele-STTC-2
with Colibri




Copyright © 2024 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



SA-32™

CSP Alpha Contamination Probe

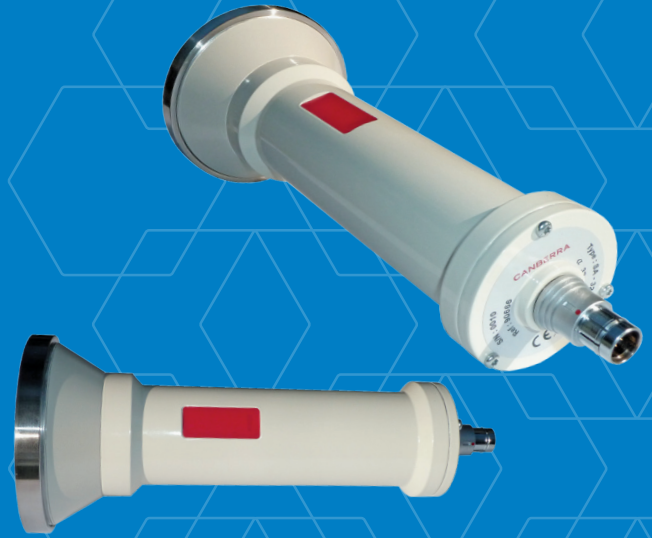

DESCRIPTION

The SA-32 probe for measurement of surface contamination is designed to be used with CSP meter such as Radiagem™ meter, MIP-10 Digital™ meter, Avior® or Colibri® devices. Its ZnS(Ag) detector with 32 cm² detection area makes it an ideal tool for direct measurement of alpha emitters on glove boxes, small areas and for personal self control, allowing to check worker's arm in only one pass.

The sensitivity to gamma and/or neutron dose-rate has been reduced to minimize the risk of false positive alarm even in high dose rate environment. The probe body diameter has been reduced to facilitate general handling and reduce the risk of drops.

The SA-32 probe is part of the Canberra™ SMART Probe (CSP) family. It includes all key components of hardware circuitry (high voltage power supply, amplifier, discriminator, etc.) Also, the intelligence associated with controlling those components is located in the probe – that is control and storage of key parameters, settings, calibrations, probe ID, alarm settings (10 values for each unit to display with default setting), etc. Thus the probe is a fully integrated subsystem taking and transmitting the measurement to the instrument, which is used for display.

With high voltage and digitization of the data occurring in the probe rather than the instrument, measurement quality is no longer dependent on external device quality (cable, host instrument). Moreover, a CSP probe is using a serial protocol to communicate with host, which can be an instrument or a PC.

Calibration and QA measurements can be performed directly with the probe, without using any instrument, by connecting the probe to a computer with Canberra Smart Probe Software (CSPS™), allowing your instruments to remain deployed in the field.

Once calibrated, the SA-32 probe is ready to be used as a plug and play probe to start a QA measurement in CPM, DPM, DMP/100 cm² with a Radiagem™ 4000 meter; or c/s, Bq, Bq/cm² with a Radiagem 2000 meter. The SA-32 probe connects to the CSP instrument connector via a CSP cable of various length or via CSP-COM™ communication module to either a Colibri device (Bluetooth® technology) or host system (Wi-Fi, RS-485, Ethernet; RF with specific RF receiver) and becomes a sub assembly of a larger system.

FEATURES

- ✓ Alpha surface contamination measurement
- ✓ 32 cm² ZnS(Ag) scintillation detector
- ✓ Belongs to CSP™ family
- ✓ Calibration via PC software
- ✓ Robust screwed-on grid simple to decontaminate
- ✓ Easy to change scintillator
- ✓ Very low sensitivity to neutron and gamma field

SA-32™ CSP ALPHA CONTAMINATION PROBE



The SA-32 probe includes a hand screwed protection grid that is very easy to remove for decontamination. When the grid is detached, the scintillator becomes available for replacement if necessary, reducing the time to service.

The SA-32 probe is able to store up to 1000 data points from a data-logging procedure handled via the host instrument. These data are: index, date/time, measurement value, selected unit and counting time.


The SA-32 unit can be upgraded (probe's firmware) via CSPA software, a USB cable and a PC.

NUCLEAR CHARACTERISTICS

- Display units: depending on survey meter (c/s, Bq, Bq/cm² with SI CSP instrument and CPM, DPM, DPM/100 cm² with American CSP instruments)
- Emitters: alpha
- Detector: ZnS(Ag) coating on 3 mm thick neutral plastic material
 - Detection area: 32 cm² (total diameter = 70 mm, sensitive diameter = 64 mm)
 - Adhered aluminium/Mylar film on detector entrance surface, thickness: 1.8 µm
 - Protection grid transparency: 89%
- Measurement range: 0 to 10 000 c/s, 0 to 600 kcpm. Activity equivalent range depends on calibration emitter. Conversion coefficient is factory set with ²³⁹Pu
- Dead time: 50 µs
- Energy range: alpha > 3 MeV
- Surface detection uniformity: better than 50% of the highest efficiency point
- Gamma sensitivity (¹³⁷Cs): < 0.0001 c/s/µSv/h
- Neutron sensitivity (²⁵²Cf): < 0.002 c/s/µSv/h
- Background:
 - Ambient ≤ 100 nSv/h (10 µR/h) – < 0.01 c/s (<0.6 cpm)
 - Beta influence (⁹⁰Sr-⁹⁰Y) – < 0.01%

ERGONOMIC CHARACTERISTICS

- Display: provided by survey meter or host system
- Alarm setpoints: 10 values for each unit to display. Saved in probe memory. They can be changed with the CSPA platform and a PC. Default alarm threshold is chosen in a list by use of the survey meter's keypad.

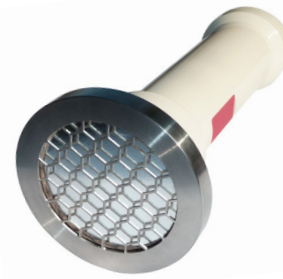

ELECTRICAL CHARACTERISTICS

- Power: +5 V supplied by host instrument (low voltage only)
- Consumption: 15 mA maximum

ENVIRONMENTAL CHARACTERISTICS

- Temperature: -10 °C to +45 °C (+14 °F to +113 °F)
- Relative humidity: 40% to 85% at 35 °C
- Cleaning: housing easy to decontaminate
- IP20

MECHANICAL CHARACTERISTICS

- Housing: painted aluminum
- Protection grid: stainless steel
- Dimensions: length (with connector) x diameter (detector) x diameter (body): 225 x 85 x 55 mm (8.8 x 3.3 x 2.2 in.)
- Weight: 678 g (24 oz) without cable

NORMS

- CEM: conforms
- CE: meets CE requirements
- IEC: designed to meet IEC 60325:2004
- ANSI: designed to meet ANSI N42.17A

ORDERING REFERENCES

- SA-32 unit: NOM006413 (EM90666)
- CSP cable (1.5 m length): NOM006282 (EM77336)
- CSP cable (10 m length): NOM006365 (EM85920)
- CSP cable (20 m length): NOM006300 (EM80653)
- CSP-PC USB cable: NOM006288 (EM78466)
- CSP coil cable (0.7 to 1.5 meter extension): NOM006283 (EM77337)
- CSPA calibration/setup software:
 - CSPA-F: NOM006289 (EM78468)
 - CSPA-R: NOM006298 (EM80642)
 - CSPA-E: NOM006299 (EM80643)

Detection efficiencies and MDAs with 100 cm² ISO 8769 sources in contact with probe

	Nuclide	Emitter	Typical efficiency over 2π (%)	Guaranteed efficiency over 2π (%)	Response to activity (c/s)/Bq	MDA (Bq)
SA-32	²⁴¹ Am	Alpha	37	35	0.17	0.62
	²³⁹ Pu	Alpha	42	40	0.20	0.55

MDA: Background = 0.01 c/s measured during 100 s in a 0.1 µGy/h ambience. Measuring time on source = 10 s

Statistic: false alarm = 5% and non-detection = 5%. MDA are calculated using the formula recommended by IEC 60325-2004.



MIRION
TECHNOLOGIES


Copyright © 2024 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



PORTABLE RADIATION MEASUREMENT

SB-32TM

Beta Contamination Probe

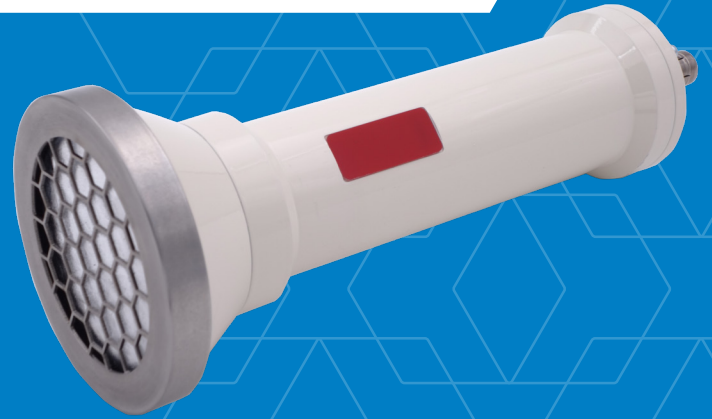

The SB-32 probe for measurement of surface contamination is designed to be used with any CSPTM survey meter or any computer-based system developed within CSP environment. The plastic scintillation detector has a 32 cm² detection area.

DESCRIPTION

The SB-32 probe is the ideal tool for direct measurement of beta emitters on glove boxes, small areas and for personal self control, allowing to check worker's arm in one pass only. Such a well-defined detection area helps to reduce the background noise and improves the Minimal Detectable Activity to better localize contamination spots. The probe body diameter has been reduced to facilitate general handling and reduce the risk of drops.

Entrance grid has been optimized with ideal balance between open area and detector to grid distance to allowing good efficiency and best detector protection. It is hand screwed on the probe body and very easy to remove for decontamination or Aluminium window foil replacement.

Calibration and QA measurements can be performed directly with the probe, without even using any instrument, by connecting the probe to a computer with Canberra Smart Probe Software (CSPSTM), allowing your instruments to remain deployed in the field. It can also be connected via CSP-COM modules to integrate third party system and behave as a contamination sensor sub-assembly.

SB-32 probe can be upgraded (probe's firmware) via CSPSTM software, a USB cable and a PC.

FEATURES

- ✓ Beta surface contamination measurement
- ✓ 32 cm² Plastic/ZnS Phoswich scintillation detector
- ✓ Calibration via PC software
- ✓ Robust screwed-on grid simple to decontaminate
- ✓ Easy to change scintillator

SB-32 probe is part of CanberraTM Smart Probe (CSPTM) family, that drives numerous benefits, such as plug and play capabilities and exceptional readiness for field operations. Please refer to the "hand-held probes" brochure for further details.

Specifications and Performance

NUCLEAR

Unit to display: depending on survey meter (c/s, Bq_{eq}, Bq_{eq}/cm² with SI CSP instrument and CPM, DPM, DPM/100cm² with American CSP instruments)

Emitter: Beta

Detector: Plastic scintillator of 0.25 mm thickness

Detection area: 32 cm² (total diameter = 70 mm, sensitive diameter = 64mm)

Aluminium window made of two layers of 12 µm placed on detector entrance surface, total thickness: 24 µm

Protection grid transparency: 89 %

Measurement range: 0 to 10,000 c/s, 0 to 600 kcpm. Activity equivalent range depends on calibration emitter. Conversion coefficient is factory set with Co-60.

Dead time: 2 µs

Energy range: Beta >150 KeV

Surface detection uniformity: ≥60 % of the highest efficiency point

Gamma sensitivity (¹³⁷Cs) : Beta : ≤10 c/s/µSv/h

Neutron sensitivity (²⁵²Cf) : Beta ≤1,0 c/s/µSv/h

Background : ambient ≤ 100 nGy/h (10 µR/h): < 3 c/s (<180 cpm)

Alpha influence (²³⁹Pu) : ≤ 1%

ERGONOMIC

Display : provided by survey meter or host system

Alarm setpoints : 10 values for each unit to display. Saved in probe memory. They can be changed with CSPS and PC. Default alarm threshold is chosen in a list by use of survey meter keypad.

ELECTRICAL

Power: +5V supplied by host instrument (low voltage only)

Consumption: 15 mA maximum.

MECHANICAL

- **Housing:** painted aluminium
- **Protection grid:** Stainless steel
- **Dimensions:** Length (with connector) x diameter (detector) x diameter (body): 225 x 85 x 55 mm (8.8 x 3.3 x 2.2 in.)
- **Weight:** 678 g (24 oz) without cable

ENVIRONMENTAL

- **Temperature:** -10 °C to + 45 °C
- **Relative humidity :** 40% to 85% at 35°C
- **Cleaning:** housing easy to decontaminate
- **Ingress protection:** IP20

NORMS

- **EMC:** conform
- **CE:** meets CE requirements
- **IEC:** designed to meet IEC 60325:2004
- **ANSI:** designed to meet ANSI N42.17A

ORDERING REFERENCES

- SB-32 : NOM006499 (EM97330)
- CSP Straight Cable (1.5 m length) : NOM006282 (EM77336)
- CSP Straight Cable (10 m length): NOM006513 (EM99006)
- CSP Straight Cable (20 m length): NOM006512 (EM98830)
- CSP Coil Cable (0.7-1.5 m extensible length): NOM006283 (EM77337)
- RDS-31/32 Straight Cable (1.5 m length):1233-319
- RDS-31/32 Coil Cable (0.7-1.6 m extensible length: 1233-320
- CSP-PC USB cable : NOM006288 (EM78466)
- Calibration/Setup Software (CSPS) :
- CSPS-F: NOM006289 (EM78468)

Detection efficiencies and MDAs with 100 cm2 ISO 8769 sources in contact with probe

	Nuclide	Emitter	Typical efficiency over 2π (%)	Guaranteed efficiency over 2π (%)	Response to activity (c/s)/ Bq	MDA
SB-32	Co-60	Beta + Gamma	17	13	0.09	13.6
	Cl-36	Beta	41	31	0.26	4.90
	Sr-90/Y-90	Beta	41	31	0.26	4.77

MDA: Background = 0.7 c/s (Beta) and 0.01 c/s (Alpha) measured during 100s in a 0.1 µGy/h ambience.
Measuring time on source = 10s.
Statistic: false alarm = 5% and non-detection = 5%
MDA are calculated using the formula recommended by IEC 60325-2004






Copyright © 2023 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



SAB-32™

Alpha/Beta Contamination Probe

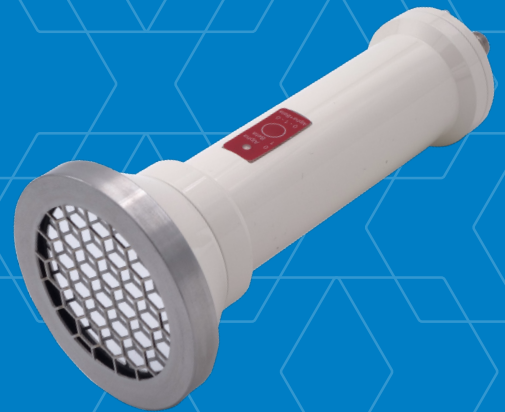

The SAB-32 probe for measurement of surface contamination is designed to be used with any CSP™ survey meter or any computer-based system developed within CSP environment. Its plastic/ZnS phoswich scintillation detector has a 32 cm² detection area.

DESCRIPTION

The SAB-32 probe is the ideal tool for direct measurement of alpha and beta emitters on glove boxes, small areas and for personal self control, allowing to check worker's arm in one pass only. Such a well-defined detection area helps to reduce the background noise and improves the Minimal Detectable Activity to better localize contamination spots. The probe body diameter has been reduced to facilitate general handling and reduce the risk of drops.

A push-button located on the probe housing selects the counting mode. When pressed, the probe switches to the next mode in a list of three and the LED is activated accordingly: alpha only – LED off, beta only – LED on and Alpha+beta – LED blinking. It is a powerful feature for the user to avoid the need to look back on the instrument when changing the mode.

Entrance grid has been optimized with ideal balance between open area and detector to grid distance to allowing good efficiency and best detector protection. It is hand screwed on the probe body and very easy to remove for decontamination or Mylar window foil replacement.

Calibration and QA measurements can be performed directly with the probe, without even using any instrument, by connecting the probe to a computer with Canberra Smart Probe Software (CSPS™), allowing your instruments to remain deployed in the field. It can also be connected via CSP-COM modules to integrate third party system and behave as a contamination sensor sub-assembly.

SAB-32 probe can be upgraded (probe's firmware) via CSPS™ software, an USB cable and a PC.

FEATURES

- ✓ Alpha/beta surface contamination measurement
- ✓ 32 cm² plastic/ZnS Phoswich scintillation detector
- ✓ Ergonomic counting mode selector on probe body
- ✓ Calibration via PC software
- ✓ Easy to change scintillator
- ✓ Robust screwed-on grid simple to decontaminate

SAB-32 probe is part of Canberra™ Smart Probe (CSP™) family, that drives numerous benefits, such as plug and play capabilities and exceptional readiness for field operations. Please refer to the "hand-held probes" brochure for further details.



SAB-32™ ALPHA/BETA CONTAMINATION PROBE

PHYSICAL CHARACTERISTICS

- Unit to display: depending on survey meter (c/s, Bq, Bq/cm² with SI CSP instrument and CPM, DPM, DPM/100 cm² with American CSP instruments)
- Emitter: alpha and beta
- Detector: ZnS(Ag) adhered to 0.25 mm thick plastic scintillation material
 - Detection area: 32 cm² (total diameter = 70 mm, sensitive diameter = 64 mm)
 - Mylar window made of two layers of 3 µm placed on detector entrance surface, total thickness: 6 µm
 - Protection grid transparency: 89%
- Measurement range: 0 to 10,000 c/s, 0 to 600 kcpm. Activity equivalent range depends on calibration emitter. Conversion coefficient is factory set with ⁶⁰Co for beta and ²³⁹Pu for alpha.
- Energy range: beta above 150 KeV and alpha above 3 MeV
- Dead time: 2 µs
- Surface detection uniformity: better than 60% of the highest efficiency point
- Gamma sensitivity (¹³⁷Cs):
 - Beta < 10 c/s/µSv/h
 - Alpha < 0.005 c/s/µSv/h
- Neutron sensitivity (²⁵²Cf):
 - Beta < 5.0 c/s/µSv/h
 - Alpha < 0.05 c/s/µSv/h
- Background:
 - Ambient ≤ 100 nGy/h (10 µR/h):
 - Beta < 1 c/s (60 cpm)
 - Alpha < 0.01 c/s (0.6 cpm)
- Cross talk:
 - Alpha to Beta (²³⁹Pu) < 5%
 - Beta to Alpha (⁹⁰Sr, ⁹⁰Y) < 0.1%

ELECTRICAL CHARACTERISTICS

- Power: +5V supplied by host instrument (low voltage only)
- Consumption: 15 mA maximum

ERGONOMIC CHARACTERISTICS

- Display: 1 provided by survey meter or host system
- Alarm setpoints: 10 values for each unit to display. Saved in probe memory. They can be changed with CSPS and PC.
- Default alarm threshold is chosen in a list by use of survey meter keypad

ENVIRONMENTAL CHARACTERISTICS

- Temperature: -10 °C to +45 °C (+14 °F to +113 °F)
- Relative humidity: 40% to 85% at 35 °C
- Cleaning: housing easy to decontaminate
- Ingress protection: IP20

MECHANICAL CHARACTERISTICS

- Housing: painted aluminium
- Protection grid: stainless steel
- Dimensions: length (with connector) x diameter (detector) x diameter (body): 225 x 85 x 55 mm (8.8 x 3.3 x 2.2 in)
- Weight: 1678 g (24 oz) without cable

NORMS

- EMC: conform
- CE: meets CE requirements
- EC: designed to meet IEC 60325:2004
- ANSI: designed to meet ANSI N42.17A

ORDERING REFERENCES

- SAB-32: NOM006514 (EM99378)
- CSP straight cable (1.5 m length): NOM006282 (EM77336)
- CSP straight cable (10 m length): NOM006513 (EM99006)
- CSP straight cable (20 m length): NOM006512 (EM98830)
- CSP coil cable (0.7-1.5 m extensible length): NOM006283 (EM77337)
- RDS-31 straight cable (1.5 m length): 1233-319
- RDS-31 coil cable (0.7-1.6 m extensible length): 1233-320
- CSP-PC USB cable: NOM006288 (EM78466)
- Calibration/setup software (CSPS):
 - CSPS-F: NOM006289 (EM78468)
 - CSPS-R: NOM006298 (EM80642)
 - CSPS-E: NOM006299 (EM80643)

Detection efficiencies and MDAs with 100 cm² ISO 8769 sources in contact with probe

	Nuclide	Emitter	Typical efficiency over 2π (%)	Guaranteed efficiency over 2π (%)	Response to activity (c/s)/Bq	MDA (Bq)
SAB-32	²⁴¹ Am	Alpha	48	36	0.20	0.50
	²³⁹ Pu	Alpha	48	36	0.22	0.49
	⁶⁰ Co	Beta + Gamma	15	11	0.08	10
	³⁶ Cl	Beta	35	26	0.22	3.8
	⁹⁰ Sr + ⁹⁰ Y	Beta	35	26	0.22	3.8

MDA: Background = 1.5 c/s measured during 100s in a 0.1 µGy/h ambience. Measuring time on source = 10 s

Statistic: false alarm = 5% and non-detection = 5%. MDA are calculated using the formula recommended by IEC 60325-2004




MIRION
TECHNOLOGIES

Copyright © 2024 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



SA-100™

Alpha Probe

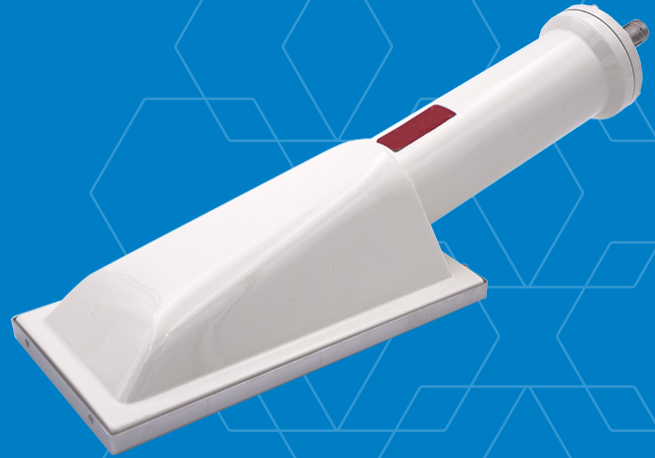

The SA-100 probe for measurement of surface contamination is designed to be used with any compatible CSP survey meter. Its ZnS(Ag) detector with 100 cm² detection area makes it an ideal tool for direct measurement of alpha emitter, covering applications like working station contamination check, workers body/clothes frisking or large area check for free release approval. The probe body diameter has been reduced to facilitate general handling and reduce the risk of drops.

DESCRIPTION

Calibration and QA measurements can be performed directly with the probe, without using an instrument, by connecting the probe to a computer with CANBERRA Smart Probe Software (CSPS™), allowing your instruments to remain deployed in the field. It can also be connected via CSP-COM modules to integrate third party system and behave as a contamination sensor sub-assembly.

Once calibrated, SA-100 probe is ready to be used as a plug and play probe to start a QA measurement in CPM, DPM, DPM/100 cm² with US units survey meters; or c/s, Bq, Bq/cm² with SI units survey meters.


A SA-100 probe includes a protection grid that is very easy to remove for decontamination purpose. Even with the grid detached, the probe remains operational and the whole assembly stays light tight. The entrance window is attached on a removable metallic frame that is fixed on the probe body with flat screws and is quickly changed, reducing the service time.

The SA-100 probe can be upgraded (probe's firmware) via CSPS, a USB cable and a PC.

FEATURES

- ✓ Alpha surface contamination measurement
- ✓ 100 cm² ZnS(Ag) scintillation detector
- ✓ Belongs to CSP™ family
- ✓ Calibration via PC
- ✓ Easy removable grid for decontamination

SA-100 probe is part of Canberra™ Smart Probe (CSP™) family, that drives numerous benefits, such as plug and play capabilities and exceptional readiness for field operations. Please refer to the "hand-held probes" brochure for further details.

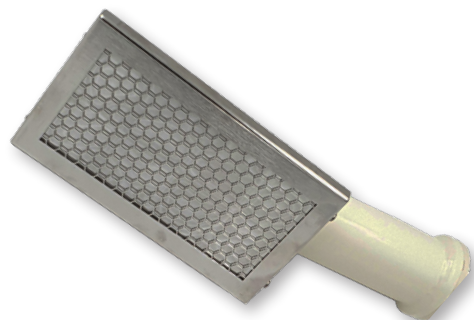



SPECIFICATIONS

NUCLEAR

- **Unit to display:** Depending on survey meter (c/s, Bq, Bq/cm² with SI units survey meters and CPM, DPM, DPM/100 cm² with US units survey meters).
- **Emitters:** Alpha
- **Detector:** ZnS(Ag) adhered to 0.25 mm thick neutral plastic material
- **Detection area:** 102 cm² (68 x 150 mm)
- Removable aluminized MylarR entrance window on metallic frame, thickness - 6 µm
- Protection grid transparency - 83 %
- **Measurement range:** 0 to 10000 c/s, 0 to 600 kcpm. Activity equivalent range depends on calibration emitter. Conversion coefficient is factory set with ²³⁹Pu
- **Dead time:** 2 µs
- **Energy range:** Alpha > 3 MeV
- **Background:** Ambient ≤100 nSv/h (10 µR/h): <0.01 c/s (< 0.6 cpm)
- **Sunlight effect:** No effect up to 80 000 lux.
- **Crosstalk:** Beta to Alpha (90Sr-90Y) < 0.01%.

ERGONOMIC

- **Display:** provided by survey meter
- **Alarm Setpoints:** 10 values for each unit to display. Saved in probe memory. They can be edited with CSPS and PC.
- **Default alarm threshold** is chosen in a list by use of survey meter’s keypad.

ELECTRICAL

- **Power:** supplied by survey meter or PC (low voltage only): +5 V.
- **Consumption:** 15 mA maximum.

MECHANICAL

- **Housing:** painted aluminum
- **Dimensions:** length (with connector) x width (detector) x height (detector): 318.5 x 99 x 102 (12.5 x 3.9 x 4 in)
- **Weight:** 710 g (25 oz) without cable

ENVIRONMENT

- **Temperature:** -20 °C to +50 °C (-4 °F to 122 °F)
- **Relative humidity:** 10% to 93% at 35°C
- **Cleaning:** housing easy to decontaminate
- IP20

NORM

- **EMC:** conforms
- **CE:** meets CE requirements.
- **IEC60325:** meets standard requirements

ORDERING REFERENCES

- SA-100 - NOM006273 (EM75863)
- CSP Cable (1.5 m lenght) - NOM006282 (EM77336)
- CSP Cable (10 m lenght) - NOM006513 (EM99006)
- CSP Cable (20 m lenght) - NOM006512 (EM98830)
- CSP Coil Cable (0.7-1.5 m extensible length): NOM006283 (EM77337)
- RDS-31 Straight Cable (1.5 m length): 1233-319
- RDS-31 Coil Cable (0.7-1.6 m extensible length): 1233-320
- CSP-PC USB Cable - NOM006288 (EM78466)
- Calibration/Setup Software (CSPS) - CSPS-F: NOM006289 (EM78468), CSPS-R: NOM006298 (EM80642), CSPS-E: NOM006299 (EM80643)

Detection efficiencies and MDAs with 100 cm² ISO 8769 sources in contact with probe

Nuclide	Emitter	Typical efficiency over 2π (%)	Guaranteed efficiency over 2π (%)	Response to activity (c/s)/Bq	MDA (Bq)
Am-241	Alpha	44	33	0.14	0.77
Pu-239	Alpha	44	33	0.16	0.70

MDA: Background = 0.01 c/s measured over 100 s in a 0.1 µGy/h ambience.
Measuring time on source = 10 s.
Statistic: false alarm = 5% and non-detection = 5%.

All other trademarks are the property of their respective owners.

CSP and CSPS are trademarks and/or registered trademarks of Mirion Technologies, Inc.
and/or affiliates in the United States and/or other countries.



MIRION
TECHNOLOGIES

Copyright © 2024 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



SB-100™

Beta Probe



The SB-100 probe for measurement of surface contamination is designed to be used with any CSP survey meter. Its thin plastic scintillation detector with 100 cm² detection area makes it an ideal tool for direct measurement of beta emitters, covering applications like working station contamination check, workers body/clothes frisking or large area check for free release approval. The probe body diameter has been reduced to facilitate general handling and reduce the risk of drops.

DESCRIPTION

Calibration and QA measurements can be performed directly with the probe, without using an instrument, by connecting the probe to a computer with CANBERRA Smart Probe Software (CSPS™), allowing your instruments to remain deployed in the field. It can also be connected via CSP-COM modules to integrate third party system and behave as a contamination sensor sub-assembly.

Once calibrated, the SB-100 unit is ready to be used as a plug and play probe to start a QA measurement in CPM, DPM, DPM/100 cm² or c/s, Bq, Bq/cm². The SB-100 probe connects to the survey meter via a 1.5 meter to 20 meter CSP cable.

SB-100 unit includes a protective grid that is very easy to remove for decontamination. Once the grid is detached, the probe remains operational and the whole assembly stays light tight. The entrance window is attached on a removable metallic frame that is fixed on probe body with flat screws, making it easy to change, reducing the time to service.

The SB-100 probe can use 3 different entrance windows:

- SB-100/B: Aluminum that guarantees a very good alpha rejection
- SB-100/A: Mylar that improves beta efficiency but also detects alpha particles
- SB-100/AR: Mylar with additional very thin grid to add more protection for harsh environment.

The SB-100 probe can be upgraded (probe's firmware) via CSPS software, a USB cable and a PC.

FEATURES

- ✓ Beta surface contamination measurement
- ✓ 100 cm² thin plastic scintillation detector
- ✓ Belongs to CSP™ family
- ✓ Calibration via PC
- ✓ Easy removable grid for decontamination
- ✓ Rugged version for harsh environments

SB-100 probe is part of Canberra Smart Probe (CSP™) family, that drives numerous benefits, such as plug and play capabilities and exceptional readiness for field operations. Please refer to the "hand-held probes" brochure for further details.





SB-100™ BETA PROBE

NUCLEAR CHARACTERISTICS

- Display units: depending on survey meter (c/s, Bq, Bq/cm² or CPM, DPM, DPM/100 cm²)
- Emitters: beta
- Detector: 0.25 mm thick plastic scintillation detector adhered to 3 mm thick neutral plastic material (PMMA).
 - Detection area: 102 cm² (68 x 150 mm)
 - Removable entrance window:
 - SB-100/A: aluminized Mylar window on metallic frame, thickness: 9 mm
 - SB-100/B: aluminium window on metallic frame, thickness: 24 µm
 - SB-100/AR: mylar window with additional thin grid on metallic frame, thickness: 9µm
 - Protection grid transparency: 83%
- Measurement range: 0 to 10000 c/s, 0 to 600 kcpm. Activity equivalent range depends on calibration emitter. Conversion coefficient is factory set with ⁶⁰Co.
- Dead time: 2 µs
- Energy range: SB-100/A(R): beta > 50 keV, SB-100/B: beta > 150 keV
- Gamma sensitivity for ¹³⁷Cs ≤ 25 c/s/ µGy/h
- Background:
 - Ambient ≤100 nSv/h (10 µR/h): < 4 c/s (<24 cpm)
 - Alpha influence (²³⁹Pu): SB-100/B < 1%, SB-100/A

ELECTRICAL CHARACTERISTICS

- Power: supplied by survey meter (low voltage only)
- Consumption: 15 mA maximum.

ERGONOMIC CHARACTERISTICS

- Display: provided by survey meter
- Alarm setpoints: ten values for each unit to display. Saved in probe memory. They can be changed with CSPS software and PC. Default alarm threshold is chosen in a list by use of survey meter's keypad.

ENVIRONMENTAL CHARACTERISTICS

- Temperature: -20 °C to +50 °C (-4 °F to 122 °F) use and storage
- Relative humidity: 10% to 93% at 35° C
- Cleaning: Housing easy to decontaminate
- IP20

MECHANICAL CHARACTERISTICS

- Housing: painted aluminum
- Dimensions: length (with connector) x width (detector) x height: 318.5 x 99 x 102 (12.5 x 3.9 x 4 in)
- Weight: 710 g (25 oz) without cable

NORMS

- EMC: conforms
- CE: meets CE requirements
- IEC 60325: meets standard requirements

ORDERING REFERENCES

- SB-100/A: NOM006272 (EM75862)
- SB-100/B: NOM006309 (EM82069)
- SB-100/AR: NOM006388 (EM87891)
- CSP cable (1.5 m length): NOM006282 (EM77336)
- CSP cable (10 m length): NOM006513 (EM99006)
- CSP cable (20 m length): NOM006512 (EM98830)
- CSP coil cable (0.7-1.5 m extensible length): NOM006283 (EM77337)
- RDS-31 straight cable (1.5 m length): 1233-319
- RDS-31 coil cable (0.7-1.6 m extensible length): 1233-320
- CSP-PC USB cable: NOM006288 (EM78466)
- CSPS calibration/setup software:
 - CSPS-F: NOM006289 (EM78468)
 - CSPS-R: NOM006298 (EM80642)
 - CSPS-E: NOM006299 (EM80643)

Detection efficiencies and MDAs with 100 cm² ISO 8769 sources in contact with probe

	Nuclide	Emitter	Typical efficiency over 2π (%)	Guaranteed efficiency over 2π (%)	Response to activity (c/s)/Bq	MDA (Bq)
SB-100/A	¹⁴ C	Beta	9.8	7.4	0.026	68
	⁶⁰ Co	Beta + Gamma	28	21	0.10	17
	³⁶ Cl	Beta	41	31	0.17	9.9
	⁹⁰ Sr + ⁹⁰ Y	Beta	41	31	0.36	4.9
SB-100/AR	⁶⁰ Co	Beta + Gamma	15	11	0.057	37
	³⁶ Cl	Beta	30	23	0.15	16
	⁹⁰ Sr + ⁹⁰ Y	Beta	29	22	0.29	8
SB-100/B	⁶⁰ Co	Beta + Gamma	15	11	0.057	38
	³⁶ Cl	Beta	34	25.5	0.15	15.5
	⁹⁰ SR + ⁹⁰ Y	Beta	33	25	0.29	7.5

MDA: Background = 4 c/s measured over 100 s in a 0.1 µGy/h ambience. Measuring time on source = 10 s Statistic: false alarm = 5% and non-detection = 5%. CSP and CSPS are trademarks and/or registered trademarks of Mirion Technologies, Inc. and/or affiliates in the United States and/or other countries. All other trademarks are the property of their respective owners.



MIRION
TECHNOLOGIES

Copyright © 2024 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



SABG-100™

Alpha/Beta/Gamma Probe



The SABG-100 probe for measurement of surface contamination is designed to be used with any CSP survey meter or any other device able to handle CSP™ protocol. Its phoswich detector with 100 cm² detection area makes it an ideal tool for direct measurement of alpha, beta and gamma emitters.

DESCRIPTION

Calibration and QA measurements can be performed directly with the probe, without even using any instrument, by connecting the probe to a computer with CANBERRA Smart Probe Software (CSPS™), allowing your instruments to remain deployed in the field. It can also be connected via CSP-COM modules to integrate third party system and behave as a contamination sensor sub-assembly.

Once calibrated, SABG-100 is ready to be used as a 'plug and play' probe to start a QA measurement in CPM, DPM, DPM/100 cm² or c/s, Bq, Bq/cm². The SABG-100 probe connects to survey meter using a 1.5 meter, 10 meter or 20 meter CSP cable. A push button and LED located on the probe housing selects the counting mode. When pressed, the probe switched to the next mode in a list of three and the LED is activated accordingly: alpha only - LED off, beta-gamma only - LED on and Alpha+beta+gamma - LED blinking. It is a powerful feature for the user to avoid the need to look back on the instrument when changing the mode.

The SABG-100 includes a protection grid that is very easy to remove for decontamination purposes. Once this grid is detached, the probe remains operational and the whole assembly stays light-tight. The entrance window is attached on a removable metallic frame that is fixed on the probe body with flat screws and does not need very long to be exchanged, reducing the setup time.

The SABG-100 unit can be upgraded (probe's firmware) via CSPS software, a USB cable and a PC.

FEATURES

- ✓ Alpha/Beta/Gamma surface contamination measurement
- ✓ 100 cm² ZnS(Ag) scintillation detector
- ✓ Belongs to CSP™ family
- ✓ Calibration via PC
- ✓ Easy removable grid for decontamination
- ✓ Ergonomic counting mode selector on probe body

SABG-100 probe is part of Canberra™ Smart Probe (CSP™) family, that drives numerous benefits, such as plug and play capabilities and exceptional readiness for field operations. Please refer to the "hand-held probes" brochure for further details.



SABG-100™ ALPHA/BETA/GAMMA PROBE



NUCLEAR CHARACTERISTICS

- Unit to display: depending on survey meter (c/s, Bq, Bq/cm² or CPM, DPM, DPM/100 cm²)
- Emitters: alpha and beta-gamma
- Detector: ZnS(Ag) adhered to 1.5 mm thick plastic scintillation material
 - Detection area: 102 cm² (68 x 150 mm)
 - Removable aluminized Mylar[®] entrance window on metallic frame, thickness: 6 µm
 - Protection grid transparency: 83 %
- Measurement range: 0 to 10000 c/s, 0 to 600 kcpm. Activity equivalent range depends on calibration emitter. Conversion coefficients are factory set with ²³⁹Pu for alpha channel and with ⁶⁰Co for beta channel
- Dead time: 2 µs
- Energy range: beta > 150 keV, alpha > 3 MeV, gamma > 100 keV
- Gamma sensitivity in dose rate for ¹³⁷Cs: > 70 c/s per µGy/h (42 kcpm per mR/h)
- Gamma sensitivity activity: sealed source positioned at 20 mm from the protection grid:

Radionuclide	Gamma sensitivity in c/s per kBq
¹³⁷ Cs	2.7
⁶⁰ Co	9.0
⁵⁷ Co	1.4
²⁴¹ Am	0.01

- Background: ambient < 100 nSv/h (10 µR/h): alpha < 0.05 c/s (< 3.0 cpm), beta < 10.0 c/s, (< 600 cpm)
 - Sunlight effect: No effect up to 80 000 lux
- Cross talk: alpha to beta (²³⁹Pu) < 12%, beta to alpha (⁹⁰Sr-⁹⁰Y) < 0.1 %
- In probe memory. They can be edited with CSPA and a PC. Default alarm threshold is chosen from a list by use of the survey meter's keypad

ELECTRICAL CHARACTERISTICS

- Power: supplied by survey meter or PC (low voltage only): +5 V
- Consumption: 15 mA maximum

ERGONOMIC CHARACTERISTICS

- Display: provided by survey meter
- Alarm setpoints: ten values for each unit to display. Saved in probe memory. They can be edited with CSPA on a PC. Default alarm threshold is chosen in a list by use of survey meter keypad.

ENVIRONMENTAL CHARACTERISTICS

- Temperature: -20 °C to +50 °C (-4 °F to 122 °F) use and storage
- Relative humidity: 10% to 93% at 35 °C
- Cleaning: housing easy to decontaminate
- IP20

MECHANICAL CHARACTERISTICS

- Housing: painted aluminium
- Dimensions: length (with connector) x width (detector) x height (detector): 318.5 x 99 x 102 (12.5 x 3.9 x 4 in)
- Weight: 710 g (25 oz) without cable

NORMS

- EMC: conforms
- CE: meets CE requirements
- IEC 60325: meets standard requirements

ORDERING REFERENCES

- SABG-100: NOM006306 (EM81933)
- CSP cable (1.5 m length): NOM006282 (EM77336)
- CSP cable (10 m length): NOM006513 (EM99006)
- CSP cable (20 m length): NOM006512 (EM98830)
- CSP coil cable (0.7-1.5 m extensible length): NOM006283 (EM77337)
- RDS-31 straight cable (1.5 m length): 1233-319
- RDS-31 coil cable (0.7-1.6 m extensible length): 1233-320
- CSP-PC USB cable: NOM006288 (EM78466)
- Calibration/setup software:
 - CSPA-F: NOM006289 (EM78468)
 - CSPA-R: NOM006298 (EM80642)
 - CSPA-E: NOM006299 (EM80643)

Detection efficiencies and MDAs with 100 cm² ISO 8769 sources in contact with probe

	Nuclide	Emitter	Typical efficiency over 2π (%)	Guaranteed efficiency over 2π (%)	Response to activity (c/s)/Bq	MDA (Bq)
SABG-100	²⁴¹ Am	Alpha	46	34.5	0.147	0.74
	²³⁹ Pu	Alpha	46	34.5	0.151	0.72
	⁶⁰ Co	Beta+Gamma	18	13.5	0.061	44.1
	³⁶ Cl	Beta	42	31.5	0.181	14.8
	⁹⁰ Sr + ⁹⁰ Y	Beta	44	33	0.384	6.98

MDA: Background = 0.01 c/s measured over 100 s in a 0.1 µGy/h ambience. Measuring time on source = 10 s Statistic: false alarm = 5% and non-detection = 5%.



MIRION
TECHNOLOGIES

Copyright © 2024 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



SABG-15+™

Alpha/Beta/Gamma Probe



DESCRIPTION

The SABG-15+ probe is designed for the measurement of surface contamination. Its good sensitivity makes it ideal to detect alpha, beta and gamma emitters for initial survey applications.

The SABG-15+ unit is part of the Canberra™ SMART Probe (CSP) family. As part of the CSP Family it is compatible with all CSP survey meters.

The SABG-15+ device includes all key components of hardware circuitry (high voltage power supply, amplifier, discriminator, etc.). Also, the intelligence associated with controlling those components is located in the probe – that is control and storage of key parameters, settings, calibrations, probe ID, alarm settings (10 values for each unit to display with default setting), etc. Thus, the probe is a fully-integrated subsystem communicating the measurement to the instrument.

With high voltage and acquisition of the data occurring in the probe rather than the instrument, measurement quality is no longer dependent on external device quality (cable, host instrument). Moreover, a CSP probe is using a serial protocol to communicate with the host that can be an instrument or a PC.

Calibration and QA measurements can be performed directly with the probe, without even using an instrument, by connecting the probe to a computer with Canberra Smart Probe Software (CSPS™), allowing your instruments to remain deployed in the field.

Once calibrated, the SABG-15+ unit is ready to be used as a 'plug and play' probe to start a QA measurement in c/s, Bq, Bq/cm², CPM, DPM, DPM/100 cm² depending on the connected survey meter. The SABG-15+ probe connects to the CSP survey meter via a 1.5 meter or 20 meter CSP cable.

The SABG-15+ probe is able to store up to 1000 data points from a data logging procedure handled via the host instrument. These data are: index, date/time, measurement value, selected unit and counting time.

The SABG-15+ firmware can be upgraded via CSPS software, a CSP/USB cable and a PC.

FEATURES

- ✓ Alpha/Beta/Gamma surface contamination measurement
- ✓ Geiger-Mueller detector with a 15 cm² and 2.0 mg/cm² end window
- ✓ Belongs to CSP™ family
- ✓ Units available: cps, CPM, Bq, Bq/cm², DPM, DPM/100 cm²
- ✓ Compliant with IEC 60325 and ANSI N42.17A
- ✓ Efficiency over 2π
 - ¹⁴C: 17%
 - ⁹⁰Sr + ⁹⁰Y: 51%
 - ⁶⁰Co: 31%
 - ²⁴¹Am: 35%



NUCLEAR CHARACTERISTICS

- Unit to display: depending on survey meter (c/s, Bq, Bq/cm² with SI units version survey meter and CPM, DPM, DPM/100 cm² with US version survey meter)
- Emitters: alpha, beta and gamma
- Detector: Geiger-Mueller with halogen quench thin mica end window 1.8 to 2.0 mg/cm²
 - Detection area: 15.5 cm²
 - Protection grid transparency: 76%
- Measurement range: 1 to 9999 c/s, 60 to 600 000 CPM (display: 0.1 to 9999 c/s, 0.1 CPM to 600 kCPM)
- Activity equivalent range depends on calibration emitter. Conversion coefficient is factory set with ⁶⁰Co
- Gamma sensitivity for ¹³⁷Cs: 6.4 c/s per µGy/h (3840 CPM per mR/h)
- Dead time: detector = 50 µs, probe = 50 µs
- Energy: alpha > 2.6 MeV, beta > 30 keV, gamma > 5 keV



ERGONOMIC CHARACTERISTICS

- Display: provided by survey meter
- Alarm setpoints: 10 values for each unit to display. Saved in probe memory. They can be changed with CSPS software and a PC.

BACKGROUND CHARACTERISTICS

- Ambient: 1 c/s in < 0.1 µGy/h ambience (typical = 0.8 c/s)
- Detection efficiencies and MDAs with 100 cm² ISO 8769 sources in contact with probe

ELECTRICAL CHARACTERISTICS

- Power: supplied by host instrument (low voltage only)
- Consumption: 8 mA maximum

ENVIRONMENTAL CHARACTERISTICS

- Temperature: -10 °C to +50 °C (+14 °F to +122 °F)
- Relative humidity: 40% to 85% at 35 °C
- Cleaning: housing is easy to decontaminate

MECHANICAL CHARACTERISTICS

- Housing: ABS polycarbonate molded
- Dimensions: length (with connector) x diameter (detector) x diameter (body): 205 x 70 x 42 mm (8.1 x 2.8 x 1.7 in)
- Weight: 310 g (10.9 oz) without cable

NORMS

- INGRESS protection: IP20
- CEM: conforms
- IEC: meets IEC 60325:2004 standard
- ANSI: meets ANSI N42.17A-2003 standard
- CE: meets CE requirements

ORDERING REFERENCES

- SABG-15+ Unit: NOM006364 (EM85916)
- CSP cable (1.5 m – 60 ft): NOM006282 (EM77336)
- CSP cable (10 m – 400 ft): NOM006365 (EM85920)
- CSP cable (20 m – 800 ft): NOM006300 (EM80653)
- CSP coil cable (0.7 to 1.5 meter extension): NOM006283 (EM77337)
- CSP-PC cable: NOM006288 (EM78466)
- CSPS (calibration software):
 - CSPS-E (English SI units): NOM006299 (EM80643)
 - CSPS-R (English US units): NOM006298 (EM80642)
 - CSPS-F (French SI units): NOM006289 (EM78468)

	Nuclide	Emitter	Typical efficiency over 2π (%)	Guaranteed efficiency over 2π (%)	Response to activity (c/s)/Bq	MDA (Bq)
SABG-15+	²⁴¹ Am	Alpha	35	31	0.12	4.7
	²³⁹ Pu	Alpha	25	24	0.12	4.5
	⁶⁰ Co	Beta+Gamma	31	29	0.16	3.3
	³⁶ Cl	Beta	50	42	0.32	1.7
	¹⁴ C	Beta	17	15	0.07	8.0
	⁹⁰ Sr + ⁹⁰ Y	Beta	51	45	0.65	0.9

MDA: Background = 0.5 c/s measured during 100 s in a 0.1 µGy/h ambience. Measuring time on source = 10 s Statistic: false alarm = 5% and non-detection = 5%.



MIRION
TECHNOLOGIES

Copyright © 2024 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



SG-2R™

Gamma Probe



DESCRIPTION

The SG-2R probe for gamma measurement is designed to be used with any CSP survey meter. Its very good sensitivity makes it ideal to detect gamma emitters starting from very low background levels.

The SG-2R unit is part of the Canberra™ SMART Probe (CSP) family. It includes all key components of hardware circuitry (high voltage power supply, amplifier, discriminator, etc.). Also, the intelligence associated with controlling those components is located in the probe – that is control and storage of key parameters, settings, calibrations, probe ID, alarm settings (10 values for each unit to display with default setting), etc. Thus the probe is a fully integrated subsystem talking and transmitting the measurement to the instrument, which is used for display.

With high voltage and digitization of the data occurring in the probe rather than the instrument, measurement quality is no longer dependent on external device quality (cable, host instrument). Moreover, a CSP probe is using a serial protocol to communicate with the host which can be an instrument or a PC.

Calibration and QA measurements can be performed directly with the probe, without even using any instrument, by connecting the probe to a computer with Canberra Smart Probe Software (CSPS™), allowing your instruments to remain deployed in the field. Once calibrated, the SG-2R probe is ready to be used as a plug and play probe to start a QA measurement in CPS, R, R/h with US units survey meter; or c/s, Sveq, Sveq/h with IS units survey meter. The SG-2R probe connects to the CSP survey meter via a 1.5 or 20 meter CSP cable.

A push-button located on the probe housing triggers a high energy threshold. When depressed and held, an LED is activated and the probe measures only gamma above the preset threshold. It is a powerful feature to detect the presence of a specific isotope like ⁶⁰Co. Energy threshold is set through the CSPS platform and a PC.

SG-2R probe is able to store up to 1000 data points from a data-logging procedure handled via the host instrument. These data are: index, date/time, measurement value, selected unit and counting time. The SG-2R probe can be upgraded (probe's firmware) via the CSPS platform, a USB cable and a PC.

FEATURES

- ✓ High sensitivity gamma measurement
- ✓ 2" x 2" NaI(Tl)
- ✓ Belongs to CSP™ family
- ✓ Calibration via PC
- ✓ Dynamic energy discriminator button





SG-2R™ GAMMA PROBE

NUCLEAR CHARACTERISTICS

- Unit to display: depending on survey meter (c/s, Sveg, Sveg/h or CPS, R, R/h)
- Emitters: gamma and X
- Detector: NaI(Tl) scintillator 2" x 2"
- Measurement range: 0 to 50 $\mu\text{Sv/h}$ (0 to 5 mR/h); 0 to 90 kc/s (0 to 5400 kcpm)
- Energy range: 40 keV to 1.5 MeV
- Gamma sensitivity for ^{137}Cs : 1501 c/s per $\mu\text{Gy/h}$ (900.6 kcpm per mR/h)
- Dead time: 50 μs
- Background: ambient ≤ 100 nSv/h (10 $\mu\text{R/h}$); 120 c/s – 7200 CPM

ERGONOMIC CHARACTERISTICS

- Display: provided by survey meter
- Alarm setpoints: 10 values for each unit to display. Saved in probe memory. They can be changed through the CSPA platform and PC. Default alarm threshold is chosen in a list by use of survey meter keypad

ELECTRICAL CHARACTERISTICS

- Power: supplied by survey meter or PC (low voltage only); +5 V
- Battery life: does not reduce survey meter's battery life
- Consumption: 15 mA maximum

ENVIRONMENTAL CHARACTERISTICS

- Temperature: -10 °C to +50 °C (+14 °C to +122 °F)
- Relative humidity: 40% to 85% at 35 °C
- Cleaning: housing easy to decontaminate

MECHANICAL CHARACTERISTICS


- Housing: painted aluminum
- Dimensions: length (with connector) x diameter: 263 x 66 mm maximum (10.4 x 2.6 in)
- Weight: 1000 g (35 oz) without cable

NORMS

- CEM: conform
- CE: meets CE requirements

ORDERING REFERENCES

- SG-2R unit: NOM006271 (EM75861)
- CSP cable (1.5 m length): NOM006282 (EM77336)
- CSP cable (20 m length): NOM006300 (EM80653)
- Carrying case for Radiagem™ Emergency Response Kit: NOM006277 (EM76287)
- CSP-PC USB cable: NOM006288 (EM78466)
- CSPA calibration/setup software:
 - CSPA-F: NOM006289 (EM78468)
 - CSPA-R: NOM006298 (EM80642)
 - CSPA-E: NOM006299 (EM80643)

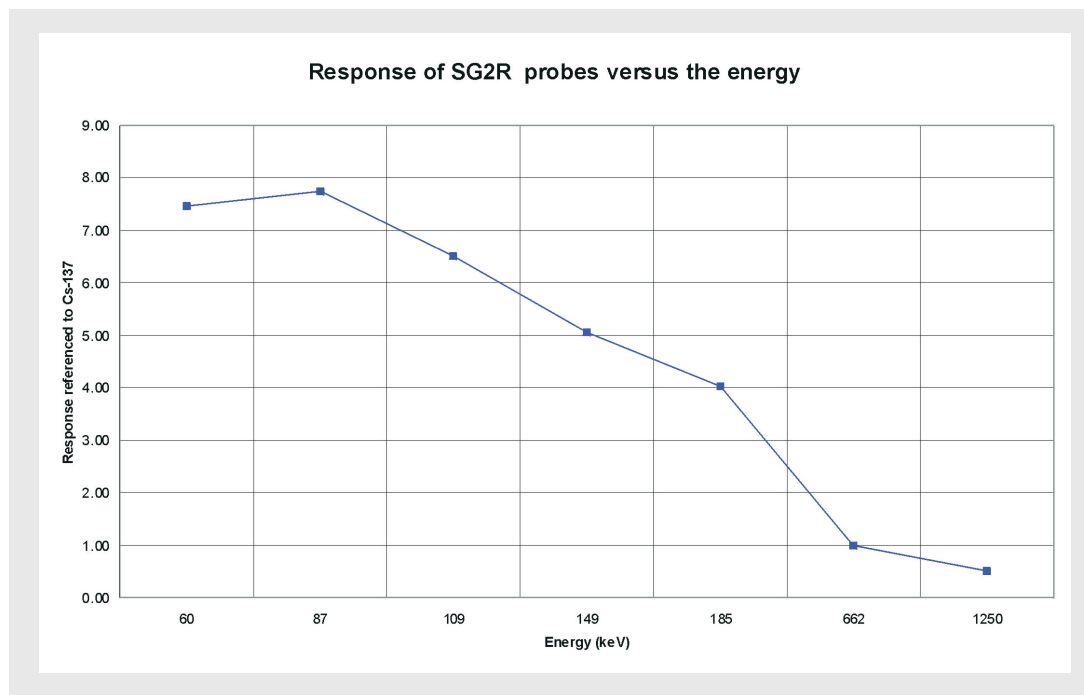

MIRION
TECHNOLOGIES

Copyright © 2024 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



SX-2R™

X-Ray Probe



DESCRIPTION

The SX-2R probe for measurement of leakage and surface contamination is designed to be used with any CSP survey meter. Its 1.5 in. NaI(Tl) detector with 3 mm thickness and Beryllium window makes it an ideal tool for direct measurement of x-ray emitters. The SX-2R instrument is a probe of choice for Homeland Security application since it is able to detect most contaminations (including alpha and beta) based on x-ray emission. It is also very useful for precise X-ray leakage monitoring on accelerators, X-ray generators and containers.

The SX-2R unit is part of the Canberra™ SMART Probe (CSP) family. It includes all key components of hardware circuitry (high voltage power supply, amplifier, discriminator, etc.). Also, the intelligence associated with controlling those components is located in the probe – that is control and storage of key parameters, settings, calibrations, probe ID, alarm settings (10 values for each unit to display with default setting), etc. Thus the probe is a fully integrated subsystem taking and transmitting the measurement to the instrument, which is used for display.

With high voltage and digitization of the data occurring in the probe rather than the instrument, measurement quality is no longer dependent on external device quality (cable, host instrument). Moreover, a CSP probe is using a serial protocol to communicate with host, which can be an instrument or a PC.

Calibration and QA measurements can be performed directly with the probe, without using an instrument, by connecting the probe to a computer with Canberra Smart Probe Software (CSPS™), allowing your instruments to remain deployed in the field. Once calibrated, the SX-2R probe is ready to be used as a plug and play probe to start a QA measurement in CPM, DPM, DPM/100cm² or c/s, Bq, Bq/cm². The SX-2R probe connects to a survey meter via a 1.5 meter or 20 meter CSP cable.

A push-button located on the probe housing triggers an energy threshold. When depressed and held, an LED is activated and the probe measures only X-rays below the preset threshold. It is a powerful feature to reduce influence coming from gamma of higher energy and to improve the x-ray MDA. Energy threshold is set with through the CSPS platform and a PC.

FEATURES

- ✓ X-ray and gamma measurement
- ✓ Low energy starting from 5 keV
- ✓ Belongs to CSP™ family
- ✓ Calibration via PC
- ✓ Ideal for Homeland Security applications
- ✓ Dynamic energy discriminator button






SX-2R™ X-RAY PROBE

The SX-2R probe includes a plastic protective cap that is very easy to remove to take measurements and helps ensure that the beryllium window stays in good shape during transportation.



The SX-2R probe is able to store up to 1000 data points from a data-logging procedure handled via the host instrument. These data are: Index, date/time, measurement value, selected unit and counting time.

The SX-2R probe can be upgraded (probe's firmware) via CSPS software, a USB cable and a PC.

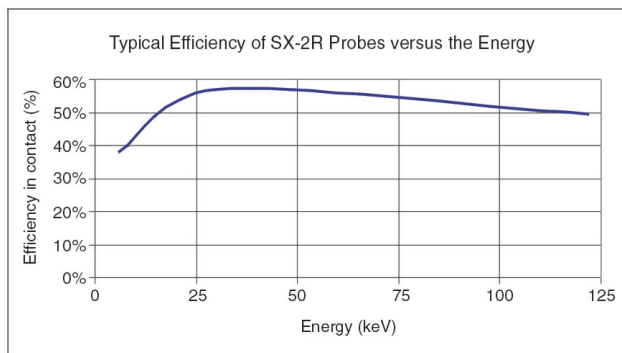

Response of SX-2R Probes versus the Energy.

NUCLEAR CHARACTERISTICS

- Display units: depending on survey meter (c/s, Bq, Bq/cm² or CPM, DPM, DPM/100 cm²)
- Emitters: X-ray and low energy Gamma
- Detector: NaI(Tl) 1.5 in. (38 mm) dia x 3 mm
 - Detection area: 8 cm²
 - Beryllium entrance window 37 mg/cm², thickness: 0.2 mm
- Measurement range: 0 to 10 000 c/s, 0 to 600 kcpm. Activity equivalent range depends on calibration emitter. Conversion coefficient is factory set with ¹²⁹I
- Dead time: 50 µs
- Energy range: 5 keV to 200 keV
- Gamma sensitivity for ¹³⁷Cs: 160 c/s per µGy/h (96 kcpm per mR/h)
- Background: ambient ≤ 100 nSv/h (10 µR/h): < 12 c/s (< 720 cpm)

ERGONOMIC CHARACTERISTICS

- Display: provided by survey meter
- Alarm setpoints: 10 values for each unit to display. Saved in probe memory. They can be edited through the CSPS platform and PC. Default alarm threshold is chosen in a list by use of survey meter keypad.

ELECTRICAL CHARACTERISTICS

- Power: supplied by survey meter (low voltage only)
- Battery life: does not reduce survey meter's battery life
- Consumption: 15 mA maximum

ENVIRONMENTAL CHARACTERISTICS

- Temperature: -10 °C to +50 °C (+14 °F to +122 °F)
- Relative humidity: 40% to 85% at 35 °C – IP40
- Cleaning: housing easy to decontaminate

MECHANICAL CHARACTERISTICS

- Housing: painted aluminum
- Dimensions: length (with connector) x diameter: 225 x 59 mm (8.9 x 2.3 in.)
- Weight: 590 g (21 oz) without cable

NORMS

- CEM: conform
- CE: meets CE requirements

ORDERING REFERENCES

- SX-2R unit: NOM006290 (EM78627)
- CSP cable (1.5 m length): NOM006282 (EM77336)
- CSP cable (20 m length): NOM006300 (EM80653)
- Carrying case for Radiagem™ Emergency Response Kit: NOM006277 (EM76287)
- CSP-PC USB cable: NOM006288 (EM78466)
- CSPS calibration/setup software:
 - CSPS-F: NOM006289 (EM78468)
 - CSPS-R: NOM006298 (EM80642)
 - CSPS-E: NOM006299 (EM80643)

Detection efficiencies and MDAs with 100 cm² ISO 8769 source in contact with probe

Nuclide	Emitter	Typical efficiency over 2π (%)	Guaranteed efficiency over 2π (%)	Response to activity (c/s)/Bq	MDA (Bq)
¹²⁹ I	X-Ray	57	51	0.14	24

MDA: Background = 10 c/s measured during 100 s in a 0.1 µGy/h ambience. Measuring time on source = 10 s. Statistic: false alarm = 5% and non-detection = 5%.



MIRION
TECHNOLOGIES

Copyright © 2024 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



MIRION
TECHNOLOGIES

iPIX™

Ultra Portable Gamma-Ray Imaging System



iPIX instrument is a unique gamma imager that quickly locates and identifies low level radioactive sources from a distance while estimating the dose rate at the measurement point in real time.

DESCRIPTION

It is the ideal tool to map a radioactive area before entering the zone, thus reducing the dose exposure (ALARA) during standard operation or decommissioning.

iPIX imager is also the appropriate instrument to detect any suspicious radioactivity in security and safeguard applications, as well as for emergency situations such as Fukushima.

iPIX instrument can be complemented with options that connect directly on its back panel requiring no additon cable to the remote computer.

RELATED PRODUCTS

- Flashlight and handle
- iPIX-NID (Nuclide Identification)
- Automatic laser meter
- Motorized tripod including New Pan & Tilt, tripod cable and case for remote operations and panoramic automatic mode



FEATURES

- ✓ Complete tool for in situ gamma imaging, saving time, cost and dose
- ✓ Real-time acquisition and immediate display
- ✓ Very lightweight 2.5 kg
- ✓ Excellent spatial resolution for localization of gamma-ray emitters
- ✓ High detection sensitivity even at low energies
- ✓ IP65 rated, fully decontaminable
- ✓ Battery, PoE or AC powered
- ✓ Remote control and operation
- ✓ Single Ethernet cable between tablet PC and camera (up to 80 m long)

IPIX™ ULTRA PORTABLE GAMMA-RAY IMAGING SYSTEM

PHYSICAL CHARACTERISTICS

- **Energy range – 30 keV to 1332 keV**
 - Pixelized CdTe detector with 256x256 acquisition matrix
- **Detector sensitivity**
 - Less than 30 seconds to detect Am-241 generating 25 nSv/h incremental dose-rate above background at iPIX position
 - Less than 30 seconds to detect Cs-137 generating 2 µSv/h incremental dose-rate above background at iPIX position.
- **Field of view**
 - 48.8° with rank 13/2 mm thickness blue mask
 - 46.4° with rank 7/4 mm thickness yellow mask
 - 41.4° with rank 7/8 mm thickness red mask
- **Spatial resolution**
 - 2.5° with rank 13/2 mm thickness blue mask
 - 6.0° with rank 7/4 mm thickness yellow mask
 - 5.0° with rank 7/8 mm thickness red mask
- **Maximum dose rate (Cs-137)**
 - Performance linear up to 10 Sv/h (1000 R/h)
 - Battery life – up to 4 hours per replaceable batteries

ENVIRONMENTAL CHARACTERISTICS

- **Shocks**
 - Resist to 60 cm/2 ft vertical drop
- **Vibrations**
 - 2 g between 10 Hz and 33 Hz during 15 minutes
- **Operating temperature**
 - -10 °C to 45 °C (14 °F to 113 °F)
- **Humidity**
 - 0 to 93% at 35 °C
- **IP65**



- **Dimensions and weight**
 - 2.5 kg (6.2 lb) with battery
 - Length – 188.5 mm (7.4 in)
 - Height – 90 mm (3.5 in)
 - Width – 90 mm (3.5 in)
- **Power supply – choice of:**
 - Direct power supply 90-260 V, 47-63 Hz
 - Rechargeable battery
 - Power over Ethernet (POE)
- **Communication 10/100 Mbps Ethernet**

FUNCTIONAL CHARACTERISTICS

- **Functional system includes:**
 - Real-time portable gamma-ray imaging system
 - Mask #2 yellow (rank 7/4 mm thick) for medium-low energies and background < 10 µSv/h
 - 2 m (6 ft) and 10 m (32 ft) Ethernet cables
 - Software
 - Fully rugged convertible notebook
 - Manual tripod
 - Dedicated transport case
 - USB key
 - Bumpers and handle
 - User manual
 - Power cables



- **Computer**
 - Standard software – Based on Windows 64-bit operating system
 - Data recording – Gamma/video images may be stored on disk, printed or transferred via a network
 - AC adapter (90 W, 100-240 V ac, 50/60 Hz)

IPIX™ ULTRA PORTABLE GAMMA-RAY IMAGING SYSTEM

DESCRIPTION

iPIX instrument is a real-time ultra-portable gammaray imaging system mostly designed for in situ gamma measurements to locate radioactivity at nuclear sites. When planning for maintenance or decommissioning operations, it can be used to provide radiation intensity maps of the area.


During radiological accidents, reactor outages or even routine area surveys where radiological conditions are subject to change (e.g., near piping), iPIX imager can help find radiological hot spot locations and quickly determine the boundaries of contaminated areas.

iPIX instrument requires very little shielding while maintaining an excellent signal-to-noise ratio, thanks to the rotating coded mask able to subtract background in the field of view. This translates into a lightweight device with a compact design that can easily be deployed and transported in the field.

The camera can be installed on a standard or motorized tripod that allows remote positioning of the iPIX imager to focus on the area of interest.

iPIX software includes a 3-Band energy discriminator that can be used in re-processing mode to generate focused imaging and differentiate energies related to multiple hot spots.


This greatly helps to position adequately bio protection with just the necessary quantity and where it is really needed minimizing the overall preparation workload.

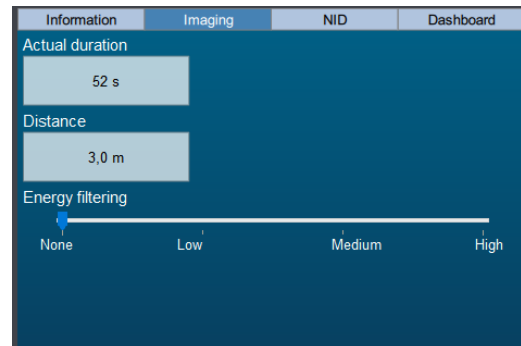

EXAMPLES OF REAL LIFE APPLICATIONS WITH IPIX IMAGER




Container contamination check

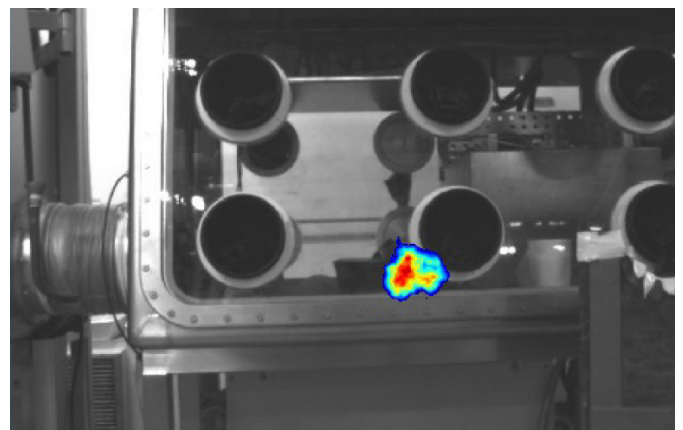

Contamination check on glove box




Hot spot localization on drums

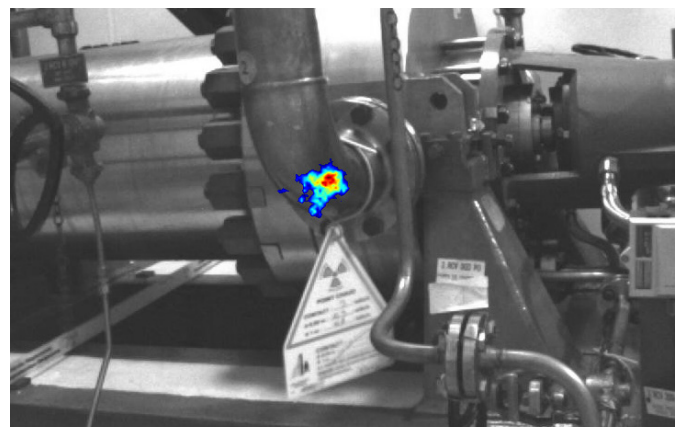

Hot spot detected while surveying piping

IPIX™ ULTRA PORTABLE GAMMA-RAY IMAGING SYSTEM

OPTIONS AND ACCESSORIES

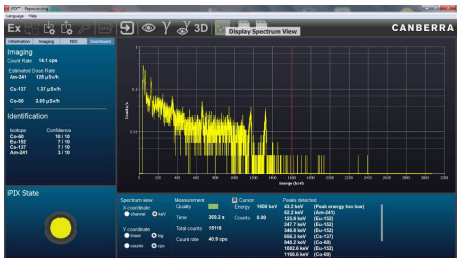ADDITIONAL MASKS	
Mask #1 - Blue, rank 13 / 2 mm thick for very low energies and low background < 500 nSv/h	
Mask #3 - Red, rank 7 / 8 mm thick for high energies and background > 10 µSv/h	
ADDITIONAL CABLES	
Ethernet cable: 50 m (160 ft) or 80 m (256 ft) on a reel	
ADDITIONAL RECHARGEABLE BATTERY FOR IPIX IMAGER	
Provides additional 4 hours battery life per battery	
AUTOMATIC LASER METER	
Add-on industrial meter that measures distances from 0.5 to 10 meters with 0.1 meter accuracy. It automatically feeds the software with distance between measured object and camera. It is either permanently attached to side of iPIX imager or temporarily clipped via accessories plate with iPIX-NID. - Operating temperature: -10 °C to +50 °C - IP65 - Weight: 400 g or 510 g depending on mounting system	 
IPIX-NID (NUCLIDE IDENTIFICATION)	
It consists of a 1 cc CZT with DENAL open collimator that mimics iPIX Field of View. iPIX-NID is fixed and secured to iPIX imager via accessories plate without the need of any tool. Thus, it can be used only when necessary and it facilitates transport to location of use. It communicates via iPIX back panel and provides the user with a comprehensive list of identified radionuclides with a level of confidence. Software integrates a dedicated window that displays the spectrum for users who require a bit more than a simple NID list. Radionuclides libraries can be edited to define appropriate list toward application to serve.	 

IPIX™ ULTRA PORTABLE GAMMA-RAY IMAGING SYSTEM

IPIX-NID (NUCLIDE IDENTIFICATION)

- Detector:
 - CZT 10x10x10 mm with 30 keV to 3.0 MeV energy range
 - Resolution: < 2.5% FWHM at 662 keV
 - Maximum throughput: 30,000 c/s
 - Channel number: 4096
 - Differential non linearity: < +/-1%
- Operating temperature: 0 °C to +40 °C with slightly degraded performances in -10 °C to 0 °C range
- IP54
- Weight: 2.5 kg


FLASHLIGHT & HANDLE

Handle is mounted on accessories plate and helps to carry iPIX imager with iPIX-NID and accessories. Flashlight is mounted on handle. It is self-powered with four AAA alkaline batteries or NiMH rechargeable batteries. It supports acquisitions in dark areas with two modes: ECO (250 lm – 220 meters) and POWER (450 lm – 300 meters)

- Operating temperature: -20 °C to +40 °C with slightly degraded performances in -10 °C to 0 °C range
- IPX4
- Weight: 175 g with batteries



ECO mode

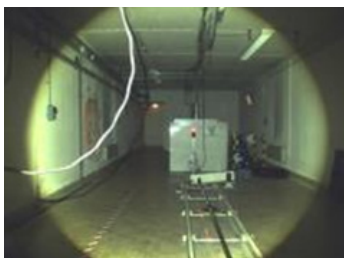

Full power



Flashlight & handle

NEW PAN & TILT

Able to support additional iPIX-NID weight

Mandatory for Panoramic mode in which user can simply select the range of angle needed for imaging coverage and iPIX software automatically defines acquisition steps to ensure good overlap between each measurement.



IPIX™ ULTRA PORTABLE GAMMA-RAY IMAGING SYSTEM

ORDERING REFERENCES

• Base models

- EM106849: iPIX KIT (French)
- EM106850: iPIX KIT (Europe)
- EM106851: iPIX KIT (USA)
- EM106852: iPIX KIT (UK)

• Includes

- Real-time portable gamma-ray imaging system
- Mask #2 (rank 7/4 mm thick)
- 2 m (6 ft) and 10 m (32 ft) Ethernet cables
- Software
- Fully rugged convertible notebook
- Manual Tripod
- Dedicated transport case
- USB key
- Bumpers and handle
- User manual
- Power cables

• Options and Accessories

- EM96796: mask #1, rank 13/2 mm thick for low energies
- EM96798: mask #3, rank 7/8 mm thick for high energies
- EM96797: mask #2, rank 7/4 mm thick for low-medium energies
- EM107723: iPIX-POE injector for Europe
- EM107724: iPIX-POE injector for UK
- EM107725: iPIX-POE injector for US
- EM98505: 50 m (160 ft) Ethernet cable
- EM98504: 80 m (256 ft) Ethernet cable
- EM106383: motorized tripod including Pan & Tilt, tripod, cable and case for Europe
- EM107810: motorized tripod including Pan & Tilt, tripod, cable and case for UK
- EM107809: motorized tripod including Pan & Tilt, tripod, cable and case for US
- EM106384: iPIX-NID including Collimated CZT detector, iPIX-Rugged-Handle, accessories plate, cables and case
- EM106385: iPIX-Rugged-Handle
- EM106386: iPIX-Flashlight
- EM106387: iPIX-Laser meter including iPIX adaptor jig
- EM106848: iPIX-Laser meter-NID including iPIX-NID adaptor jig
- EM95555: additional battery for iPIX imager



iPIX-NID full option



MIRION
TECHNOLOGIES

Copyright © 2024 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



GMP-15S™

Snap-On Pancake Probe

The GMP-15S Snap-On Pancake Probe is a compact, cable-free solution for smart contamination monitoring and frisking of alpha, beta, and gamma radiation. Its pancake-style GM detector snaps directly onto RDS-32™ survey meters, enabling rapid, one-handed operation and providing simultaneous contamination and dose rate readings for enhanced situational awareness in the field.

The GMP-15S is a compact, smart frisker probe that snaps directly onto any RDS-32 survey meters enabling safe, systematic, one-handed contamination surveys without cables or setup delays.



Calibration factors are stored internally, allowing the GMP-15S to be interchanged between any RDS-32 meter without recalibration. This simplifies equipment management and enables flexible use across multiple applications. Isotope calibration for activity equivalent is available with the CSW-32™ Configuration Software.

Users receive simultaneous contamination and dose-rate readings, providing immediate situational awareness during surveys. This dual-display feature can also be disabled for simplified monitoring if needed.



FEATURES

- ✓ **Instant, One-Handed Operation:** Snap-on design enables rapid, cable-free use—start surveys immediately.
- ✓ **Smart, Cable-Free Frisking:** Compact probe eliminates cable clutter for portable, ergonomic fieldwork.
- ✓ **Dual Readout Display with the RDS-32 meter:** Shows contamination and dose rate at once for quick, informed decisions.
- ✓ **True Plug and Play:** Switch between RDS-32 meters with no recalibration—maximizes flexibility and reduces Total Cost of Ownership.
- ✓ **Sensitive, Reliable Detection:** Detects low levels of alpha, beta, and gamma radiation for dependable monitoring.
- ✓ **Industry Standards Compliance:** Fully compatible with IEC 60325 and ANSI 42.17A for regulatory confidence.
- ✓ **Rugged Configuration:** Drop-proof from 1 m onto concrete with the RDS-32 meter.

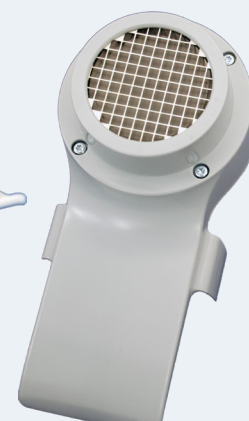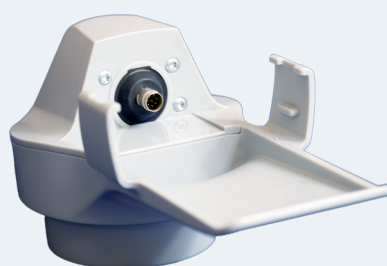

Left: GMP-15S without meter
Right: GMP-15S detector grid

Specifications

RADIOLOGICAL CHARACTERISTICS

- Radiation detected: gamma-, beta- and alpha-rays
- Display units: cps, cpm, dpm, Bq, Bq/cm²
- Energy range: Alpha >2.6 MeV, Beta >30 keV, Gamma >5 keV
- Detector type: GM pancake
- Protection grid transparency: 79%
- Pulse rate range: 1 - 50,000 cps (60 - 3000 kcpm)
- Activity equivalent range depends on calibration emitter. Conversion coefficient is factory set with ⁶⁰Co
- Mica window with active area: 15.5 cm² (6.1 in²); window thickness: 1.5 - 2 mg/cm²
- Gamma sensitivity: for Cs-137: 5.24 cps per μ Sv/h (3140 cpm per mrem/h)
- Background: <0.6 cps (36 CPM) in <0.1 μ Sv/h (10 μ rem/h) ambience
- Dead time: G-M tube: <40 μ s, Probe: G-M dead time does not limit measurement capabilities as Mirion has implemented a time-to-count technique

MECHANICAL CHARACTERISTICS

- Temperature range:
 - Operation: -25 °C to +55 °C (-13 °F to +131 °F)
 - Storage: -40 °C to +70 °C (-40 °F to +158 °F)
- Humidity: 10 - 95% relative humidity, non-condensing at 35 °C
- Casing durable ABS/polycarbonate
- Length 168 mm (6.6 in), with RDS-32 meter 172 mm (6.8 in), max width 83 mm (3.3 in), max height 80 mm (3.1 in)

- Weight 260 g (0.57 lb), with RDS-32 meter and batteries 470 g (1.04 lb)
- Drop-proof from 1 meter on concrete with RDS-32 meter attached

ELECTRICAL


- Power and communication provided by the RDS-32 meter
- Consumption: 23 mA maximum
- Operation time with fresh Alkaline batteries more than 1.5 months 8 h use/24 h (>400 h in background radiation, radios off, display backlight off, LED off)
- Operation time with fully charged NiMH batteries more than 2 months 8 h use/24 h with 2900 mAh capacity (>500 h in background radiation, radios off, display backlight off, LED off)

NORM

- CE: Meets CE requirements
- IEC: Type tested to IEC 60325-ed3-2002
- ANSI: Type tested to ANSI 42.17AC-2022 (Normal Environmental Use)
- Ingress protection: IP42

ORDER GUIDE

- GMP-15S product ref. 1233-355
- CSW-32 Configuration Software product ref. 1233-331

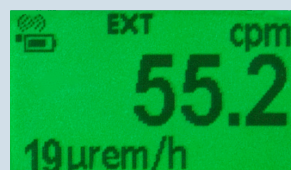

RDS-32 Dual Readout Display:

- ✓ Large graphic screen with backlight
- ✓ Contamination and dose rate readings at once

Detection efficiencies and MDAs with 100 cm² ISO 8769 sources in contact with probe using STUK sources:

Nuclide	Emitter	Typical efficiency over 2 π (%)	Guaranteed efficiency over 2 π (%)	Response to activity (c/s)/Bq	MDA (Bq)
⁹⁰ Sr+ ⁹⁰ Y	β	51.6	46.4	0.33	3.5
³⁶ Cl	β	47.0	42.3	0.30	3.9
¹⁴ C	β	18.9	17.0	0.06	19.5
⁶⁰ Co	β	34.4	30.9	0.19	6.1
¹³⁷ Cs	$\beta/(\gamma)$	43.8	39.4	0.28	4.1
²⁴¹ Am	$\alpha/(\gamma)$	38.0	34.2	0.18	6.3
²³⁹ Pu	α	32.8	29.5	0.16	7.4

MDA: Background = 0.6 c/s measured during 100 s in a 0.1 μ Gy/h ambience.

Measuring time on source: 10 s.

Statistic: False alarm = 5% and non detection = 5%



Copyright © 2025 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



MIRION
TECHNOLOGIES



Contamination and Clearance





PREVENTION

GEM™-5

Gamma Exit Monitor



DESCRIPTION

The Mirion highly sensitive GEM-5 gamma exit monitor provides power plants and nuclear facilities the very latest gamma detection capability to monitor pedestrians leaving areas of potential radioactive contamination. Operation of the monitor is straightforward and reliability is assured with both audible and visual aids to support monitoring activities. The easy to see color LCD screen provides visual cues and readily displays contaminated areas. Additionally, users are guided through the monitor with a voice annunciator, which provides clear voice prompts necessary for dependable unassisted operation during normal conditions. With Mirion WebRemote® software, easy-to-use touch screen graphical user interface for industrial PC-based operation results in improved health physics programs, better tracking of contamination and faster, more thorough personnel throughput at boundary points.

Access to the installed computer is through a single convenient panel on the front of the monitor. The computer includes built in USB and LAN ports, and is located inside a lockable door.

The GEM-5 is rugged, reliable and extremely easy to use.

OVERVIEW

The monitor is designed to be operated in one of three different modes depending upon the level of detection capability needed.

These are:

1. Walkthrough (monitor determines MDA based on user settable parameters).
2. Pause-and-count (enter the monitor, wait for a length of time specified by the user, then exit).
3. Two-step (stand facing the detectors for a short period (time user settable or calculated by monitor), turn 180° and repeat count, then exit).

The contamination level at which the monitor can be set to accurately alarm is different for each of these modes.

The sensitivity will differ depending upon the radionuclides, background and count times.

FEATURES

- ✓ Rugged and reliable for high traffic areas
- ✓ "Best in Industry" sensitivity
 - ✓ Eight identical large plastic scintillators
 - ✓ Three per side
 - ✓ One top/bottom
- ✓ 25 mm (1 in.) side detector lead shielding standard
 - ✓ Lead is provided as epoxy coated ingots for easy field installation and improved safety
- ✓ Optional 25 mm (1 in.) of additional lead available for side panels (can be added integral to the unit, no exterior attachments needed) for higher background conditions. Optional top and bottom detector lead kits in 25 mm (1 in.) increments are available for a total of 50 mm (2 in.) of added lead
- ✓ WebRemote enabled: provides an ergonomic and easy-to-use touch screen graphical user interface; accessible locally or via PC /tablet web browser
- ✓ Windows 7 10 IoT operating system with LAN capability and USB ports
- ✓ Same "industry-best" software and serial bus electronics as the Mirion Argos™-3/5, Sirius™-5 and Cronos®-1/4/11 monitor families no re-training needed
- ✓ Sophisticated "fast following" background trending and release-limit algorithm provides the best possible performance in any type of radiation field
- ✓ Fully compliant with IEC61098 Standard requirements
- ✓ Algorithm based on Gaussian or Bayesian statistics (compliant with the ISO 11929:2019 Standard requirements)

SETTING PARAMETERS

Parameter settings, testing, calibration and maintenance is accomplished locally or from a remote location using Mirion WebRemote. WebRemote enables tablet or PC connection to the GEM-5 via LAN or direct link.

Alternatively, the operator can use the standard monitor software, pre-installed on all GEM-5 contamination monitors, to provide local monitor access and functionality.

The following types of parameters are available for adjustment:

- Sensitivity of detection by zone
- Gamma alarm activity levels set in units of Bq, Bq/cm², dpm, dpm/cm², nCi, nCi/cm², pCi, pCi/cm², µCi or µCi/cm²
- False alarm non-detection and alarm confidence probabilities
- HV Optimization using Figure-of-Merit (FOM) calculations
- Fixed or variable count times (calculated and optimized as a function of the alarm level set, the background and the desired accuracy of measurement)

MONITORING ASSISTANCE VIA USER INTERFACE

Indicator lights at the entry show the monitor is ready to use. While the occupant is being monitored, messages and a countdown are given both on the LCD screen and audibly (multiple languages are available). Verification of proper occupant positioning is ensured with the help of infrared sensors. All positioning sensors are non-mechanical solid state types for enhanced reliability. Visible and audible alarms are given if contamination is detected. The display shows the type (gamma), the quantity and the location (alarmed detector flashing on a figure). The system records data and date/time stamped logs showing the number of times the unit was used, parameters used, calibration settings, fault messages etc.

Up to four contact closure relays are available for remote signaling of the monitor's status (e.g. "In Operation", "Contaminated", "Clean", "Fault" etc. or some combinations thereof).

MAINTENANCE

The GEM-5 monitors were engineered to simplify maintenance with easy access to the unit; as well as easy replacement and repair of the detectors.

For ease of diagnostics, numerous test screens are available to enable precision monitoring, and changing of parameters including high voltage and discrimination thresholds for each detector. To provide further assistance rate meters show counts seen by each detector in real-time.

Calibration of all detectors and alarm testing can each be done in less than ten minutes.

REMOTE STATUS MONITORING

A user friendly dashboard enables the status monitoring (in service, contaminated, out of service, maintenance) of multiple contamination monitors over the LAN. The dashboard is accessible from a tablet or PC web browser and requires no proprietary software installation.

GEM-5™ GAMMA EXIT MONITOR

SPECIFICATIONS

PARAMETER ENTRY

- Parameters may be entered with the touch of a finger using the capability of the built-in touch screen and WebRemote software. Additionally, a USB connected keyboard /mouse may be used to enter parameters.

SENSITIVITY

- The unit will detect a point source located anywhere on the monitored person, in a standard background of 80 nGy/h (8 µrad/h), using the following modes:
- Walkthrough: 830 Bq (22.5 nCi) ⁶⁰Co; 1850 Bq (50 nCi) ¹³⁷Cs
- Pause (4 s) and Count: 555 Bq (15 nCi) ⁶⁰Co; 830 Bq (22.5 nCi) ¹³⁷Cs
- Two-Step: 370 Bq (10 nCi) ⁶⁰Co, 8 s; 370 Bq (10 nCi) ¹³⁷Cs, 18 s

DETECTORS

- Configuration: Eight identical plastic scintillators; 24 sum zones
- Total scintillator volume: 86 196 cm³; (5260 in³)
- Total scintillator surface area: (16 968 cm²; 2630 in²)

ELECTRONICS

- The High Voltage (HV), preamplification, amplification, discrimination, counting, test pulse generation and other processing electronics are mounted right on the detectors. The cables between the detectors and computer are all direct current and low voltage.

EFFICIENCIES

- Typical 4π efficiency, rounded to the nearest whole number, measured with a point source placed in the center of the detector 50 mm (2 in.) from the surface and optimized using a ¹³⁷Cs source and the standard Figure-of-Merit (FOM) technique for reducing signal-to-noise ratios.

Isotope	Efficiency
⁶⁰ Co (Gamma)	24%
³⁷ Cs (Gamma)	12%

PHYSICAL

- The cabinet is steel, with a rugged powder coat finish. The thin aluminum cover in front of each detector provides both protection and sensitivity.

DIMENSIONS:

- Exterior: 224.8 x 88.9 x 76.2 cm (88.4 x 35 x 30 in.) (H x W x D)
- Portal opening: 205.4 x 61.0 x 76.2 cm (80.9 x 24 x 30 in.) (H x W x D)

WEIGHT:

- Weight without lead installed: 452.5 kg (995 lb)
- Weight with one layer of side detector lead shielding installed: 975 kg (2145 lb)
- Weight with two layers of side detector lead shielding installed: 1497.5 kg (3295 lb)

COMPUTER:

- The GEM-5 computer operates on Windows 10 IoT Operating System and uses USB flash for transferring data. Data may be retrieved either via USB or a LAN
- High-quality digitized sound for prompts, with dual speakers

DISPLAY SCREEN:

- ~23.4 cm (10.4 in) touch screen LCD display, integrated onto top of unit

CERTIFICATION



- IEC 61098 compliant
- ISO 11929:2019 compliant

ENVIRONMENTAL

- Temperature range: operating (meets IEC61098): 0 to 40 °C (32 to 104 °F)
- Temperature range: storage: 0 to 50 °C (32 to 122 °F)
- Relative humidity: Operating (per IEC61098): ≤85% non-condensing at 35 °C (95 °F) maximum
- Relative humidity: storage: ≤95% non-condensing

POLLUTION DEGREE

- Mirion contamination monitors are designed for Pollution Degree 2 (IEC 664-1) and are intended for indoor use only

OVERVOLTAGE CATEGORY

- Mirion contamination monitors are designed for Overvoltage Category II (IEC 664-1)

INGRESS PROTECTION

- Mirion contamination monitors are designed to meet the IP30 rating standard

POWER

- Power requirements: 220 V ac/50 Hz/ 1.0 A or 110 V ac/60 Hz/2.0 A mains 3 m (~10 ft) IEC standard cable (supplied; specify voltage and any special cable requirements on order; contact local Mirion affiliate for further information)
- Power Consumption: standard: 110 VA and With Door /Barrier options: 200 VA (If installed)

AVAILABLE ON REQUEST

- Remote annunciators or beacons
- Custom personnel traffic barriers and/or doors (manual or electric)
- External uninterruptible power supply
- Choice of four different inner widths
- Access ramps
- Top and/or Bottom Detector Shielding available (using 25 mm (1 in) lead ingots)
- Second layer of 25 mm (1 in) lead ingots
- Shadow shielding kit with 25 mm (1 in) lead ingots
- Consult the Contamination Monitor Configuration Guide for additional options that will enhance the use of the GEM-5 system.

USER BADGE/BAR CODE IDENTIFICATION

- User identification is available using industry standard card readers to provide employee ID for the health physics database. Magnetic stripe card readers, bar code readers or proximity badges are available.

LOCAL DATABASE SUPPORT OPTION (SOFT-LDB)

- The Local Database Option facilitates quick monitoring of the effectiveness of your contamination control programs. See separate specification sheet for full details.

GEM-5™ GAMMA EXIT MONITOR

ORDERING INFORMATION

Part Number	Description: Monitors
816002	GEM-5, Gamma Exit Monitor, 1" Pb, Serial, 61 cm (24") inner width.
GEM-5M	GEM-5, Gamma Exit Monitor, 1" Pb, PC-side access doors.
7063219	GEM-5W80, Gamma Exit Monitor, 80 cm inner width.
GEM-5W93	GEM-5W93, Gamma Exit Monitor, 1" Pb, 93 cm inner width.
GEM-5W100	GEM-5W100, Gamma Exit Monitor, 1" Pb, 1 m inner width.
7061572	GEM-5 SIMULATOR.

OPTIONS: Factory installation of these options represents the best value for the customer

Part Number	Description
WebRemote-Kit#Y	WebRemote Software and Rugged / Pro / Basic Hardware. FOR Rugged Y=1; FOR Pro Y=2; FOR Basic Y=3.
7062157	MAGNETIC CARD READER FOR ARGOS, GEM & CRONOS.
816100	BARCODE READER FOR ARGOS, GEM & CRONOS.
7062147	PROXIMITY READER FOR ARGOS, GEM & CRONOS.
816174	GEM-5 MANUAL SWING RETURN DOOR.
GEM5-ADX	GEM-5 AUTOSWING DOOR; EXIT ONLY.
816161	ELECTRICAL BARRIER; ENTRY/EXIT, GEM-5.
GEM5-NF	GEM-5NF, GEM5 NO FLOOR OPT., 7 DETECTORS.
GEM5-BECL	GEM5 TOP BEACON, LIGHT ONLY.
GEM5-BECS	GEM5BECS, GEM5 TOP BEACON, LIGHT/SOUNDER.
7062269	GEM5-IPCAM212, IP CAMERA KIT FOR GEM-5.
SOFT-LDB	Loc.Database Support;Factory Installed.

OPTIONS: Can be ordered any time

Part Number	Description
201240	USB KEYBOARD/TOUCHPAD FOR ARGOS, SIRIUS & GEM-5.
816032	GEM5RP61-80, SET OF EXIT/ENTRY RAMPES.
816087	TOP PAN/EXTRA LEAD KIT FOR GEM-5.
GEM5-RP100	GEM5RP100, SET OF ENTRY/EXIT RAMPES 100 cm.
GEM5-PbTOP100	Top PAN/EXTRA LEAD KIT, GEM-5W100.
GEM5-PbTOP93	Top PAN/EXTRA LEAD KIT, GEM-5W93.
GEM5-PbTOP80	Top PAN/EXTRA LEAD KIT, GEM-5W80.
7062330	BOTTOM EXTRA LEAD KIT, GEM-5.
GEM5-2Pb	2nd Layer of 1" Lead Shielding for GEM-5.
816153	SHADOW SHIELD KIT FOR GEM-5.
81614	GEM5CJIG, GEM-5 CALIBRATION JIG.
7063341	GEM-5 WOOD SHIPPING CRATE.
GEM5-CRATE	GEM-5 WOOD SHIPPING CRATE, REUSABLE.
SOFT-CREMOTE	CRemote, Remote Control Data Access LAN SW.
7062263	CRemote, Remote Data Access LAN SW – Additional License.
SOFT-LDB-KIT	Loc.Database Support;Field Install. Kit
SOFT-LDB-KITPC-G	Loc.Datab.Supp.;Field Inst.Kit w/PC;-GEM5.PC;GEM5.



MIRION
TECHNOLOGIES

Copyright © 2024 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



MONITORING

Argos™ PAB

Whole Body Contamination Monitors

Argos TPS Family: Argos “PAB” Monitors for α/β Detection

The Mirion Argos-PAB family of Whole Body Surface Contamination Monitors provides the ultimate user-friendly operation with thorough and reliable detection of external contamination on personnel working in nuclear environments. The Argos-5 PAB and Argos-3 PAB monitors feature our most advanced gasless, Thin Plastic Scintillator (TPS) detectors optimized for the best possible alpha /beta response (along with minimizing the gamma response).

Until recently, the elimination of counting gas has been the only advantage of using plastic scintillation detectors over traditional gas flow detectors in whole body monitors. The sacrifice for this advantage was in detector performance (low efficiency, bad uniformity) leading to longer count times. Mirion has successfully addressed the challenges of this gasless detector technology, minimizing the trade-off between operating costs and performance.



FEATURES

- ✓ The first gasless alpha/beta Whole Body Contamination Monitor
- ✓ Fast personnel throughput with exceptional coverage due to optimized counting geometry and shielding
- ✓ The Argos-5PAB unit provides the ultimate in (two-step) contoured body coverage
- ✓ The Argos-3PAB unit provides contoured body coverage with strategic positioning of detectors in an economical configuration
- ✓ Alpha and Beta discrimination capability for unequivocal contamination status
- ✓ Space-saving design minimizes overall clearance requirements and enables easy maintenance access from front and side of the unit
- ✓ WebRemote® software enabled: ergonomic and easy-to-use touch screen graphical user interface; accessible locally or via PC/tablet web browser
- ✓ Windows 10 IoT operating system with LAN capability and USB ports
- ✓ Same “industry-best” software and serial bus electronics across the Mirion Argos-TPS/AB, Cronos®-1/4 /11, Sirius™-5 and GEM™-5 family; no re-training needed
- ✓ Compliant with IEC61098 Standard requirements
- ✓ Algorithm based on Gaussian or Bayesian statistics (compliant with the ISO 11929:2010 Standard requirements)

ARGOS PAB WHOLE BODY CONTAMINATION MONITORS

The Argos-3 /-5PAB gasless monitors offer the same industry-best contour geometry as the Argos-3 /-5AB gas flow monitors. The need for counting gas is eliminated by using scintillation detectors with an embedded PMT to minimize dead space between detectors. This arrangement provides optimal contour geometry and coverage for the occupant.

All Argos monitors use a sophisticated “fast following” background trending and release-limit algorithm to provide the best performance in a stable or varying radiation field.

Mirion WebRemote software, an easy-to-use touch screen graphical user interface for industrial PC-based operation, supports improved health physics programs, with better tracking of contamination and faster, more thorough personnel throughput at boundary points.

Excellent detector protection, modularity of components, and extensive diagnostics result in direct reductions in maintenance, repair, and operation costs.

OVERVIEW

The design of the TPS-AB-579 detectors, used in the Argos-PAB monitors, has been optimized to provide excellent signal-to-noise ratios and furthermore, the detection capability both across and along the detectors is extremely uniform. There is virtually zero edge effect degradation (typical non-uniformity of response is <1.20).

The Thin Plastic Scintillation detectors, TPS-AB-579, are identical in form factor to the gas flow detectors from the Argos-3 /-5AB family. Therefore, the current generation of Argos-3 /-5AB family can be field upgraded to the TPS-AB-579 detector technology*.

The TPS-AB-579 detectors are designed to operate without gas and their windows can be easily field repaired.


The overall benefit of Mirion detector geometry and detector design is that count times will be significantly reduced compared to other competitive systems.

Additionally, the radon progeny rejection feature of the software in Mirion Alpha/Beta contamination monitors is a useful tool to help reduce radon interference and minimize false alarms.

When gamma detection capability is needed, the Zeus™ option (consisting of a shadow shield and three large plastic scintillators) can be added to the Argos-PAB unit. There is no difference between the Zeus option for Argos-3 /-5 AB and Argos-3 /-5 PAB units.

BODY COVERAGE

The Argos-5 detector design has been configured to contour the human body as closely as possible while paying particular attention to those parts of the body most likely to be contaminated. Gaps between detectors have been minimized. The benefit of this design is clearly shown by the horizontal scan on the next page.

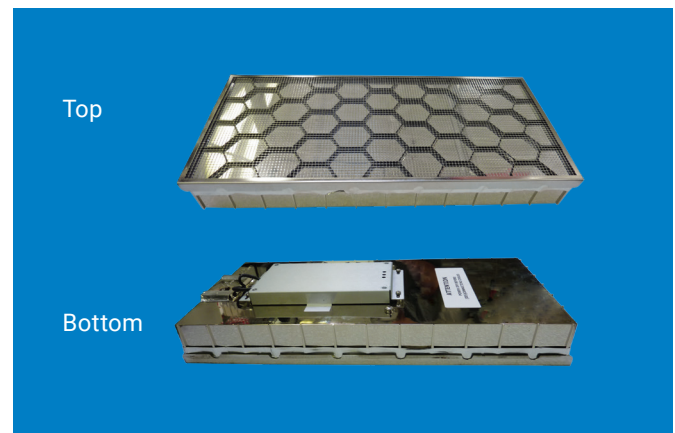


The Argos-3PAB monitor provides the very best option for cost effective whole body coverage in the industry by encompassing all of the features of the Argos-5PAB unit but with fewer detectors (18 versus 25, respectively). The removed detectors are replaced by blank plates and have been strategically chosen to cover areas of the body least likely to be contaminated. This version provides the best value in a surface contamination monitor when budget is limited. The Argos-3PAB unit is upgradeable to the Argos-5PAB unit by simply installing additional detectors.

*Applies to Argos-3/-5AB units manufactured since February 2008
(contact factory to confirm)

ARGOS PAB WHOLE BODY CONTAMINATION MONITORS

The following scan was done in accordance with the IEC 61098 Standard, which specifies a ^{36}Cl source moved around a phantom positioned 5 cm uniform from the front detector. It shows how uniform the body coverage is when compared to the scans published in the literature of competitive monitors.

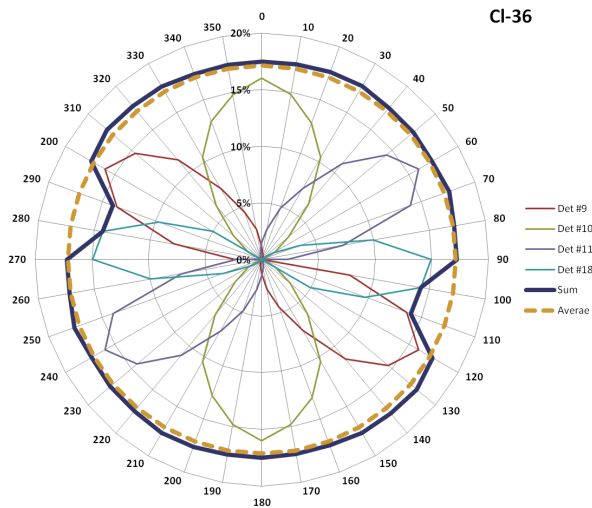

Argos-3/-5PAB Horizontal Scan Efficiency for ^{36}Cl , IEC 61098 Phantom test 5 cm from center detector.

ELECTRONICS

The Argos-PAB computer operates on Windows 10 IoT Operating System and uses USB flash for transferring data. Data may be retrieved either via USB or a LAN.

The High Voltage (HV), preamplification, amplification, discrimination, counting, test pulse generation and other processing electronics are mounted right on the detectors. The cables between the detectors and computer are all direct current and low voltage.

SETTING PARAMETERS

Parameter settings, testing, calibration and maintenance functions are accomplished locally or from a remote location using Mirion WebRemote software. The WebRemote software enables Tablet or PC connection to the Argos-PAB monitor via LAN or direct link.

Alternatively, the operator can use the standard Monitor Software, pre-installed on all Argos-PAB Contamination Monitors, to provide local Monitor access and functionality.

The following types of parameters are available for adjustment:

- Sensitivity of detection by detector and/or detection zone.
- Alpha, Beta, and Gamma alarm activity levels can be set in units of Bq, Bq/cm², dpm, dpm/cm², μCi , $\mu\text{Ci}/\text{cm}^2$, nCi, nCi/cm², pCi, pCi/cm².
- False alarm and alarm confidence probability.
- HV Optimization using Figure-of-Merit calculations.
- Fixed or variable count times (calculated and optimized as a function of the alarm level setpoint, local background levels and desired accuracy of measurement).

GAMMA DETECTION (ZEUS) OPTION

- The Zeus option adds full gamma detection capability
- Three large plastic scintillators monitor body contamination
- Smaller scintillator monitors the head
- Scintillators are shielded with 10 mm (~0.4 in.) of lead
- A 25 mm (~1.0 in.) lead curtain minimizes selfshielding effects



OTHER OPTIONS

Consult the Mirion Contamination Monitor Configuration Guide for details of options that will enhance the use of this monitor.

ARGOS PAB WHOLE BODY CONTAMINATION MONITORS

MONITORING ASSISTANCE VIA USER INTERFACE

Indicator lights at the entry show when the monitor is ready to use. While the occupant is being monitored, messages and a countdown are delivered audibly (multiple languages are available) and visually on the LCD screen.

Occupant positioning is verified and corrected with the aid of photoelectric sensors, visual messages and voice prompts.

Visible and audible alarms are given if contamination is detected. A "CONTAMINATED" result is shown on a large color LCD display with voice reinforcement and an LED lights up beside each contaminated detector.

The display shows the type (alpha, beta or gamma if applicable), the quantity and the location of the contamination based on which detector(s) is alarming. The system records data and date/time stamped logs showing the number of times the unit was used, parameters used, calibration settings, fault messages, etc.

Up to four contact closure relays are available for remote signaling of the monitor's status (e.g. "In Operation", "Contaminated", "Clean", "Fault", etc.).

REMOTE STATUS MONITORING

A user friendly dashboard enables status monitoring (in service, contaminated, out of service, maintenance) of multiple contamination monitors over the LAN. The dashboard is accessible from a tablet or PC web browser and requires no proprietary software installation.

MAINTENANCE

The Argos family of Whole Body Surface Contamination Monitors simplify maintenance with easy access from front and center of the unit; as well as easy replacement and repair of detectors.

A separate LED on each detector shows which detector is alarming and/or being addressed on the LCD screen.

For ease of diagnostics, numerous test screens are available to enable precision monitoring and changing of parameters including high voltage and discrimination thresholds for each detector. To provide further assistance, rate meters show counts seen by each detector in real-time.

Calibration and alarm testing of all detectors can be done in less than 30 minutes. It can be easily executed by just one person and is highly automated.

EFFICIENCY

Typical 4π efficiency, rounded to the nearest whole number, measured with a 10 cm x 10 cm plate source placed in the center of the detector and optimized using a ^{60}Co source and the standard Figure of Merit (FOM) technique for reducing signal-to-noise ratios. For comparison with instruments specifying 2π efficiency or % of emission surface rate, multiply the efficiencies shown below by 2.

Typical efficiencies	TPS-AB-579 detectors, on contact, with 0.25 mm fine mesh	TPS-AB-579 detectors, on contact, with 0.5 mm fine mesh	TPS-AB-579 detectors, on contact, with foot grill on 0.25 mm fine mesh
$^{14}\text{C}(\beta)$	2%	2%	1%
$^{99}\text{Tc}(\beta)$	10%	9%	6%
$^{60}\text{Co}(\beta)$	11%	10%	8%
$^{137}\text{Cs}(\beta)$	20%	18%	13%
$^{36}\text{Cl}(\beta)$	22%	20%	16%
$^{90}\text{Sr} / ^{90}\text{Y}(\beta)$	27%	25%	18%
$^{241}\text{Am}(\alpha)$	14%	13%	7%
$^{235}\text{U}(\alpha)$	11%	10%	4%
$^{239}\text{Pu}(\alpha)$	12%	11%	6%

Typical 4π efficiency, rounded to the nearest whole number, measured with a point source placed in the center of the detector and optimized using a ^{137}Cs source and the standard Figure of Merit (FOM) technique for reducing signal-to-noise ratios (for Zeus option).

Isotope	Body Detector Efficiency at ~5 cm (2") from fine mesh
$^{60}\text{Co}(\gamma)$	15%
$^{137}\text{Cs}(\gamma)$	7%

ARGOS PAB WHOLE BODY CONTAMINATION MONITORS

Plastic Scintillator Detectors	TPS
Quantity	Argos-5PAB unit: 25
Quantity	Argos-3PAB unit: 18
Type	Plastic Scintillation
Window (Note that the window assembly is field replaceable)	Multilayer Aluminized Mylar at 1.2 mg/cm ²
Radiation Monitored	Alpha/Beta

SPECIFICATIONS

Physical	Model	
	Argos-5PAB unit	Argos-5PAB Zeus
SIZE (w x h x d)*:	91.5 x 225.7 x 99.1 cm (36.0 x 88.9 x 39.0 in.)	91.5 x 225.7 x 104.3 cm (36.0 x 88.9 x 41.1 in.)
WEIGHT**:	333.3 kg (733.3 lb)	895.8 kg (1970.8 lb); add 528 kg (1161.6 lb) for removable lead brick ingots
S ...feet fully extended add 6.8 cm (2.7 in.) * ...Argos-3PAB and Argos-3PAB Zeus are the same size as their Argos-5 counterparts ** ...or less for Argos-3 configurations		

ELECTRICAL

Power Requirements:

- 220 V ac/50 Hz/1.0 A or 110 V ac/60 Hz/2.0 A mains 3 m (~10 ft) IEC standard cable (supplied; specify voltage and any special cable requirements on order; contact local Mirion affiliate for further information)

CERTIFICATION

- IEC 61098 compliant
- ISO 11929:2012 compliant



ENVIRONMENTAL

Temperature Range:

- Operating (meets IEC61098): 0 – 40 °C (32–104 °F)
- Storage: 0 – 50 °C (32–122 °F)

Relative Humidity:

- Operating (per IEC61098): ≤85% non-condensing at 35 °C (95 °F) maximum
- Storage: 95% non-condensing

Power Consumption:

Model	Power Consumption
Argos-3PAB unit:	160 VA
Argos-5PAB unit:	170 VA
Argos-3/5 unit with Door/Barrier options*:	+90 VA

*If installed and applicable; add this value to the above numbers.

ORDERING INFORMATION

- Argos-3PAB unit: 2-Step Whole Body Mon. TPS-Alpha/Beta (18 detectors)
- Argos-5PAB unit: 2-Step Whole Body Mon. TPS-Alpha/Beta (25 detectors)
- 7062229: Zeus3G, Gamma Capability for Argos-3 unit
- 818002: Zeus5G, Gamma Capability for Argos-5 unit

OPTIONS

WebRemote-Kit Options (For Rugged, Y=1; For PRO Y=2; For Basic, Y=3)

- WebRemote-Kit#Y – WebRemote Software and Rugged/Pro/Basic Hardware
- The Mirion contamination monitors can be integrated with Horizon® Supervisory Software to provide an integrated solution with Mirion instruments. Horizon complements the functionality of the WebRemote Contamination Monitor Interface
- Consult the Mirion Contamination Monitor Configuration Guide for additional options that will enhance the use of this monitor

ARGOS PAB WHOLE BODY CONTAMINATION MONITORS

TYPICAL DETECTOR CONFIGURATION ARRANGEMENTS FOR ARGOS-3/-5PAB MONITORS




> Argos-3PAB Configuration

18 Detectors




> Argos-5PAB Configuration

25 Detectors

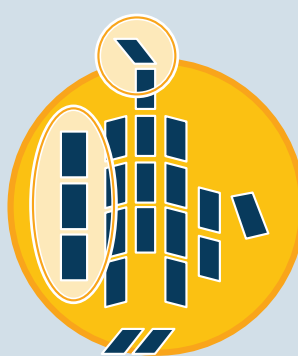

> Argos-3PAB Configuration with Zeus-3G Gamma capability added

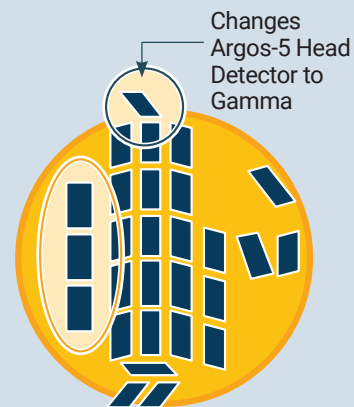

> Argos-5PAB Configuration with Zeus-5G Gamma capability added



MIRION
TECHNOLOGIES



Copyright © 2023 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



MIRION
TECHNOLOGIES

Argos™ Evo

Whole Body Contamination Monitor

The Argos™ Evo next-generation whole-body contamination monitor delivers fast, dependable screening to uphold the highest standards of safety and operational efficiency. Built upon the proven reliability of TwoStep™-Exit II and Argos™ contamination monitors, it integrates state-of-the-art LIGHTLink® detector technology and enhanced user software - making it a robust solution for modern facilities where safety, speed, and ease of use are paramount.

Powered by advanced LIGHTLink detector technology, Argos Evo ensures gas-free operation and fast, reliable detection of external contamination. Its compact and versatile design is well suited for nuclear facilities, radiopharma production sites, research laboratories, and universities - especially where space is at a premium. Argos Evo is part of Mirion's trusted Argos product range, backed by industry expertise and comprehensive support.

Argos Evo

POWERED BY LIGHTLink®



FEATURES

- ✓ **Reliable 24/7 Operation:** Built for continuous use in busy environments with dependable performance and minimal downtime
- ✓ **Full Body Coverage:** 21 detectors monitor body, head, arms, legs, hands, and feet for thorough personnel monitoring
- ✓ **Advanced Detection:** Available with β LIGHTLink, α/β , or β/γ Thin Plastic Scintillation (TPS) detectors and optional γ detectors
- ✓ **Comprehensive Software Functionalities:**
 - Based on well-proven Monitor Program software platform with comprehensive parameterization possibilities
 - Ergonomic touch-screen software with WebRemote® and Dashboard for remote monitoring
 - Advanced measurement algorithms
- ✓ **Compact & Versatile:** Space-saving footprint 890 mm x 891 mm x 2277 mm
- ✓ **Modern Connectivity & Compliance:**
 - Windows 11 IoT system, with LAN and USB connectivity
 - Exceeds the requirements of IEC 61098:2023
 - Fully compliant with ISO 11929:2019

ARGOS EVO WHOLE BODY CONTAMINATION MONITOR



DETECTOR TECHNOLOGY

The Argos Evo features 21 detectors for comprehensive contamination control of body, head, legs, arm, hands, feet and toes. The contoured detector arrangement is optimized for full body coverage per IEC 61098:2023 and fastest count-times. For example, two individual foot detectors allow summing measurements for each foot from front and back measurement, which mitigates that foot detectors are the limiting channel for the overall measurement time.

Three detector technologies are available to suit different monitoring needs:

- **Argos Evo with Beta LIGHTLink detectors**, equipped with state-of-the-art LL-B-579-S gas-free LIGHTLink detectors for measurement of beta contamination.
- **Argos Evo with Alpha/Beta Thin Plastic Scintillation detectors**, equipped with TPS-AB-579 thin plastic scintillation detectors, with gas-free alpha and beta detection capability (with discrimination).
- **Argos Evo with Beta/Gamma Plastic Scintillation detectors**, equipped with TPS-BG-579 plastic scintillation detectors, featuring a unique gas-free beta and gamma detection capability (with discrimination).

LL-B-579-S LIGHTLink Detectors

LL-B-579-S detectors are gas-free detectors with advanced light collection based on Mirion LIGHTLink technology. They are specifically designed for the best possible beta response and minimal sensitivity to gamma background radiation.

Mirion LIGHTLink technology represents a revolutionary advancement in radiation detection, enhancing a wide array of products from handheld devices to contamination monitors. Detectors equipped with LIGHTLink technology incorporate modern plastic scintillators, robust Silicon Photomultipliers and the latest in readout electronics.

This next-generation technology improves ergonomics and reduces susceptibility to damage, while also extending operational lifespan through lower power requirements and a design that eliminates high-voltage components. With superior light collection efficiency and a design that avoids light decay, LIGHTLink technology ensures hyper-accurate detection and devices that are always ready for use — redefining industry standards in operational productivity and reliability.

TPS-AB-579 Thin Plastic Scintillation Detectors

TPS-AB-579 thin plastic scintillation detectors are gas-free detectors with **alpha and beta measurement capability**, and separate alpha and beta measurement channels for each detector.

The detectors do not require any counting gas and feature an extremely uniform detector response.

TPS-BG-579 Plastic Scintillation Detectors

TPS-BG-579 plastic scintillation detectors are unique gas-free detectors with **beta and gamma measurement capability**, and separate beta and gamma measurement channels for each detector. Additionally, the beta channels work in anticoincidence mode with the gamma channels, which significantly reduces the sensitivity of the beta channel to elevated background. This allows for excellent measurement performance for beta radiation, also in elevated gamma backgrounds.

All detector versions require minimum maintenance and repairs. The detector windows can be easily replaced in the field.

MODULARITY

All detector types share the same form factor. Many internal components are interchangeable with other Mirion contamination monitors - including Sirius™ hand and foot monitors, Cronos® tool and object monitors, and GEM™-5 gamma exit monitors. This compatibility simplifies spare parts management and helps reduce maintenance costs for facilities operating multiple types of contamination monitors.

ARGOS EVO WHOLE BODY CONTAMINATION MONITOR

ELECTRONICS

The LIGHTLink detector technology eliminates the need for high-voltage components, using the latest readout electronics with all processing electronics mounted directly on each detector.

Digital signal processing and alarm management are handled by an integrated computer running Windows 11 IoT, with SSD data storage for speed and durability. Data can be easily retrieved via USB or LAN, supporting efficient record-keeping and remote access.

USER INTERFACE

Argos Evo features an intuitive LCD touch-screen display and clear LED indicators to show when the monitor is ready to use. During screening, users receive visual and audible instructions - including countdowns and messages which are available in multiple languages, ensuring straightforward operation for all personnel.

Occupant positioning is automatically verified and adjusted via photoelectric sensors, an integrated camera, and clear voice and visual prompts, helping to guarantee correct user positioning every time. If contamination is detected, both visible and audible alarms are activated.

The color touch-screen display clearly shows the type (alpha, beta, gamma), quantity, and location of any contamination. All usage data, measurement results, calibration settings, and fault messages are automatically recorded with date and time stamps, supporting detailed traceability and reporting. Up to four contact closure relays are available for remote signaling of the monitor's status (e.g. "In Operation", "Contaminated", "Clean", "Fault", etc. or a combination).

REMOTE STATUS MONITORING

The intuitive Dashboard enables **real-time status monitoring of multiple contamination monitors** across the facility via LAN. A straightforward overview shows whether contamination monitors are in service, have detected contamination, or are undergoing maintenance - all from a tablet or PC web browser, with no proprietary software installation required.



SETTING PARAMETERS

Parameter settings, testing, calibration and maintenance can be performed locally via the intuitive touch-screen interface or remotely using the included WebRemote® software over LAN. For users familiar with Argos, Sirius, Cronos and GEM-5 contamination monitors, the traditional Monitor Program user interface is also available.

The user software allows comprehensive parameterization and adjustment of settings, including:

- **Sensitivity of detection** for each detector and detection zone
- **Customizable alarm levels for alpha, beta, and/or gamma activity for each detector/detection zone** with a wide choice of measurement units: Bq, kBq, Bq/cm², kBq/cm², dpm, dpm/cm², µCi, µCi/cm², nCi, nCi/cm², pCi, pCi/cm²
 - Control over false alarm probability and alarm confidence
 - Selection of fixed or variable count times, automatically optimized based on alarm set points, local background and required measurement accuracy.

With industry-leading flexibility, Argos Evo can be tailored to meet the specific operational requirements of any facility.

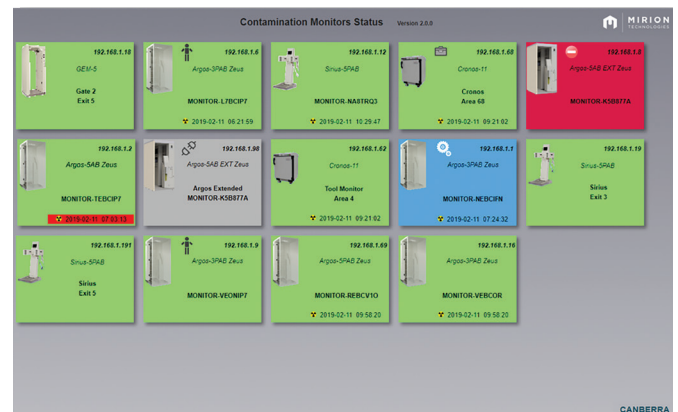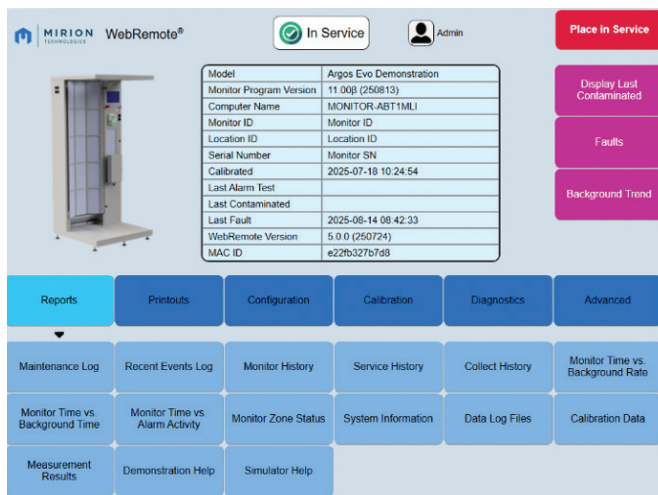


ARGOS EVO WHOLE BODY CONTAMINATION MONITOR

MAINTENANCE

Argos Evo simplifies diagnostics and maintenance by comprehensive, automatic and continuous self-diagnostics combined with a range of built-in reports and test screens, allowing precise monitoring and adjustment of parameterization for each individual detector.

Real-time rate meters display counts measured by each detector, making troubleshooting straightforward. Calibration and alarm testing of all detectors can be completed in under 30 minutes. The process is highly automated and designed for a single person to perform routine checks quickly and efficiently.

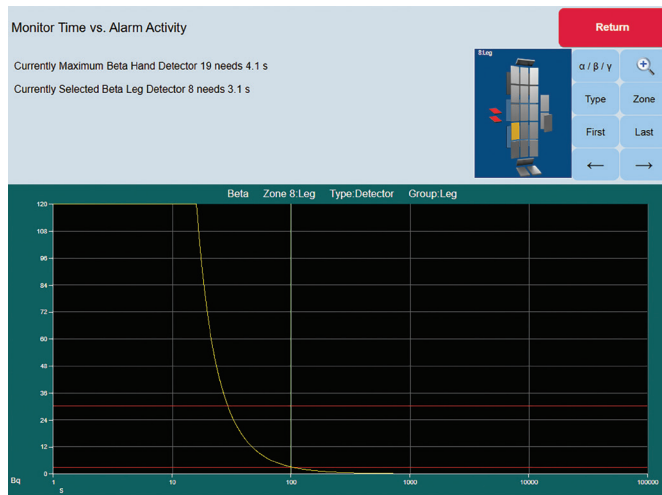

OPTIONS


Door and Barrier

Safety and workflow efficiency can be enhanced with an automatically controlled entrance barrier and sliding exit door to control and restrict movement of users through the monitor.



Moveable Head Detector

Manual or automatically moveable head detector options are available for reliable contamination monitoring of the top of the head. These moveable head detector options cover a wide range of occupant heights from 153 cm to 205 cm (5'0" to 6'9"), while maintaining a compact external height of the Argos Evo.

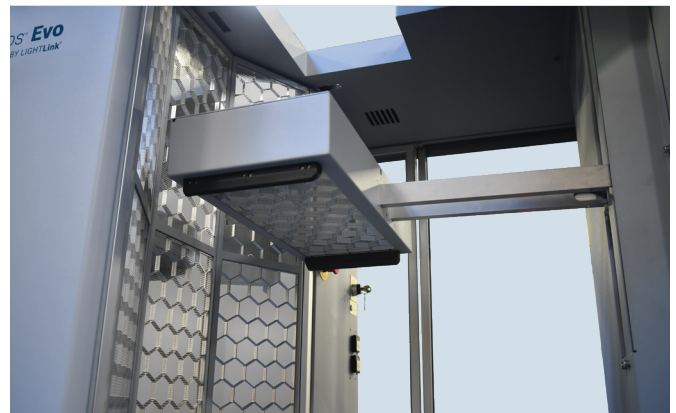

ARGOS EVO WHOLE BODY CONTAMINATION MONITOR

Gamma Detectors

Detection capabilities for external and internal gamma contamination can be added with optional large-volume gamma plastic scintillation detectors. Up to three detectors can be installed in thorax, leg, and central positions. To reduce the influence of gamma background, each detector includes a 10-mm thick lead shielding behind and on each side of each detector.

Additionally, one of the two default foot detectors can be replaced by a gamma plastic scintillation detector.

Small Item Monitor

An empty pocket policy can be realized with a side-mounted small item monitor added to the Argos Evo on the entrance side corner post. This option enables reliable screening of all personal items or small objects which fit into the chamber with internal dimensions of 18.0 cm x 15.0 cm x 38.0 cm (W x H x D). The small item monitor supports up to two detectors (on top and bottom).



Dosimetry Reader Integration for DMC 3000™ Dosimeter

Dose management can be streamlined with an integrated LDM 320W™ dosimeter reader for DMC 3000 dosimeters. Direct data exchange between Argos Evo and the DosiServ™ Dose Management Software improves workflow efficiency, enables advanced health physics analysis capabilities and reduces overall operational expenses.



Card/Barcode Readers

Integrated QR/barcode, proximity card or magnetic card reader options simplify personnel identification. Card data is stored with each measurement result, supporting efficient tracking. For optimal compatibility, Mirion recommends providing a sample card for verification prior to installation.

CeMoSys™ Software Compatibility

Argos Evo can be seamlessly integrated into the CeMoSys central monitoring system (version 2.0 or above). CeMoSys provides comprehensive supervisory functionalities for all connected Mirion contamination monitors for efficient facility oversight, equipment maintenance and reporting.

Calibration Fixtures

Different magnetic calibration fixtures for beta and gamma sources are available to facilitate calibration and alarm testing.

ARGOS EVO WHOLE BODY CONTAMINATION MONITOR

EFFICIENCY

Typical 2π efficiency, rounded to the nearest whole number, measured with a 10 cm x 10 cm planar source placed in the center of the detector and in contact with the detector mesh. Please contact Mirion for comparison with instruments specifying 4π efficiency.

ARGOS EVO WITH LL-B-579-S LIGHTLINK DETECTORS

Typical Efficiency	LL-B-579-S detectors, on contact, with 0.25 mm thick fine mesh (body, head, legs, arm)	LL-B-579-S detectors, on contact, with 0.5 mm thick fine mesh (hand)	LL-B-579-S detectors, on contact, with foot grill, 0.25 mm thick fine mesh (feet)
Sr-90/Y-90 (β)	42%	38%	29%
Cl-36 (β)	42%	38%	29%
Cs-137 (β)	39%	36%	28%
Co-60 (β)	31%	30%	23%
Tc-99 (β)	21%	19%	15%
C-14 (β)	8%	8%	5%
U-238 (α)*	38%	37%	22%
Am-241 (α)*	27%	27%	14%
Pu-239 (α)*	24%	23%	10%
U-235 (α)*	17%	17%	3%

* Indicates no Alpha/Beta discrimination.

ARGOS EVO WITH TPS-AB-579 DETECTORS

Typical Efficiency	TPS-AB-579 detectors, on contact, with 0.25 mm thick fine mesh (body, head, legs, arm)	TPS-AB-579 detectors, on contact, with 0.5 mm thick fine mesh (hand)	TPS-AB-579 detectors, on contact, with foot grill, 0.25 mm thick fine mesh (feet)
Sr-90/Y-90 (β)	48%	45%	33%
Cl-36 (β)	37%	34%	27%
Cs-137 (β)	37%	34%	26%
Co-60 (β)	30%	28%	20%
Tc-99 (β)	18%	16%	12%
C-14 (β)	6%	6%	4%
Am-241 (α)	27%	25%	13%
Pu-239 (α)	24%	22%	10%
U-235 (α)	21%	19%	5%

ARGOS EVO WHOLE BODY CONTAMINATION MONITOR

ARGOS EVO WITH TPS-BG-579 DETECTORS

Typical Efficiencies	TPS-BG-579 detectors, on contact, with 0.25 mm thick fine mesh (body, head, legs, arm)	TPS-BG-579 detectors, on contact, with 0.5 mm thick fine mesh (hand)	TPS-BG-579 detectors, on contact, with foot grill, 0.25 mm thick fine mesh (feet)
Sr-90/Y-90 (β)	32%	28%	23%
Cl-36 (β)	28%	24%	22%
Cs-137 (β)	31%	27%	22%
Co-60 (β)	22%	20%	16%
Tc-99 (β)	19%	17%	13%
C-14 (β)	10%	8%	7%
Co-60 (γ)	47%	44%	42%
Cs-137 (γ)	15%	13%	13%
Am-241 (α)*	26%	24%	14%
Pu-239 (α)*	22%	20%	10%
U-235 (α)*	18%	14%	4%

* Indicates no Alpha/Beta discrimination.

SPECIFICATIONS

Mechanical

- Cabinet: Steel with rugged powder coat finish, base and foot pan cover in stainless steel. Designed for ease of decontamination and minimum maintenance.
- Dimensions without options (W x L x H): approx. 890 mm x 891 mm x 2277 mm (35.0 in x 35.1 in x 89.6 in).
- Dimensions with all options (W x L x H): approx. 897 mm x 1144 mm x 2366 (35.3 in x 45.0 in x 93.1 in).
- Weight: up to 470 kg (1036 lb) with all options.

Computer

- The computer of the Argos Evo operates on Windows 11. IoT operating system with LAN capability and USB ports for transferring data. Data may be retrieved either via USB or a LAN.
- High-quality digitized sound for prompts.
- 26.4 cm (10.4 in) touch screen LCD display.

Environmental

- Temperature Range:
 - Operating (exceeds IEC 61098): from 0 to +45 °C (+32 to +113 °F)
 - Storage: 0 to +50 °C (+32 to +122 °F)
- Relative Humidity:
 - Operating (per IEC 61098): $\leq 93\%$ non-condensing at +35 °C (+95 °F) maximum
 - Storage: $\leq 95\%$ non-condensing

Power Requirements

- 115/230 ($\pm 10\%$) VAC, 50/60 Hz, 2/1 A nominal mains
- Power consumption: <100 W

Certifications

- IEC 61098:2023 compliant
- ISO 11929:2021 compliant

Software

- Interactive visual and audible messages on correct positioning and usage; Intuitive touch screen user interface.
- Remote user interface (WebRemote) and status overview Dashboard.
- Measurement units: Bq, kBq, Bq/cm², kBq/cm², dpm, dpm/cm², μ Ci, μ Ci/cm², nCi, nCi/cm², pCi, pCi/cm².
- Advanced calibration and alarm test modules.
- Comprehensive reports: Measurement Results, Calibration Data, Maintenance log, Recent Events Log, Monitor History, Service History, System Information, Monitor Time vs. Background Rate, Monitor Time vs. Background Time, Monitor Time vs. Alarm Activity.
- Background processing: Advanced automatic background suppression, including management of self-shielding factors and suppression of spurious outliers.
- Self-contained databases with export functionalities.
- Comprehensive user rights management for users with difference security access levels and configurable software access rights per user group.
- State-of-the-art cyber security features and documentation.

ARGOS EVO WHOLE BODY CONTAMINATION MONITOR

ORDERING INFORMATION

- 7099151 Argos Evo with LL-B-579-S Beta LIGHTLink detectors.
- 7100118 Argos Evo with TPS-AB-579 Alpha/Beta Thin Plastic Scintillator detectors.
- 7100119 Argos Evo with TPS-BG-579 Beta/Gamma Plastic Scintillator Detectors

OPTIONS

- 7100124 Automatically moving entrance barrier
- 7099313 Automatically moving sliding exit door
- 7099311 Front curtain (back wall)
- 7100121 Automatically Moveable head detector. (Does not include the actual detector. One additional detector is required - see part number LL-B-579-S, 7093649, 7093647, or TPS-G-579)
- 7100120 Manually Moveable head detector. (Does not include the actual detector. One additional detector is required - see part number LL-B-579-S, 7093649, 7093647, or TPS-G-579)
- 7100127 Gamma Thorax Detector
- 7100128 Gamma Body Detectors, in leg and thorax position
- 7100129 Full Gamma Body Detectors, in leg, center and thorax position
- 7100130 Substitute Foot Detector in Position 1 by Gamma Foot Detector
- 7100131 Small Item Monitor, installed on the entrance side corner post (side-mounted). (Does not include the actual detector. One or two additional detectors are required - see part number LL-B-579-S, 7093649, 7093647, or TPS-G-579)
- Argos-BECS Top Beacon, Light & Sounder
- ARGOS-BECS-DUAL Dual Top Beacon, Light & Sounder
- 7098535 Integrated LDM 320W dosimeter reader
- 7097081 Barcode/QR Reader
- 7062147 Proximity Reader
- 7062157 Magnetic Card Reader
- 0009CVMS0002 CeMoSys client license
- 7074911 Calibration Fixture for single source, adjustable distance from 0 to 75 mm
- 7075461 Calibration Fixture for single source, fixed distance for hand detectors
- 7084916 Calibration Fixture for gamma source, adjustable distance from 50-150 mm (requires 7074911)
- 7100133 Partial disassembly for easier transportation to final installation location
- 7100134 Wood shipping crate

Many additional options, services and in-field upgrades to existing contamination monitors are available. Contact your Mirion sales and service affiliate for more information.



MIRION
TECHNOLOGIES



Copyright © 2025 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



MiniSentry™2

Transportable Gamma Portal Monitor



DESCRIPTION

The MiniSentry 2 is a portal monitor for screening of pedestrians or vehicles for gamma radiation. It is designed to be quickly set up and operated with very little training or expertise in radiation detection technology. This portable system is well-suited for emergency scenarios and security applications.

The monitor provides intuitive clean/contaminated status indication via the integrated LCD screen, LEDs, loud-speaker and an optional LED light tower. The modern firmware is simple to use and provides at the same time a comprehensive password protected expert settings menu. Three different measurement modes (walk-through, enter-wait, count-rate) are available to support various applications. All measurement data can be easily exported to a Microsoft Excel-readable *.csv files for further analysis.

The background is automatically subtracted and constantly monitored if the light barrier does not sense a person or vehicle occupying the portal. Emphasis has been placed on self-diagnostics both on start-up and during operation to guarantee correct operation.

The MiniSentry 2 is designed to meet the requirements of the US Federal Emergency Management Agency (FEMA-REP-21) as well as the IEC 62244:2021 standard.

FEATURES

QUICK AND EASY SETUP AND OPERATION

- ✓ Gamma portal monitor for rapid deployment and emergency response
- ✓ Quick and easy setup with automatic start-up and operation
- ✓ Simple clean/contaminated status indicator
- ✓ Very little training or expertise in radiation detection needed
- ✓ Weight less than 43 kg (95 lb)

FLEXIBLE SOLUTION

- ✓ Suitable for in- and outdoor operation in adverse weather conditions (IP54, -30°C to +55°C)
- ✓ Three different measurement modes available (walk-through, enter-wait, count-rate)
- ✓ Powered by battery (>65 hours autonomy¹), USB or 100 - 240V
- ✓ Ready for connection of additional CSP probe (for example α/β frisker probe SAB100 or neutron probe SN-S)
- ✓ Many options and accessories available

STATE-OF-THE-ART RADIOLOGICAL PERFORMANCE

- ✓ Detection of 1 μCi ^{137}Cs (according to FEMA-REP-21)
- ✓ Based on high sensitivity plastic scintillation detectors with 2x 5.3 litres active volume
- ✓ Wide energy range: 30 keV – 2 MeV



SPECIFICATIONS

RADIOLOGICAL

- Two 182.9 x 7.6 x 3.8 cm (72 x 3 x 1.5 in.) gamma plastic scintillation detectors.
Total detector volume: 10.6 litres (648.1 in.³)
- Detection performance exceeds FEMA-REP-21 and IEC 62244:2021
- **Minimum detectable activity:** <1 µCi Cs-137 at walking speed (in regular background of 100 nSv/h)
- **Energy range:** 30 keV to 2 MeV

MECHANICAL

- **Dimensions (H x W x D):** 216 x 112 x 45 cm (85 x 44 x 17.8 in.) assembled
- **Pedestrian internal opening:** 203 x 76 cm (80 x 30 in.)
- **Weight:** 43 kg (95 lb), heaviest component: 16 kg (35 lb)
- **Transport case:** hard transport case with wheels for easy storage and transportation.

FUNCTIONAL

- **Alarm indication:** green/red LED, LCD display and audible alarm (> 85 dB(A) at 30 cm, volume adjustable)
- **Measurement units:** cps, Bq, µCi, cpm, dpm
- **Measurement modes:** Walk-through, Enter-wait, Count-rate
- **Data export and import to USB stick:** export of measurement log files to Microsoft Excel-readable *.csv. Export and import of parameter settings.

ELECTRICAL

- **Battery:** Integrated rechargeable Li-ion battery 5300 mAh, 3.7V for approx. 13 h autonomous operation (depending on configuration). Built-in charger
- **Power Requirements:** 100 – 240 V or via USB (Type A) for continuous operation and charging of integrated battery
- **Occupancy sensor:** adjustable infrared light barrier

ENVIRONMENTAL

- **Water and dust:** IP54
- **Operating temperature:** –30°C to +55°C (–13 °F to 122 °F)
- Weather resistant for outdoor operation in adverse weather conditions

CONFIGURATION OPTIONS

- **Battery Extension Module:** Additional battery module to extend the time of autonomous operation to >65 hours.
- **Kit for Extended Passage Width:** Extends the passage width to 91.5 cm to allow for example the monitoring of persons in wheelchairs.
- **Vehicle Monitoring Kit:** This kit allows to extend the internal opening width of the MiniSentry 2 to 2.4 m. In this configuration the MiniSentry 2 is set-up without the top part of the monitor, and the two detector posts are free standing. A cable connection between the two detector posts is established for data transfer. The kit includes the required cable sets, cable protection and additional baseplates for the two detector posts.
- **Light tower:** Additional visual indication of contamination result in all directions by red/green lights.
- **Connector for CSP probe:** Adds a connector to the MiniSentry™ 2 to allow the connection of a CSP probe. Including mechanical holder for CSP probe.
- Any CSP probe, for example α/β frisker probe SAB-100 or neutron probe SN-S

CERTIFICATION AND COMPLIANCE



- Alignment: Line seems to start with a blank space
- Meets the requirements of the 1995 FEMA standard for portal monitors (FEMA-REP-21), "Contamination Monitoring Standard for a Portal Monitor Used for Radiological Emergency Response"
- Exceeds the requirements of IEC 62244:2021 "Radiation protection instrumentation – Installed radiation monitors for the detection of radioactive and special nuclear materials at national borders for monitoring of pedestrians."

1- in configuration with battery extension module.



Readout unit with Light tower



MIRION
TECHNOLOGIES



MIRION
TECHNOLOGIES

HAND FOOT MONITORING

HandFoot-Fibre™

Hand Foot Clothing Monitor



DESCRIPTION

The HandFoot-Fibre monitors are used for contamination screening of hands, feet and clothes for alpha, beta and gamma radiation. Due to their weight and agility these monitors are used in circumstances which do not require a full body monitor or for mobile monitoring purposes.

The monitor's eight detectors are based on the state-of-the-art Mirion fibre detector technology, enabling a fast and reliable measurement process, even in high or fluctuating background conditions. There are three versions available:

HandFoot-Fibre™ XL with alpha and beta sensitive RFD485 fibre detectors for the use in all nuclear environments.

HandFoot-Fibre™ A+ with RFD485 A+ detectors, featuring a discrimination of alpha and beta radiation.

HandFoot-Fibre™ MED featuring HybridFibre™ detectors, which are sensitive to alpha, beta and gamma radiation and particularly well suited for medical applications.

FEATURES

- ✓ Outstanding detector sensitivity and homogeneity
- ✓ Economic and robust operation and maintenance
- ✓ 100% gas-free
- ✓ Very short measurement time
- ✓ Easy and intuitive usage
- ✓ Touch screen and audio interface
- ✓ Detachable probe for monitoring of clothing
- ✓ Wheels for easy transport
- ✓ Available in different versions for alpha/beta, alpha+beta and beta+gamma measurement

HANDFOOT-FIBRE™ HAND FOOT CLOTHING MONITOR

MIRION FIBRE DETECTORS

For the highest performance requirements, the state-of-the-art Mirion fibre detector technology utilizes scintillating fibre detectors that feature some of the industry's lowest area of dead zones. This results in an outstanding sensitivity with an exceptionally high measurement homogeneity.

The clever detector design allows quick and easy repairs, for an economic and robust operation with minimal downtime.

MEDICAL APPLICATION

HandFoot-Fibre MED has been developed for medical applications. The HybridFibre™ detectors are detecting alpha, beta, and gamma radiation with a particularly high sensitivity for low energy radiation (up to 30 keV).

In handling medical isotopes like Co-57, Tc-99m, or I-125 the HandFoot-Fibre MED is an expert. A nuclide database is provided, and can be extended with user's own entries. The monitor applies to the EMC requirements of laboratory medicine.

USER BENEFITS

EASY AND ECONOMIC OPERATION AND MAINTENANCE

- Short measurement time thanks to outstanding detector sensitivity and simultaneous measurement of hands and feet
- P2-accelerator reduces measurement time by up to 30%
- Automatic background subtraction
- Rigorous standardization for reduced pool of spare parts
- Comprehensive user interface based on Mirion's innovative Lighthouse software platform and Windows 10 IoT operating system
- Detachable frisker probe for measuring of cloths/body

MOBILE MONITORING

- Lightweight
- Easy to move thanks to wheels and handle. Larger wheels for transport on rough ground available (optional)

ABILITY TO NETWORK

- Connect to CeMoSys™ software for centralized monitoring (optional)



TECHNICAL SPECIFICATIONS

Dimensions

- Height: 1660 mm
- Width: 478 mm
- Depth: 750 mm

Weight

- 57 to 63 kg, depending on version

Detectors

- Eight scintillating fibre detectors

Detection limit

- 30 Bq/hand, 45 Bq/foot (Co-60) for XL version
- 33 Bq/hand, 45 Bq/foot (Co-60) for MED version



MIRION
TECHNOLOGIES

Copyright © 2024 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



HAND FOOT MONITORING

Sirius™-5

Hand, Cuff and Foot Surface Contamination Monitors

The Mirion Sirius-5 provides thorough and reliable detection of external contamination on the hands and feet of personnel working in nuclear environments. Depending on your monitoring needs, Sirius monitors are designed to use either plastic scintillator (TPS) gasless detectors or patented* gas flow proportional detectors (LFP-579).

With Mirion WebRemote® software, an easy-to-use touch screen graphical user interface for industrial PC-based operation results in improved health physics programs, better tracking of contamination and faster, more thorough personnel throughput at boundary points.

Excellent detector protection, modularity of components, and extensive diagnostics result in direct reductions in maintenance, repair, and operation costs.

Sirius monitors use a sophisticated “fast following” background trending and release-limit algorithm to provide the best performance in a stable or varying radiation field.

*Patent US 7,470,913 B1 High Efficiency and High Homogeneity Large-Area Gas-Filled Detectors

Sirius-5AB monitor with four hand /cuff detectors, two foot detectors and optional frisker.



FEATURES

- ✓ Rugged and reliable for high traffic areas
- ✓ Optimized counting geometry to measure both sides of the hands /cuffs and bottom of feet in one step operation
- ✓ Easy access for maintenance from the top, front and sides. No access to the rear of the unit is required
- ✓ All positioning sensors are solid state devices for increased reliability
- ✓ Superior detector protection, modularity, and diagnostics result in direct reductions in maintenance, repair and operation costs
- ✓ WebRemote enabled: ergonomic and easy-to-use touch screen graphical user interface; accessible locally or via PC / tablet web browser
- ✓ Windows 10 IoT operating system with LAN capability and USB ports
- ✓ Same “industry-best” software and serial bus electronics across Mirion Argos™-3/-5, GEM™-5 and Cronos® -1/- 4 /-11 monitor families; no re-training needed
- ✓ Compliant with IEC61098 Standard requirements
- ✓ Algorithm based on Gaussian or Bayesian statistics (compliant with the ISO 11929:2010 Standard requirements)

SIRIUS™-5 HAND, CUFF AND FOOT SURFACE CONTAMINATION MONITORS



Sirius-5 monitors provide the optimum balance between cost and coverage, monitoring the palms, backs of the hands, cuffs and feet in a single step, with a very close counting geometry for the best sensitivity. The detectors are vertically oriented to minimize the possibility of detector contamination.

The Sirius-5 is available with either six gas flow proportional detectors optimized for alpha and beta detection or six gasless thin plastic scintillator detectors optimized for beta, alpha/beta or beta/gamma capability. Gasless and gas flow proportional detectors are identical in form factor. As a result, changing between gasless and gas flow proportional operations on the monitor is as simple as changing between TPS and LFP-579 style detectors and pre-amplifiers. Additionally, both detector styles are interchangeable between Sirius-5 hand, cuff and foot monitors and the Mirion Argos-3 /-5 whole body monitors, minimizing management of spares and reducing maintenance costs for facilities where both hand, cuff and foot and whole body monitors are required.

ELECTRONICS

The High Voltage (HV), preamplification, amplification, discrimination, counting, test pulse generation and other processing electronics are mounted right on the detectors. The cables between the detectors and computer are all direct current and low voltage.

SETTING PARAMETERS

Parameter settings, testing, calibration and maintenance is accomplished locally or from a remote location using Mirion WebRemote software. The WebRemote platform enables Tablet or PC connection to the Siirius-5 unit wvia LAN or direct link.

Alternatively, the operator can use the standard Monitor Software, pre-installed on all Sirius-5 Contamination Monitors, to provide local monitor access and functionality.

The following types of parameters are available for adjustment:

- Sensitivity of detector by zone
- Alpha, beta, and/or gamma alarm activity levels set in units of Bq, Bq/cm², dpm, dpm/cm², nCi, nCi/cm², pCi, pCi/cm², µCi or µCi/cm²
- False alarm and alarm confidence probability
- HV Optimization using Figure-of-Merit (FOM) calculations
- Fixed or variable count times (calculated and optimized as a function of the alarm level setpoint, local background levels and desired accuracy of measurement)

SIRIUS™-5 HAND, CUFF AND FOOT SURFACE CONTAMINATION MONITORS

Table 1. Model-specific information

RADIOLOGICAL (TYPICAL)

Model	Sirius-5AB	Sirius-5PB/PAB/PBG
Detector Type and Quantity	LFP-579 x6	TPS x6
Two Moveable Hand Detectors	Yes	
Frisker Option Available	Mirion Gas Flow Proportional Detector (LFP-100DHP)	Mirion CSP™ SMART probes (SB/SAB/SABG-100)*
Detector Type (Hands, Cuff & Foot)	Gas Flow Proportional	Plastic Scintillator
Radiation Monitored	Alpha/Beta	Beta (PB), Alpha/Beta (PAB) or Beta/Gamma (PBG)
Window Area Per Detector	~ 579 cm ²	
Window	0.8 (±12%) mg/cm ² (Mylar); window assembly is field replaceable	1.2 mg/cm ² (Multilayer Aluminum coated Mylar); window assembly is field replaceable
Typical Gas Flow Rate	10 cm ³ /min	Not applicable as external gas is not required
Possible Gas Mixtures	P5, P7.5, P-10 (Argon-Methane), or Argon/CO ₂ (90/10)%	

Table 2. Typical 4 π efficiencies, measured with 10 cm x 10 cm plate source placed in the center of the detector.
For comparison with instruments specifying 2 π efficiency or % of emission surface rate, multiply these figures by 2.
§ No Alpha/Beta discrimination for TPS-B-579 and no Alpha/Beta separation for TPS-BG-579.

Typical efficiencies:	LFP-579 detectors, on contact, with 0.5 mm fine mesh	LFP-579 detectors, on contact, with foot grill on 0.25 mm fine mesh	TPS-B-579 detectors, on contact, with 0.5 mm fine mesh	TPS-B-579 detectors, on contact, with foot grill on 0.25 mm fine mesh	TPS-AB-579 detectors, on contact, with 0.5 mm fine mesh	TPS-AB-579 detectors, on contact, with foot grill on 0.25 mm fine mesh	TPS-BG-579 detectors, on contact, with 0.5 mm fine mesh	TPS-BG-579 detectors, on contact, with foot grill on 0.25 mm fine mesh
¹⁴ C (beta)	8%	6%	4%	3%	2%	1%	2%	2%
⁹⁹ Tc (beta)	16%	14%	13%	10%	9%	6%	9%	7%
⁶⁰ Co (beta)	14%	14%	15%	11%	10%	8%	7%	6%
¹³⁷ Cs (beta)	25%	22%	21%	18%	18%	13%	15%	12%
⁶⁰ Co (gamma)	—	—	—	—	—	—	16%	17%
¹³⁷ Cs (gamma)	—	—	—	—	—	—	7%	7%
³⁶ Cl (beta)	25%	23%	23%	20%	20%	16%	14%	13%
⁹⁰ Sr/ ⁹⁰ Y (beta)	32%	26%	29%	23%	25%	18%	17%	14%
²⁴¹ Am (alpha)§	17%	13%	15%	9%	13%	7%	12%	7%
²³⁵ U (alpha)§	16%	11%	11%	4%	10%	4%	7%	2%
²³⁹ Pu (alpha)§	16%	12%	12%	7%	11%	6%	10%	5%

*See separate specification sheets for the **CSP Family** smart probes.

SIRIUS™-5 HAND, CUFF AND FOOT SURFACE CONTAMINATION MONITORS

MONITORING ASSISTANCE VIA USER INTERFACE

Indicator lights at the entry show the monitor is ready to use. While the occupant is being monitored, messages and a countdown are given both on the LCD screen and audibly (multiple languages are available). Verification of proper occupant positioning is ensured with the help of infrared sensors. All hand and foot positioning sensors are non-mechanical solid state types for enhanced reliability. Visible and audible alarms are given if contamination is detected. The display shows the type (alpha or beta), the quantity and the location (alarmed detector flashing on a figure). The system records data and date /time stamped logs showing the number of times the unit was used, parameters used, calibration settings, fault messages etc.

A relay closure is available for remote signaling of the monitor's status (e.g. "In Operation", "Contaminated", "Clean", "Fault", etc.

MAINTENANCE

The Sirius-5 monitors simplify maintenance with easy access from the front and center of the unit; as well as easy replacement and repair of the detectors. A separate LED on each detector shows which detector is alarming and/or being addressed on the LCD screen.

For ease of diagnostics, numerous test screens are available to enable precision monitoring, and changing of parameters including high voltage and discrimination thresholds for each detector. To provide further assistance rate meters show counts seen by each detector in real-time.

Calibration of all detectors and alarm testing can each be done in less than ten minutes.

REMOTE STATUS MONITORING

A user-friendly dashboard enables the status monitoring (in service, contaminated, out of service, maintenance) of multiple Contamination Monitors over the LAN. The dashboard is accessible from a Tablet or PC web browser and requires no proprietary software installation.

SPECIFICATIONS

PARAMETER ENTRY

- Parameters may be entered with the touch of a finger using the capability of the built-in touch screen and WebRemote software. Additionally, a USB connected keyboard/mouse may be used to enter parameters

MECHANICAL

Cabinet:

- Steel with rugged powder coat finish for column and top, stainless steel base and foot pan cover provide for ease of decontamination and minimum maintenance
- Dimensions for any of the Sirius-5 models is approximately (W x H x D): 78.0 x 179.3 x 91.9 cm (33.5 x 70.6 x 36.2 in.)
- Approximate weights are (with no options installed):

Model	Weight
Sirius-5AB	125.0 kg (275.0 lb)
Sirius-5PB /PAB/PBG	135.8 kg (298.8 lb)

ELECTRONICS

Computer:

- The Sirius-5 computer operates on Windows 10 IoT operating system with LAN capability and USB ports for transferring data. Data may be retrieved either via USB or a LAN
- High-quality digitized sound for prompts, with dual speakers

Display Screen:

- ~23.4 cm (10.4 in.) touch screen LCD display, integrated onto top of unit

Easy access Input/Output and Power Entry Ports panel at foot of pedestal in rear:

- Six USB ports and one Ethernet port (RJ-45)
- IEC standard AC receptacle
- Sirius-5AB also includes a gas connector

Environmental:

- Temperature Range:
 - Operating (meets IEC 61098) – 0-40 °C (32-104 °F)
 - Storage – 0-50 °C (32-122 °F)
- Relative Humidity:
 - Operating (per IEC 61098) – ≤ 85% non-condensing at 35 °C (95 °F) maximum
 - Storage – ≤ 95% non-condensing

SIRIUS™-5 HAND, CUFF AND FOOT SURFACE CONTAMINATION MONITORS

Power Requirements:

- 220 V ac/50 Hz /1.0 A or 110 V ac /60 Hz/2.0 A mains 3 m (~10 ft). IEC standard cable (supplied; other cables are available; specify special cable requirements; contact local Mirion affiliate) for further information

Power Consumption:

- 110 VA

Certifications:

- IEC 61098 compliant
- ISO 11929:2010 compliant



OPTIONS

Gas Flow Hand-Held Tool/Body Frisker (Sirius5-FSKAB)

The Sirius-5AB unit can be fitted with the optional Model LFP-100DHP frisker (100 cm², 0.8 (±12%)mg/cm²) that has excellent response to alpha/beta radiation. It comes with a retractable cable (incorporating the gas flow in the same cable) which provide up to 3 m (10 ft) of frisking range. An integral flow proportional frisker is available to enhance the monitoring capabilities. The frisker body incorporates an amber LED to indicate count rate, a beeper for audible indication and a red LED for alarm. The LCD displays the digital/analog rate meter results plus the current background level, alarm point and highest count rate achieved during current frisk. When not in use, the frisker continuously monitors background.

Gasless Hand-Held Tool/Body Friskers (Sirius5-FSKPAB, Sirius5-FSKPB and Sirius5-FSKPBG)

The Sirius-5 gasless units can be fitted with the Mirion SB/SAB/SABG-100 CSP 100 cm² plastic scintillation probe to provide beta/ alpha-beta/or alpha, beta-gamma capabilities.

Horizon 2.0 Compatibility

The Mirion contamination monitors can be integrated with Horizon® Supervisory Software to provide an integrated solution with Mirion instruments. Horizon software complements the functionality of the WebRemote Contamination Monitor Interface.

Local Database Support Option (SOFT-LDB)

The Local Database Option facilitates quick monitoring of the effectiveness of your contamination control programs. See separate specification sheet for full details.

SIRIUS™-5 HAND, CUFF AND FOOT SURFACE CONTAMINATION MONITORS

Model	Description	Number of Detector Positions
Sirius-5AB	1-STEP HAND/CUFF/FOOT MON.; ALPHA/BETA	6
Sirius-5PB	1-STEP HAND/CUFF/FOOT MON.; PLAS. BETA	6
Sirius-5PAB	1-STEP HAND/CUFF/FOOT MON.; PLAS. ALPHA/BETA	6
Sirius-5PBG	1 STEP HAND/CUFF/FOOT MONITOR PLAS. BETA/GAMMA	6
Sirius-5 SIM	1-STEP HAND/CUFF/FOOT MON.; SIMULATOR	6 (no actual detectors; blank-off plates)
Option	Description	
WebRemote-Kit#Y	WebRemote Software and Rugged / Pro / Basic Hardware. FOR Rugged Y=1; FOR Pro Y=2; FOR Basic Y=3.	
Sirius5-FSKAB	FRISKER OPT.; SIRIUS-5AB	
Sirius5-FSKPB	FRISKER OPTION; SIRIUS-5PB	
Sirius5-FSKPAB	FRISKER OPTION; SIRIUS-5PAB	
Sirius5-FSKPBG	FRISKER OPTION; SIRIUS-5PBG	
Sirius5-MAG	MAGNETIC CARD READER FOR SIRIUS	
Sirius5-BAR	BARCODE CARD READER FOR SIRIUS	
Sirius5-PROX	PROXIMITY CARD RDR FOR SIRIUS	
SOFT-LDB	Loc.Database Support;Factory Installed. Provides local database support for a new Mirion Contamination monitor: • Factory Installed. • Includes latest Mirion SOFT-MON-SERIAL application software (Version 8.01 or above).	
Sirius-5 Casters Kit	Casters with Integrated Leveling Feet to facilitate installation at final location. Includes: • Four 50 mm swivel casters. • Associated hardware to mount to Sirius-5.	
Sirius-5 Wood Shipping Crate, Reusable	• For use with Sirius-5 only. • Field installable (contact local Mirion Service affiliate for assistance). • Includes custom foil vacuum bag to reduce moisture effects during shipping.	



Copyright © 2023 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



HAND & FOOT MONITORING

Sirius™ -5 Compact

Compact Hand, Cuff and Foot Contamination Monitors

The Sirius-5 Compact is an evolution of the well-proven Sirius-5 and delivers the same exceptional performance in a compact form.

The Sirius-5 Compact provides thorough and reliable detection of external contamination on the hands and feet of personnel working in nuclear environments. The Sirius-5 Compact monitor is rugged and reliable for high traffic areas, compact for areas with size constraints and maneuverable with integrated casters and handle. Depending on your monitoring needs, Sirius monitors are designed to use either plastic scintillator (TPS) gasless detectors or patented* gas flow proportional detectors (LFP-579).

*Patent US 7,470,913 B1 High Efficiency and High Homogeneity Large-Area Gas-Filled Detectors

Efficient hand, cuff and foot monitoring in areas with size constraints.



FEATURES

- ✓ Compact footprint: suitable for confined locations, and maximizing available space
- ✓ Rugged and reliable: for high traffic areas – minimal downtime and service required
- ✓ Integrated casters and handle: easily movable. Can set up temporary stations, responding to situations quickly
- ✓ Excellent radiological performance: various detector combinations possible
- ✓ Optimized counting geometry: Measure both sides of the hands/cuffs and bottom of feet in one step operation – time saving and increased throughput
- ✓ Comprehensive and well-proven Monitor Program software platform, including WebRemote® software and Dashboard: Ergonomic and easy to use, touch screen software, intuitive – users with limited experience can easily locate parameter settings
- ✓ Designed for 365/24/7 operation: high uptime and minimum maintenance
- ✓ Same components and spare parts as for Argos™-3/-5, Sirius-5, GEM™-5 and Cronos®-1/-4/-11 contamination monitors
- ✓ Windows 10 IoT operating system with LAN capability and USB ports
- ✓ Compliant with IEC 61098 and ISO 11929:2019

SIRIUS™-5 COMPACT HAND, CUFF AND FOOT CONTAMINATION MONITORS



Sirius-5 Compact

WebRemote software offers an intuitive touch screen graphical user interface for industrial PC-based operation, as well as comprehensive remote monitoring and remote management capabilities. Users can easily locate parameter settings for improved health physics programs, better tracking of contamination, and faster, more thorough personnel throughput at boundary points.

As a common software platform for many Mirion contamination products, including Argos, Cronos, GEM-5 and Sirius monitors, no re-training is needed to learn the software.

Sirius monitors use a sophisticated “fast following” background trending and release-limit algorithm to provide the best performance in a stable or varying radiation field.

Excellent detector protection, modularity of components, and extensive diagnostics result in direct reductions in maintenance, repair, and operation costs. Furthermore, the Sirius-5 Compact features the same components and spare parts from all contamination monitors of the same family (Argos-3/-5, Sirius-5, GEM-5 and Cronos-1/-4/-11 contamination monitors). The Sirius-5 Compact will therefore not require a separate inventory of spare parts or service management, resulting in reduced cost of ownership.

DETECTOR CONFIGURATIONS

The Sirius-5 Compact is equipped with six detectors. It is available in four different configurations, which feature different detector technologies:

LFP-579 Gas Flow Detectors

LFP-579 gas flow detectors provide highly sensitive alpha and beta measurement capability with separate alpha and beta measurement channels for each detector. The patented detector design makes use of three independent counting sections which reduce background for an optimal detection capability. This design further enhances uniform detector response. The Sirius-5AB Compact is designed to inherently minimize gas usage. Therefore, no “gas management system” is required.

The overall benefit of the detector geometry and patented detector design is the reduction of count times by as much as 25% compared to similar systems.

TPS-B-579 Thin Plastic Scintillation Detectors

TPS-B-579 thin plastic scintillation detectors are gas-free detectors, specifically designed for best possible beta response and minimal sensitivity to gamma background radiation.

The need for counting gas is eliminated by using plastic scintillation detectors. The design of the TPS-B-579 detectors provides excellent signal-to-noise ratios and furthermore, the detection capability both across and along the detectors is extremely uniform. There is virtually zero edge effect degradation.

TPS-AB-579 Thin Plastic Scintillation Detectors

TPS-AB-579 thin plastic scintillation detectors are state-of-the-art gas-free detectors with alpha and beta measurement capability with separate alpha and beta measurement channels for each detector.

The detectors do not require any counting gas and feature an extremely uniform detector response.

TPS-BG-579 Plastic Scintillation Detectors

TPS-BG-579 plastic scintillation detectors are unique gas-free detectors with beta and gamma measurement capability with separate beta and gamma measurement channels for each detector. Additionally, the beta channels work in anticoincidence mode with the gamma channels, which significantly reduces the sensitivity of the beta channel to elevated background. This allows for excellent measurement performance for beta radiation, also in elevated gamma background.

SIRIUS™-5 COMPACT HAND, CUFF AND FOOT CONTAMINATION MONITORS

MODULARITY

All detector types are identical in form factor. They are interchangeable between Sirius-5 hand, cuff and foot monitors and the Mirion Argos-3/-5 whole body monitors, minimizing management of spares and reducing maintenance costs for facilities where both hand, cuff and foot and whole body monitors are required.

READ-OUT ELECTRONICS

The High Voltage (HV) preamplification, amplification, discrimination, counting, test pulse generation and other processing electronics are mounted right on the detectors. The cables between the detectors and computer are all direct current and low voltage.

The digital signal processing and alarm evolution is performed by a computer, which operates on Windows 10 IoT and uses SSD for data storage. Data may be retrieved either via USB or a LAN.

MAINTENANCE

The Sirius-5 Compact monitors simplify maintenance with easy access from the front and center of the unit and improved accessibility to the top part of the unit. Detectors can easily be replaced and repaired.

For ease of diagnostics, numerous test screens are available to enable precision monitoring, and changing of parameters including high voltage and discrimination thresholds for each detector. To provide further assistance, rate meters show counts seen by each detector in real time.

Calibration of all detectors and alarm testing can each be done in less than ten minutes.

SETTING PARAMETERS

Parameter settings, testing, calibration and maintenance is accomplished locally or from a remote location using Mirion WebRemote software. The WebRemote platform enables tablet or PC connection to the Sirius-5 Compact via LAN or direct link.

Alternatively, the operator can use the standard Monitor Software, pre-installed on all Sirius-5 Compact Contamination Monitors, to provide local monitor access and functionality.

The following types of parameters are available for adjustment:

- Sensitivity of detector by zone
- Alpha, beta, and/or gamma alarm activity levels set in units of Bq, Bq/cm², dpm, dpm/cm², nCi, nCi/cm², pCi, pCi/cm², µCi or µCi/cm²
- False alarm and alarm confidence probability
- HV Optimization using Figure-of-Merit (FOM) calculations
- Fixed or variable count times (calculated and optimized as a function of the alarm level setpoint, local background levels and desired accuracy of measurement)

MONITORING ASSISTANCE VIA USER INTERFACE

The LCD touch screen display indicates when the monitor is ready to use. While the occupant is being monitored, messages and a countdown are delivered both audibly (multiple languages available) and visually on the LCD touch screen. Occupant positioning is verified and corrected with the aid of photoelectric sensors, visual messages and voice prompts. Visible and audible alarms are given if contamination is detected.

A "Contaminated" result is shown on the color touch screen display with voice reinforcement. The display shows the type (alpha or beta), the quantity and the location of the contamination based on which detector(s) is alarming. The system records data and date/time stamped logs showing the number of times the unit was used, parameters used, calibration settings, fault messages, etc. A relay closure is available for remote signaling of the monitor's status (e.g. "Contaminated", "Out of Service", "Fault", "Clean", etc.).

REMOTE STATUS MONITORING

A user-friendly dashboard enables the status monitoring (in service, contaminated, out of service, maintenance) of multiple contamination monitors over the LAN. The dashboard is accessible from a tablet or PC web browser and requires no proprietary software installation.

SIRIUS™-5 COMPACT HAND, CUFF AND FOOT CONTAMINATION MONITORS

Table 1. Model-specific information

RADIOLOGICAL (TYPICAL)

Model	Sirius-5AB	Sirius-5PB/PAB/PBG
Detector Type and Quantity	LFP-579 x6	TPS x6
Two Moveable Hand Detectors	Yes	
Frisker Option Available	Mirion 100 cm ² alpha/beta CSP™ SMART probe*	
Detector Type (Hands, Cuff & Foot)	Gas Flow Proportional	Plastic Scintillator
Radiation Monitored	Alpha/Beta	Beta (PB), Alpha/Beta (PAB) or Beta/Gamma (PBG)
Window Area Per Detector	~ 579 cm ²	
Window	0.8 (±12%) mg/cm ² (Mylar); window assembly is field replaceable	1.2 mg/cm ² (Multilayer Aluminum coated Mylar); window assembly is field replaceable
Typical Gas Flow Rate	10 cm ³ /min	Not applicable as external gas is not required
Possible Gas Mixtures	P5, P7.5, P-10 (Argon-Methane), or Argon/CO ₂ (90/10)%	

Table 2. Typical 4π efficiencies, measured with 10 cm x 10 cm plate source placed in the center of the detector and in contact with the detector mesh. For comparison with instruments specifying 2π efficiency or % of emission surface rate, multiply these figures by 2.

Typical efficiencies:	LFP-579 detectors, on contact, with 0.5 mm fine mesh	LFP-579 detectors, on contact, with foot grill on 0.25 mm fine mesh	TPS-B-579 detectors, on contact, with 0.5 mm fine mesh	TPS-B-579 detectors, on contact, with foot grill on 0.25 mm fine mesh	TPS-AB-579 detectors, on contact, with 0.5 mm fine mesh	TPS-AB-579 detectors, on contact, with foot grill on 0.25 mm fine mesh	TPS-BG-579 detectors, on contact, with 0.5 mm fine mesh	TPS-BG-579 detectors, on contact, with foot grill on 0.25 mm fine mesh
¹⁴ C (beta)	8%	6%	4%	3%	2%	1%	2%	2%
⁹⁹ Tc (beta)	16%	14%	13%	10%	9%	6%	9%	7%
⁶⁰ Co (beta)	14%	14%	15%	11%	10%	8%	7%	6%
¹³⁷ Cs (beta)	25%	22%	21%	18%	18%	13%	15%	12%
⁶⁰ Co (gamma)	—	—	—	—	—	—	16%	17%
¹³⁷ Cs (gamma)	—	—	—	—	—	—	7%	7%
³⁶ Cl (beta)	25%	23%	23%	20%	20%	16%	14%	13%
⁹⁰ Sr/ ⁹⁰ Y (beta)	32%	26%	29%	23%	25%	18%	17%	14%
²⁴¹ Am (alpha)§	17%	13%	15%	9%	13%	7%	12%	7%
²³⁵ U (alpha)§	16%	11%	11%	4%	10%	4%	7%	2%
²³⁹ Pu (alpha)§	16%	12%	12%	7%	11%	6%	10%	5%

*See separate data sheets for CSP smart probes.

§ No Alpha/Beta discrimination for TPS-B-579 and no Alpha/Beta separation for TPS-BG-579.

SIRIUS™-5 COMPACT HAND, CUFF AND FOOT CONTAMINATION MONITORS

SPECIFICATIONS

PARAMETER ENTRY

- Parameters may be entered with the touch of a finger using the capability of the built-in touch screen and WebRemote software. Additionally, a USB connected keyboard/mouse may be used to enter parameters

MECHANICAL

Cabinet:

- Steel with rugged powder coat finish for column and top, stainless steel base and foot pan cover provide for ease of decontamination and minimum maintenance
- Approximate dimensions: (H x W x D) 1465 mm x 640 mm x 844 mm (57.7" x 25.2" x 33.2")
- Approximate weight is 110 kg (242.5 lb) without options

ELECTRONICS

Computer:

- The computer of the Sirius-5 Compact operates on Windows 10 IoT operating system with LAN capability and USB ports for transferring data. Data may be retrieved either via USB or a LAN
- High-quality digitized sound for prompts

Display Screen:

- ~23.4 cm (10.4 in.) touch screen LCD display, integrated onto top of unit

Easy access Input/Output and

Power Entry Ports panel at foot of pedestal:

- Two USB ports and one Ethernet port (RJ-45)
- Standard three-prong IEC 60320 power inlet socket (C14)
- Sirius-5AB Compact also includes a gas connector

Environmental:

- Temperature Range:
 - Operating (exceeds IEC 61098): 0 to +45 °C (+32 to +113 °F)
 - Storage – 0-50 °C (32-122 °F)
- Relative Humidity:
 - Operating (per IEC 61098): ≤ 85% non-condensing at 35 °C (95 °F) maximum
 - Storage: ≤ 95% non-condensing

Power Requirements:

- 115/230 (±10%) VAC, 50/60 Hz, 2/1 A nominal mains
- 3 m (~10 ft) standard cable with IEC 60320 C13 plug supplied (other mains cables are available; specify any special cable requirements - contact local Mirion Service/Sales affiliate for more information).

Power Consumption:

- Average: 35 W
- Maximum: 60 VA (Typical)

Certifications:

- IEC 61098 compliant
- ISO 11929:2019 compliant



OPTIONS

Alpha/Beta Tool/Body Frisker Probe

The Sirius-5 Compact can be fitted with the optional 100 cm² external alpha/beta CSP frisker probe. The plastic scintillation probe provides gas-free monitoring in two separate measurement channels with discrimination between alpha and beta radiation.

Uninterruptible Power Supply (UPS)

The UPS allows autonomous operation for up to 30 minutes without external power. The UPS is mounted on a mounting bracket on the back of the Sirius-5 Compact. Please note: Default options are intended for the North American region only; contact local Mirion affiliate for other regions.

Dosimetry Reader Integration for DMC 3000™ Dosimeter

- Integration of LDM 320D dosimeter reader for use with DMC 3000 dosimeters
- Direct data-exchange between contamination monitor and DosiServ™ Dose Management Software (Requires DosiServ dose management system)

Card/Barcode Readers

This monitor includes integration of a barcode, magnetic card or proximity card reader. Information on card is stored together with measurement results from each measurement to allow identification of the person being monitored. Mirion recommends sending a sample of card to the factory to ensure compatibility.

CeMoSys™ Software Compatibility

Mirion contamination monitors can be integrated with the CeMoSys central monitoring system (version 2.0 or above) to provide comprehensive supervisory functionalities for all connected contamination monitors.

SIRIUS™-5 COMPACT HAND, CUFF AND FOOT CONTAMINATION MONITORS

Part Number	Description
SIRIUS-5ABCOMP	Sirius-5AB Compact: One step compact hand/cuff/foot monitor, with Alpha/Beta Discrimination, Gas Flow Proportional Detectors
SIRIUS-5PBCOMP	Sirius-5PB Compact: One step compact hand/cuff/foot monitor, for Beta, Thin Plastic Scintillator Detectors
SIRIUS-5PABCOMP	Sirius-5PAB Compact: One step compact hand/cuff/foot monitor, with Alpha/Beta Discrimination, Thin Plastic Scintillator Detectors
SIRIUS-5PBGCOMP	Sirius-5PBG Compact: One step compact hand/cuff/foot monitor, with Beta/Gamma Discrimination, Plastic Scintillator Detectors
SIRIUS-COMP-FSKPAB	Frisker with 100cm² alpha/beta CSP frisker probe
SIRIUS5-COMP-UPS	Uninterruptible Power Supply (UPS) with a mounting bracket (shelf) for Sirius-5 Compact (for North America only)
7098537	Integrated LDM 320D dosimeter reader with direct data-exchange between contamination monitor and DosiServ. Requires DosiServ Dose Management System
0009CVMS0002	CeMoSys™ Client License for interfacing with CeMoSys™ Central Monitoring System (version 2.0 or above)
SIRIUS-COMP-BECS	Beacon/Light tower with sounder
SIRIUS5-PURGE-DET	Factory installed LFP-579 Purge Detector for Sirius-5AB Compact
SIRIUS5-COMP-BAR	Barcode card reader
Sirius5-MAG	Magnetic card reader
Sirius5-PROX	Proximity card reader
SIRIUS5-GASMON	Gas pressure monitor for low gas pressure check
7098218	Wood shipping crate

Many additional upgrade options are available for in-field upgrades to existing Sirius-5 Compact Monitors. Contact your Mirion sales and service affiliate for more information.



Copyright © 2024 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



HAND & FOOT MONITORING

Sirius™ Core

Two-Step Hand and Foot Contamination Monitor



Sirius Core builds on the trusted Sirius-5 platform to deliver reliable and thorough contamination detection for hands and feet, combining exceptional performance with a compact, mobile design optimized for space-limited nuclear environments.

The Sirius Core is a compact, two-step hand and foot contamination monitor designed for high-traffic, space-constrained environments in nuclear facilities. Built on the well-proven Sirius-5 platform, it delivers the same high-performance radiological detection in a smaller, more maneuverable form factor. With integrated heavy-duty casters, foldable handles, and wall-mount hooks, the Sirius Core is ideal for both permanent installations and rapid deployment scenarios.

Sirius monitors offer flexible detection options and seamless operation through an intuitive WebRemote® interface shared across Mirion's contamination monitoring products, simplifying training and remote management. Their advanced algorithms, modular design, and shared components deliver optimal performance and lower total cost of ownership in demanding radiation environments.

FEATURES

- ✓ **Compact footprint** – Ideal for tight spaces and temporary setups
- ✓ **Durable design** – Built for continuous use in high-traffic areas
- ✓ **Easy transport** – Integrated heavy duty casters and foldable handles enable rapid deployment
- ✓ **Flexible detection** – Supports industry proven, known detectors to suit varied contamination monitoring needs
- ✓ **Intuitive software** – Touchscreen interface with WebRemote and Dashboard; existing keyboard-driven UI for fast setup and minimal training
- ✓ **Continuous operation** – Designed for 24/7 uptime with low maintenance
- ✓ **Shared components** – Reduces spare part inventory and simplifies servicing across Mirion platforms
- ✓ **Modern connectivity** – Equipped with LAN and USB ports for seamless data access - and compatibility with CeMoSys™ central monitoring system (Version 2.0 or above)
- ✓ **Removable display** – 8 in. touchscreen for flexible operation and user interaction
- ✓ **Standards compliant** – Meets IEC 61098:2003 and ISO 11929:2019
- ✓ **Based on industry-standard Windows® 11 IoT operating system**



Back view: handles, hooks, casters, optional frisker.

KEY BENEFITS OF THE SIRIUS MONITOR FAMILY

Intuitive WebRemote Interface

The software platform provides easy access to parameter settings and diagnostics via a detachable touchscreen, enabling fast setup and efficient personnel throughput at boundary points. WebRemote is shared across multiple Mirion products—including Argos™, Cronos®, GEM™-5, and Sirius monitors—virtually eliminating the need for additional training.

Stable Performance Algorithms

Sirius monitors use a sophisticated “fast following” background trending and release-limit algorithm to provide the best performance in a stable or varying radiation field.

Reduced Maintenance and Ownership Costs

Robust detector protection, modular design, and shared spare parts across compatible monitors (Argos-3/-5, Argos-3 Compact, Argos-3 Modular, Sirius-5, Sirius-5 Compact, GEM-5 and Cronos 1/-4/-11 monitors) minimize maintenance demands and lower total cost of ownership.

Remote monitoring, multilingual prompts, and compatibility with centralized systems like CeMoSys™ and DosiServ™ further enhance operational efficiency.

DETECTOR CONFIGURATIONS

Sirius monitors support either gasless plastic scintillator (TPS) detectors or patented* low-flow gas proportional (LFP-579) detectors, ensuring reliable alpha, beta, and gamma monitoring tailored to operational needs.

The Sirius Core is equipped with three detectors, available in four different configurations. Following is an overview of these detector technologies, which can be mixed within one monitor.

LFP-579 Gas Flow Detectors

LFP-579 gas flow detectors provide highly sensitive alpha and beta measurement capability with separate alpha and beta measurement channels for each detector. The patented detector design makes use of three independent counting sections which reduce background for an optimal detection capability. This design further enhances uniform detector response.

The overall benefit of the detector geometry and patented detector design is **reduced count times by as much as 25%** compared to similar systems.

TPS-B-579 Thin Plastic Scintillation Detectors

TPS-B-579 thin plastic scintillation detectors are gas-free detectors, specifically designed for best possible beta response and minimal sensitivity to gamma background radiation.

The need for counting gas is eliminated by using plastic scintillation detectors. TPS-B-579 detectors provide excellent signal-to-noise ratios and detection capability both across and along the detectors is extremely uniform. There is virtually zero edge effect degradation.

TPS-AB-579 Thin Plastic Scintillation Detectors

TPS-AB-579 thin plastic scintillation detectors are state-of-the-art, gas-free detectors with alpha and beta measurement capability and separate alpha and beta measurement channels for each detector.

The detectors do not require counting gas and feature an extremely uniform detector response.

TPS-BG-579 Plastic Scintillation Detectors

TPS-BG-579 plastic scintillation detectors are unique gas-free detectors with beta and gamma measurement capability and separate beta and gamma measurement channels for each detector. The beta channels work in anticoincidence mode with the gamma channels, significantly reducing the sensitivity of the beta channel to elevated background, which allows for excellent measurement performance for beta radiation, also in elevated gamma background.

*Patent US 7,470,913 B1 High Efficiency and High Homogeneity Large-Area Gas-Filled Detectors

MODULARITY

All Sirius Core detectors share a common form factor and are fully interchangeable with Sirius-5, Sirius-5 Compact, and Argos-3/-5, Argos-3 Compact, and Argos-3 Modular whole-body monitors. This compatibility simplifies spare parts management and reduces maintenance costs for facilities using both hand/foot and whole-body monitors.

In addition to hardware modularity, Sirius Core benefits from software consistency across Mirion's contamination monitor family—including Argos, Cronos, GEM-5, and Sirius—virtually eliminating the need for retraining. The system also includes extensive diagnostics and shared components that reduce service complexity and operational overhead. This design approach enables lower total cost of ownership and streamlined support across mixed monitor fleets.

READ-OUT ELECTRONICS

Sirius Core integrates all high-voltage electronics—including preamplification, amplification, discrimination, counting, and test pulse generation—directly onto the detectors. This design reduces cabling complexity and uses low-voltage direct current connections between the detectors and the system processor.

Digital signal processing and alarm evolution are handled by a dedicated computer running Windows 11 IoT. The system uses Solid State Drive (SSD) storage for fast and reliable data access, with connectivity via USB and Ethernet/LAN for flexible data retrieval and remote management.

MAINTENANCE

Sirius Core is designed for easy servicing and minimal downtime. The monitor provides front and centre access to all key components, allowing detectors to be quickly replaced or repaired without disassembly.

To support precision diagnostics, the system includes multiple test screens for monitoring and adjusting parameters such as high voltage and discrimination thresholds. Real-time rate meters display detector counts, helping operators verify performance instantly. Calibration and alarm testing for all detectors can be completed in under five minutes, streamlining routine checks and reducing operational disruption.

Extensive built-in diagnostics and shared components across the Mirion contamination monitor family further reduce maintenance complexity and cost. This modular approach ensures consistent support and simplifies spare part management across mixed monitor fleets.

SETTING PARAMETERS

Parameter settings, testing, calibration and maintenance is accomplished locally or from a remote location using Mirion WebRemote software. The WebRemote platform enables a PC connection to the Sirius Core via LAN or direct link.

Alternatively, the operator can use the standard Monitor Program keyboard function-key based software (Version 10.01 or above) provided on all Sirius Core monitors, to provide local monitor access and functionality.

The following types of parameters are available for adjustment:

- Sensitivity of detector by zone
- Alpha, beta, and/or gamma alarm activity levels set in units of Bq, Bq/cm², dpm, dpm/cm², nCi, nCi/cm², pCi, pCi/cm², µCi or µCi/cm²
- False alarm and alarm confidence probability
- HV Optimization using Figure-of-Merit (FOM) calculations for TPS detectors
- Fixed or variable count times (calculated and optimized as a function of the alarm level setpoint, local background levels and desired accuracy of measurement)

MONITORING ASSISTANCE VIA USER INTERFACE

The 8 in. (~20.3 cm) removable LCD touch screen display indicates when the monitor is ready to use. While the occupant is being monitored, messages and a countdown are delivered both audibly (multiple languages available) and visually on the screen. Occupant positioning is verified and corrected with the aid of photoelectric sensors, visual messages and voice prompts. Visible and audible alarms are given if contamination is detected.

A "Contaminated" result is shown on the screen with voice reinforcement. The display shows the type (alpha or beta or gamma as applicable), the quantity and the location of the contamination based on which detector(s) is alarming. The system records data and date/time stamped logs showing the number of times the unit was used, parameters used, calibration settings, fault messages, etc. A relay closure is available for remote signaling of the monitor's status (e.g. "Contaminated", "Out of Service", "Fault", "Clean", etc.).

REMOTE STATUS MONITORING

A user-friendly Dashboard enables the status monitoring (in service, contaminated, out of service, maintenance) of multiple contamination monitors over the LAN. The dashboard is accessible from a PC web browser and requires no proprietary software installation.

RADIOLOGICAL (TYPICAL)

Model	Sirius Core with LFP Detectors	Sirius Core with TPS Detectors
Detector Type and Quantity	LFP-579 x3	TPS-B-579 x3, TPS-AB-579 x3 or TPS-BG-579 x3
Detector Location and Mesh Thickness	2x Hand Detectors with 0.5 mm thick fine mesh 1x Foot Detector with 0.25 mm thick mesh	
Spring Loaded Moveable Hand Detector Module for Contact Measurement	Yes	
Frisker Option Available	Mirion 100 cm ² alpha/beta CSPeVo® AB-100™ probe*	
Detector Type (Hands & Foot)	Gas Flow Proportional	Thin Plastic Scintillator
Radiation Monitored	Alpha/Beta	Beta (PB), Alpha/Beta (PAB) or Beta /Gamma (PBG)
Measurement Window Area Per Detector	~ 579 cm ²	
Field Replaceable Measurement Window Assembly	Yes	
Typical Gas Flow Rate	10 cm ³ /min	Not applicable as external gas is not required
Possible Gas Mixtures	P5, P7.5, P-10 (Argon-Methane), or Argon/CO ₂ (90/10) %	

Table 1. Model-specific Information

Typical efficiencies:	LFP-579 Hand Detectors, on contact, with 0.5 mm mesh	LFP-579 Foot Detector, on contact, with foot grill on 0.25 mm fine mesh	TPS-B-579 Hand Detectors, on contact, with 0.5 mm mesh	TPS-B-579 Foot Detector, on contact, with foot grill on 0.25 mm fine mesh	TPS-AB-579 Hand Detectors, on contact, with 0.5 mm mesh	TPS-AB-579 Foot Detector, on contact, with foot grill on 0.25 mm fine mesh	TPS-BG-579 Hand Detectors, on contact, with 0.5 mm mesh	TPS-BG-579 Foot Detector, on contact, with foot grill on 0.25 mm fine mesh
¹⁴ C (β)	8%	6%	4%	3%	2%	1%	2%	2%
⁹⁹ Tc (β)	16%	14%	13%	10%	9%	6%	9%	7%
⁶⁰ Co (β)	14%	14%	15%	11%	10%	8%	7%	6%
¹³⁷ Cs (β)	25%	22%	21%	18%	18%	13%	15%	12%
⁶⁰ Co (γ)	—	—	—	—	—	—	16%	17%
¹³⁷ Cs (γ)	—	—	—	—	—	—	7%	7%
³⁶ Cl (β)	25%	23%	23%	20%	20%	16%	14%	13%
⁹⁰ Sr/ ⁹⁰ Y (β)	32%	26%	29%	23%	25%	18%	17%	14%
²⁴¹ Am (α) §	17%	13%	15%	9%	13%	7%	12%	7%
²³⁵ U (α) §	16%	11%	11%	4%	10%	4%	7%	2%
²³⁹ Pu (α) §	16%	12%	12%	7%	11%	6%	10%	5%

Table 2. Typical 4π efficiencies, measured with 10 × 10 cm plate/planar source placed in the center of the detector and on contact with the detector mesh.

* See separate data sheet(s) for CSPeVo probes.

§ No Alpha/Beta discrimination for TPS-B-579 and no Alpha/Beta separation for TPS-BG-579.

Specifications

PARAMETER ENTRY

- Parameters may be entered using the built-in touch screen and WebRemote software. A USB connected keyboard/mouse may also be used to enter parameters using the traditional keyboard interface which has been in use by our customers for decades.

MECHANICAL

Cabinet:

- Steel with rugged powder coat finish for Foot, Hands and Main Modules, stainless steel foot pan cover provide for ease of decontamination and minimum maintenance
- Approximate dimensions in operational mode (including LCD Touchscreen):
146.3 × 44.9 × 44.4 cm (57.6 × 17.7 × 17.5 in.) (H × W × D)
- Approximate dimensions when collapsed into transportation mode (with touchscreen removed):
126.1 × 44.9 × 30.5 cm (49.6 × 17.7 × 12.0 in.) (H × W × D)
- Approximate weight (depending on detector type) ~31 to ~33 kg (~68 to ~72 lb) without Options

ELECTRONICS

Computer:

- The computer of the Sirius Core operates on Windows 11 IoT operating system with LAN capability and USB ports for transferring data. Data may be retrieved either via USB or a LAN
- High-quality digitized sound available in different languages as applicable for voice prompts

Display Screen:

- Removable ~20.3 cm (8 in.) touch screen LCD display, integrated onto top of monitor ~30.5 cm (12 in.) touch screen LCD display available as an Option instead)

Externally accessible Input/ Output and Power Entry Ports:

- Two USB ports and one Ethernet / LAN port (RJ-45)
- Standard three-prong IEC 60320 power inlet socket (C14)
- Sirius Core with LFP detectors also includes a gas connector



ENVIRONMENTAL

- Temperature Range:
 - Operating (exceeds IEC 61098): 0 to +45 °C (+32 to +113 °F)
 - Storage: 0 to +50 °C (+32 to +122 °F)
- Relative Humidity:
 - Operating (per IEC 61098): ≤ 85% non-condensing at +35 °C (+95 °F) maximum
 - Storage: ≤ 95% non-condensing

POWER REQUIREMENTS:

- 115/230 (±10%) VAC, 50/60 Hz, 2/1 A nominal mains
- 3 m (~10 ft) standard cable with IEC 60320 C13 plug supplied (other mains cables are available; specify any special cable requirements - contact local Mirion Service/Sales affiliate for more information).

POWER CONSUMPTION

- Average: 25 W
- Maximum: 45 VA (Typical).

CERTIFICATIONS

- IEC 61098:2003 compliant
- ISO 11929:2019 compliant

Options

ALPHA/BETA TOOL/BODY FRISKER PROBE

The Sirius Core can be fitted on either side (default right side) with the Optional 100 cm² external AB-100 alpha/beta CSPEvo frisker probe. Powered by LIGHTLink® technology, this probe provides gas-free monitoring in two separate measurement channels with discrimination between alpha and beta radiation.

DOSIMETRY READER INTEGRATION FOR DMC 3000™ DOSIMETER

- Integration of an Optional LDM 320 dosimeter reader for use with DMC 3000 dosimeters
- Direct data-exchange between contamination monitor and DosiServ™ Dose Management Software (requires DosiServ Dose Management system)

CEMOSYS™ SOFTWARE COMPATIBILITY

Mirion contamination monitors can be integrated with the CeMoSys central monitoring system (version 2.0 or above) to provide comprehensive supervisory functionalities for all connected contamination monitors.

Ordering Information

STANDARD CONFIGURATIONS

Each configuration listed below comes standard with the following:

- Detachable 8 in. touch screen display, foldable Foot Detector module and two (2) built-in heavy-duty recessed corner casters and three (3) flush foldable handles strategically placed to facilitate easy transportation, wall hooks also included.
- Monitor Program software Version 10.01 or above installed on an open-frame Windows 11 IoT Embedded computer. The latest Monitor Program is provided by default unless specified otherwise in PO.
- WebRemote and Dashboard remote monitoring software.



Part Number	Description
7099975	Sirius Core with 3 LFP-579 Detectors – Two-Step, Low Footprint, Hand/Foot Surface Contamination Monitor, with Alpha/Beta Discrimination, Gas Flow Proportional Detectors: * Three (3) triple-Zone Model LFP-579 gas low flow proportional detectors, 579 cm ² * Gas flow meters included

Ordering Information (continued)

Part Number	Description
7099976	Sirius Core with 3 TPS-AB-579 Detectors – Two-Step, Low Footprint, Hand/Foot Surface Contamination Monitor, with Alpha/Beta Discrimination, Thin Plastic Scintillation Detectors: * Three (3) Model TPS-AB-579 thin plastic Scintillation detectors, 579 cm ² , for detection of alpha and beta radiation with discrimination (including some sensitivity to gamma radiation counted in beta channel)
7099977	Sirius Core with 3 TPS-B-579 Detectors – Two-Step, Low Footprint, Hand/Foot Surface Contamination Monitor, for Beta, Thin Plastic Scintillation Detectors: * Three (3) Model TPS-B-579 thin plastic Scintillation detectors, 579 cm ² , for detection of beta radiation (including some sensitivity to alpha and gamma radiation counted in beta channel, no alpha/beta discrimination)
7099978	Sirius Core with 3 TPS-BG-579 Detectors – Two-Step, Low Footprint, Hand/Foot Surface Contamination Monitor, with Beta/Gamma Discrimination, Thin Plastic Scintillation Detectors: * Three (3) Model TPS-BG-579 thin plastic Scintillation detectors, 579 cm ² , for detection of beta and gamma radiation with discrimination (including anti-coincidence for minimal sensitivity of beta-channel to gamma-radiation)

Options

Part Number	Description
7099979	Alpha/Beta Frisker Opt. for Sirius Core Includes: * Includes 100 cm ² external alpha/beta LightLink AB-100 CSPeVo Detector Probe * Mounting Hardware, electronics and cable to connect to Sirius Core * Two channels with discrimination between alpha and beta radiation Please note: * factory installed (only available in combination with order for new Sirius Core) 
7099980	Alpha/Beta Frisker Opt. Sirius Core Field Upgrade Kit Includes: * Includes 100 cm ² external alpha/beta LightLink AB-100 CSPeVo Detector Probe * Mounting Hardware, electronics and cable to connect to Sirius Core * Instructions included * Two channels with discrimination between alpha and beta radiation Please note: * This is a field upgrade kit for existing Sirius Core * Contact local Mirion Service Affiliate for any required assistance
7099981	Transportation Case for Sirius Core With tethered lid and two integrated casters. Designed to hold the following: * Sirius Core with Foot Module Folded Up and Detachable 8 in. touch screen display removed from Sirius Core * Accessories Box (can house Optional AB-100 CSPeVo Frisker Detector Probe removed from Sirius Core) * Approximate Size: 54 × 138 × 40 cm (21 × 54 × 15.4 in.) (H × W × D) * Tare Weight: ~45 kg (~100 lb) 
7098537	Integrated LDM 320 dosimeter reader with direct data-exchange between contamination monitor and DosiServ. Requires DosiServ Dose Management System
0009CVMS0002	CeMoSys Client License for interfacing with CeMoSys Central Monitoring System (Version 2.0 or above)

Other additional options are available for Sirius Core Monitors. Contact your Mirion sales and service affiliate for more information.



Copyright © 2025 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



RTM644-Smart™



Large Clearance Monitor

The Mirion RTM644-Smart Gamma Clearance Monitor is designed for measurements of large items like EPAL crates, 400 or 200 liters drums, palettes or big-bags with a measurement chamber size of 1870 liters.

DESCRIPTION

The RTM644-Smart is the most advanced clearance monitor and key monitoring equipment for every major clearance campaign. It consists of a measurement chamber with motor-operated swing doors and automatic chain conveyor system. The measurement objects are weighed by integrated scales and checked for gamma radiation by 24 state-of-the-art plastic scintillation detectors with spectroscopic read-out.

The RTM644-Smart shares the common, modern Lighthouse™ monitor software platform, with Windows 10 IoT operating system. This analysis software reports nuclide specific activity, brings lower measurement uncertainties, handles complex nuclide vectors, automatizes loading and simplifies maintenance.

It is based on the well-proven algorithm principles and improved leading nuclide correlation (LNC) technology as used in many Mirion RTM monitors. The state-of-the-art spectrometric detector read-out and the simulation-based object models, allow an unprecedented measurement accuracy. It provides with reliable efficiency correction for all nuclides in the fingerprint. The automatic verification and optimization of the declared nuclide vector can further reduce the measurement uncertainties.

FEATURES

- ✓ Gamma clearance monitor compliant with Euratom 2013/59, IAEA RS-G-1.7, ISO11929:2019
- ✓ Palettes, EPAL crates, 200 L, 400 L drums, big-bags: maximum weight 1000 kg; counting chamber 138 x 112 x 121 cm³ (LxWxH), volume 1870 liters.
- ✓ High throughput: up to 16 tons per hour
- ✓ Low MDA: 24Bq or 34 Bq Co-60, achieved by 24 plastic scintillator detectors with spectroscopic read-out in a 4 π configuration, modular lead lingot shielding of up to 75 mm on six sides,
- ✓ Unprecedented precision and low uncertainty: Spectrometric detector readout and signal processing, simulation-based object models, automatic efficiency and background correction,
- ✓ Improved handling of inhomogeneities: optional analysis software module,
- ✓ Highly customizable: 1 or 2 doors configuration, selectable conveyor length, container installation; Configurable fingerprints, release limits and objects,
- ✓ Modern software platform: Windows 10 IoT LTSC operating system and state-of-the-art Lighthouse analysis software
- ✓ Simple use: user-friendly and intuitive graphical user interface, software-controlled door and conveyor operation, remote control station, built-in weight scale,
- ✓ Straightforward calibration and maintenance: single source calibration, real-time spectrum display, software guided efficiency check and hardware diagnostics,
- ✓ Robustness and safety: Stainless steel chamber lining and external cladding, robust chassis, door hinges and position switches, protection fences and oversize sensors,
- ✓ Safe transportation by crane with full shielding installed.

RTM644-SMART™ LARGE CLEARANCE MONITOR

The RTM644-Smart comes with advanced administrator and maintenance features: the realtime energy spectrum display provides with a radiological health check of detector array on a single glance. All calibration and routine efficiency checks are configurable and software guided. The comprehensive and intuitive monitor software comes with user configurable libraries for release limits, radiological fingerprints or editable standard objects like crates or waste drums.

To extend the functionality to application-specific objects or assess specific environmental conditions or nuclide vectors, validated Monte-Carlo-simulations are available as a complementary service. The self-contained results database facilitates customized report generation, decision tracing and recalculation.

RADIOLOGICAL CHARACTERISTICS

DETECTION

- 24 large-volume plastic scintillation detectors – total active volume: 303 litres,
- Spectrometric read-out with 256 channels,
- Lower energy threshold: 80 keV,
- Measurable activity range: 10 Bq to 1 000 000 Bq.

BACKGROUND PROCESSING

- Advanced background filter permitting the detection and suppression of transitory background variations and an accelerated adaptation to lasting changes.
- The background stability is monitored also during the measurement,
- Automatic calculation of the background reduction by the object.

ALGORITHM

- Calculation of the mass or surface specific activity per nuclide,
- Bayesian statistics based, compliant with the ISO11929:2019 for calculation and clearance decision,
- Simulation based object models, valid for all nuclides in the library,
- Single nuclide efficiency calibration, no dummy objects needed for geometry correction,
- Automatic correction of the detection efficiency and background attenuation for mass, density and geometry of the objects,
- Compensation of NORM contributions by nuclide including density correction,
- Configurable nuclide vectors (fingerprints) and release limits.

SPECIAL

- Verification and optimization of the declared nuclide vector during clearance measurements,
- Residual chamber contamination checks,

DETECTION LIMITS

- Point source in chamber centre,
- Background (BKG) count-rate 2400 cps (approx.100 nSv/h, 75 mm lead),
- False alarm safety quantile $k_{\alpha}=1.65$, detection safety quantile $k_{\beta}=1.65$, $T_{BKG}=300$ s

Measurement time (s)	10	30	60	180
Co-60	116 Bq	69 Bq	51 Bq	34 Bq
Cs-137	234 Bq	139 Bq	103 Bq	69 Bq
Ba-133	226 Bq	134 Bq	99 Bq	66 Bq

MECHANICAL CHARACTERISTICS

- Chamber: 138 x 112 x 121 cm³ (LxWxH), 1870 liters,
- Ext. chassis dimensions: 191 x 186 x 229 cm³ (LxWxH),
- Conveyor length :
 - Conveyor : default length 300 cm
 - External chain conveyor, standard length 1.9 m
- Built-in weight scale, maximum 1000kg, 0.1 kg resolution,
- 50 or 75 mm lead shielding, transportable by crane with the shielding installed,
- Total weight with shielding:

Shielding	50 mm	75 mm
Weight	13 500 kg	17 600 kg

FUNCTIONAL CHARACTERISTICS

- Single/double doors, single/double chain conveyors, motorized operation with PLC,
- Automatic object loading, integrated in measurement software, object detection by the weight scale,
- Up to 2 still cameras, triggered by position sensors,
- Remote user interface with colour screen, keyboard and pointing device, single RJ45 cable connection,
- Visual and audible contamination alarm,
- Report and label printing, optional barcode-reader user-configurable PDF report generator,
- Hierarchical password protected administrator access,
- Software assisted monitor diagnosis and calibration,
- Software module for configurable quality assurance system check procedures
- Preconfigurable software libraries of
 - Objects (drums, bags, clothes, toolboxes etc.),
 - Nuclide vectors / Fingerprints,
 - Nuclides,
 - Release limits etc.
- Self-contained results database with raw spectra and object data for reporting, tracing and recalculation,
- Network capability with interface to waste-management system.


ENVIRONMENTAL CHARACTERISTICS

- Operating temperature range +5°C to +45°C
- Storage temperature range -25°C to +60°C
- Relative humidity (non-condensing) 40% to 100%

ELECTRICAL CHARACTERISTICS


- Operating voltage: 220 / 380 V, 3 phases, 50-60 Hz
- Nominal current: 5 A
- UPS backup autonomy (computer only): 60 min
- 2 external USB connectors, 1 LAN connection
- Configurable logical outputs available on request

RTM644-SMART™ LARGE CLEARANCE MONITOR

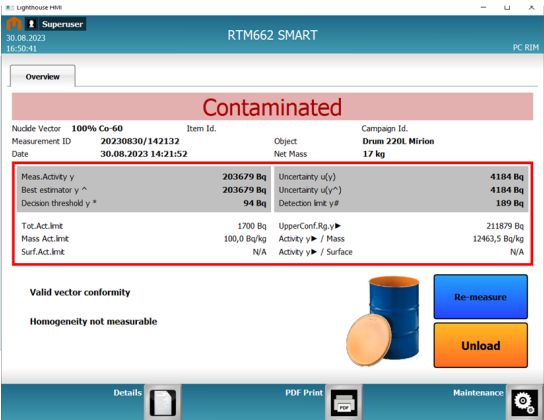

REAL-TIME SPECTRA DISPLAY


The radiological health check is simplified by comparing visually an actual Co-60 spectrum with a reference. With the spectrum in the accurate position, the detection efficiency will also have the expected value. Any deviations can be analysed and corrected in dedicated menus.

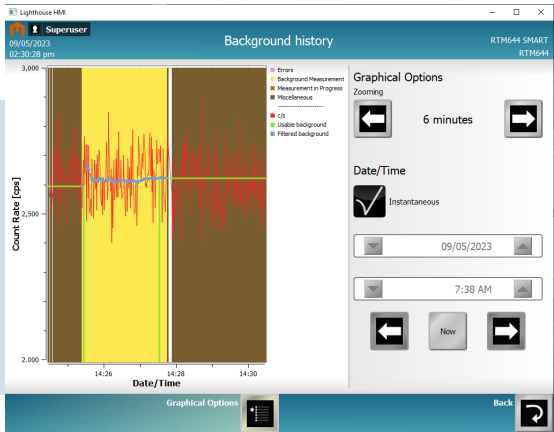

RESULTS SCREEN

Detailed display of measurement conditions and results for a case where the alarm level is exceeded.

The screen contains all information about the measured activity, its uncertainty as well as the decision and detection limit, as required by ISO11929.

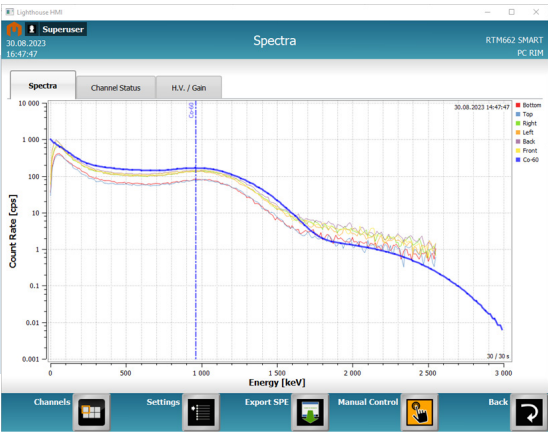

BACKGROUND DIAGNOSTICS

Graphical display of the background history including the count-rate, the filtering process and the reference background. The background history is stored for 3 months with a resolution of 1 s for 3 days and 60 s for the remaining time.

RTM644-SMART™ LARGE CLEARANCE MONITOR

LightHouse HMI

Supervisor

30.08.2023 16:50:23

Nuclide Vector

RTM662 SMART PC RIM

Overview Edit Vector

Radionuclide Proportion Relative Uncertainty

Cs-137	65,0 %	± 10,0 %
Co-60	35,0 %	± 10,0 %

Total 100,0 %

Add nuclide

Print Save Back

NUCLIDE VECTORS

Configuration screen for the nuclide vectors. The declared abundance of the nuclides is used to calculate the release limits and the expected detection efficiency. The uncertainty is included in the calculation of the total coverage range according to ISO11929.

RELEASE LIMITS

Library of the nuclide specific release limits. Different, user-configurable datasets can be selected.

LightHouse HMI

Supervisor

30.08.2023 16:49:29

Unconditional clearance - Mass specific activity

RTM662 SMART PC RIM

Nuclide	Clearance Level	Unit	Half-Life
Ce-144D	10,0	Bq/g	285,0 d
Co-57	1,0	Bq/g	218,8 d
Co-58	1,0	Bq/g	70,9 d
Co-60	0,1	Bq/g	5,3 a
Co-60m	1000,0	Bq/g	30,0 a
Cr-51	100,0	Bq/g	27,7 d
Cr-134	0,1	Bq/g	2,1 a
Cr-137	0,1	Bq/g	30,0 a
Eu-152	0,1	Bq/g	13,5 a
Eu-154	0,1	Bq/g	8,6 a
F-18	10,0	Bq/g	109,7 m
Fe-55	1000,0	Bq/g	2,7 a
H-3	100,0	Bq/g	12,3 a
K-40	1,0	Bq/g	1,3e9 a
Mn-54	0,1	Bq/g	312,1 d
N-13	100,0	Bq/g	<10 m
Na-22	0,1	Bq/g	2,6 a

Back

SYSTEM CHECK

Quality assurance procedures require periodic verification of the detection efficiency and correct operation of the system. The System Check module provides comprehensive functionalities to simplify periodic quality assurance.

LightHouse HMI

Supervisor

04.09.2023 11:20:40

System Check Reference

RTM662 SMART PC RIM

Nuclide Co-60

Tool name Concrete drum 1.6 345kg Concrete drum 1.6 345kg

Calibration Source Mirion 51773 (Co-60)

Background Measurement Time 180 s

Measurement Time 60 s

Max Deviation Single Channel 8,00 %

Max Deviation Sum Channel 5,00 %

Include Scales Check Max Deviation Scales 1,00 %

Back Add New Tool Next



Copyright © 2023 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



RTM662-300

(CGO-Smart™ LNC)

Clearance Monitor



The Mirion RTM662-300 Gamma Clearance Monitor is designed for Clearance measurements of average sized items like waste bags, toolboxes or 100 liters drums.

DESCRIPTION

The RTM662-300 is an advanced clearance monitor for large objects. It consists of a measurement chamber with a manually operated swing door. The objects are detected and weighed by integrated scales and checked for gamma radiation by 6 state-of-the-art plastic scintillation detectors with spectroscopic read-out.

The RTM662-300 is based on an advanced software platform with Windows 10 IoT operating system. This analysis software reports nuclide specific activity, brings lower measurement uncertainties, handles complex nuclide vectors and simplifies maintenance.

It is based on the well-proven algorithm principles and improved leading nuclide correlation method (LNC) technology as used in many Mirion RTM monitors. The state-of-the-art spectrometric detector read-out and the simulation-based object models allow an unprecedented measurement accuracy.

It provides with reliable efficiency correction for all nuclides in the fingerprint. The automatic verification and optimization of the declared nuclide vector can further reduce the measurement uncertainties.

FEATURES

- **Gamma clearance monitor** compliant with Euratom 2013/59, IAEA RS-G-1.7, ISO11929:2019
- **Average Waste bags and 100 drums:** counting chamber dimensions 60.8 x 60.1 x 84 cm³, volume 307 liters,
- **Low MDA:** 18 Bq Co-60 achieved by 6 plastic scintillator detectors in a 4 π configuration, modular lead lingot shielding of up to 50 mm on six sides,
- **Unprecedented precision and low uncertainty:** Spectrometric detector readout and signal processing, simulation-based object models, automatic efficiency and background correction,
- **Highly customizable:** Configurable fingerprints, release limits and object models,
- **Simple use:** user-friendly and intuitive graphical user interface, optional remote control station, built-in weight scale,
- **Straightforward calibration and maintenance:** single source calibration, real-time spectrum display, software guided efficiency check and hardware diagnostics,
- **Robustness and safety:** Stainless steel chamber lining and external cladding, robust chassis, door hinges and position switches, fork pockets,
- **Safe transportation** by crane or forklift with full shielding installed.

RTM662-300 CLEARANCE MONITOR

The RTM662-300 comes with advanced administrator and maintenance features: the real-time energy spectrum display provides with a radiological health check of detector array on a single glance. All calibration and routine efficiency checks are user-configurable and software guided.

The comprehensive and intuitive monitor software comes with user configurable libraries for release limits, radiological fingerprints or editable standard objects like crates or waste drums. To extend the functionality to application-specific objects or assess specific environmental conditions or nuclide vectors, validated Monte-Carlo simulations are available as a complementary service.

The self-contained results database facilitates personalized report generation, decision tracing, recalculation and interfacing to waste management systems.

RADIOLOGICAL CHARACTERISTICS

DETECTION

- 6 large-volume plastic scintillation detectors – total active volume: 113,4 litres,
- Spectrometric read-out with 256 channels,
- Lower energy threshold: 80 keV,
- Measurable activity range: 10 Bq to 1 000 000 Bq.

BACKGROUND PROCESSING

- Advanced background filter permitting the detection and suppression of transitory background variations and an accelerated adaptation to lasting changes.
- The background stability is monitored also during the measurement,
- Automatic calculation of the background reduction by the object.

ALGORITHM

- Calculation of the mass or surface specific activity per nuclide,
- Bayesian statistics based, compliant with the ISO11929:2019 for calculation and clearance decision,
- Simulation based object models, valid for all nuclides in the library,
- Single nuclide efficiency calibration, no dummy objects needed for geometry correction,
- Automatic correction of the detection efficiency and background attenuation for mass, density and geometry of the objects,
- Compensation of NORM contributions by nuclide including automatic density correction
- Configurable nuclide vectors (fingerprints) and release limits.

SPECIAL

- Verification and optimization of the declared nuclide vector during clearance measurements,
- Residual chamber contamination checks.

DETECTION LIMITS

- Point source in chamber centre,
- Background (BKG) count-rate 900 cps (approx.100 nSv/h, 50 mm lead),
- False alarm safety quantile $k_a=1.65$, detection safety quantile $k_p=1.65$,
 $T_{BKG} = 300$ s

Measurement time (s)	10	30	60	180
Co-60	63 Bq	37 Bq	28 Bq	18 Bq
Cs-137	127 Bq	75 Bq	56 Bq	36 Bq
Ba-133	123 Bq	72 Bq	54 Bq	35 Bq

MECHANICAL CHARACTERISTICS

- Chamber: 60.8 x 60.1 x 84 cm³ (LxWxH), 307 liters,
- Ext. chassis dimensions (LxWxH): 109.9 x 91.2 x 154.1 cm³,
Without cladding and handles : 95.0 x 89.9 x 154.1 cm³
- Built-in weight scale, maximum 150kg, 0.1 kg resolution,
- 25 or 50 mm lead shielding, transportable by crane or forklift with the shielding installed,
- Total weight with shielding:

Shielding	Without (only bottom)	25	50
Weight	1250 kg	2221 kg	3414 kg

FUNCTIONAL CHARACTERISTICS

- Double / single sided, manual doors operation,
- Automatic item detection by weigh scale, still-camera in the measuring chamber,
- User interface by two 10", colour touchscreens, remote control station possible,
- Visual and audible contamination alarm,
- Report and label printing, optional barcode reader, user-configurable PDF report generator,
- Hierarchical password protected administrator access,
- Software assisted monitor diagnosis and calibration,
- Software module for configurable quality assurance system check procedures,
- Software libraries of
 - Objects (drums, bags, clothes, toolboxes etc.),
 - Nuclide vectors / Fingerprints,
 - Nuclides,
 - Release limits etc.
- Self-contained results database with raw spectra and object data for reporting, tracing and recalculation,
- Network capability with interface to waste-management system.


ENVIRONMENTAL CHARACTERISTICS

- Operating temperature range +5°C to +45°C
- Storage temperature range -25°C to +60°C
- Relative humidity (non-condensing) 40% to 100%

ELECTRICAL CHARACTERISTICS

- Operating voltage: 110-230 V, 50-60 Hz
- Nominal current : 5 / 3 A
- UPS backup autonomy (computer only): 60 min
- 2 external USB connectors, 1 LAN connection
- 2 floating-contact outputs

RTM662-300 CLEARANCE MONITOR

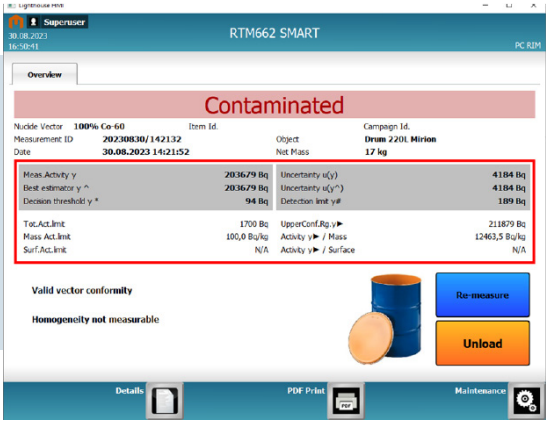



RESULTS SCREEN

Detailed display of measurement conditions and results for a case where the alarm level is exceeded.

The screen contains all information about the measured activity, its uncertainty as well as the decision and detection limit, as required by ISO11929*

REAL-TIME SPECTRA DISPLAY


The radiological health check is simplified by comparing visually an actual Co-60 spectrum with a reference. With the spectrum in the accurate position, the detection efficiency will also have the expected value. Any deviations can be analysed and corrected in dedicated menus*

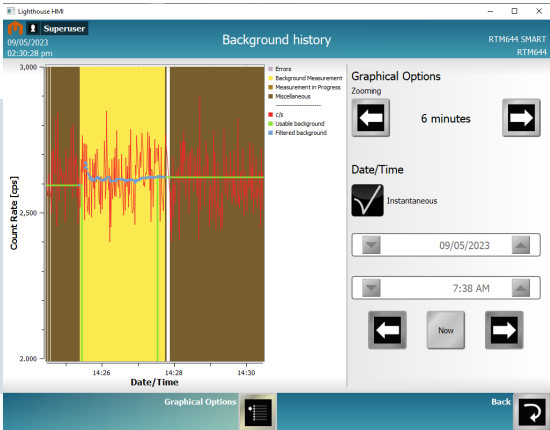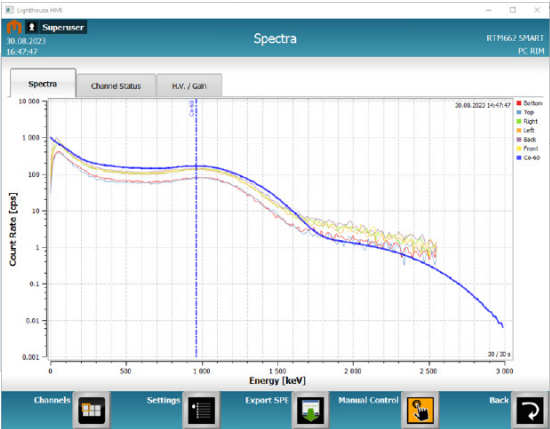

BACKGROUND DIAGNOSTICS

Graphical display of the background history including the count-rate, the filtering process and the reference background. The background history is stored for 3 months with a resolution of 1 s for 3 days and 60 s for the remaining time*

RTM662-300 CLEARANCE MONITOR


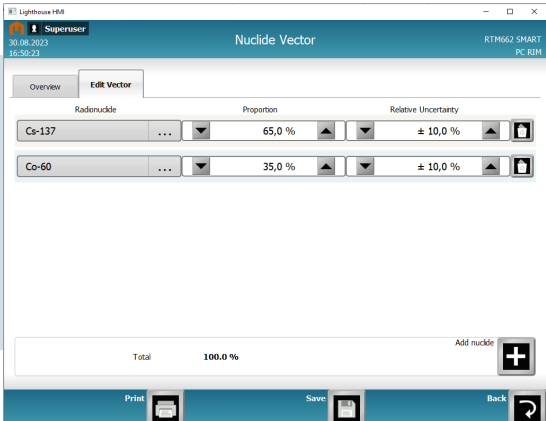


NUCLIDE VECTORS

Configuration screen for the nuclide vectors. The declared abundance of the nuclides is used to calculate the release limits and the expected detection efficiency. The uncertainty is included in the calculation of the total coverage range according to ISO11929*

RELEASE LIMITS

Library of the nuclide specific release limits. Different, user-configurable datasets can be selected*

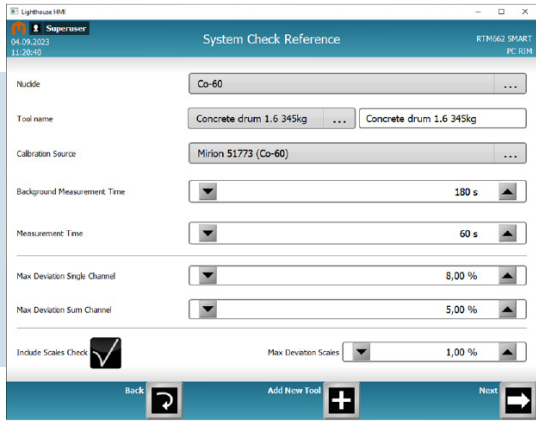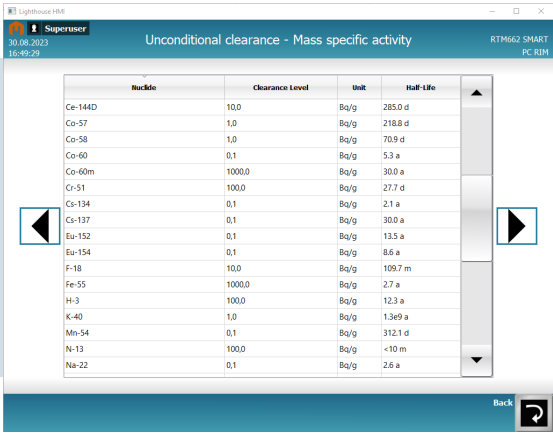

SYSTEM CHECK

Quality assurance procedures require periodic verification of the detection efficiency and correct operation of the system. The System Check module provides comprehensive functionalities to simplify periodic quality assurance*


*All Mirion products are subject to continuous improvement and replacement of outdated components. This may lead to occasional design changes. Screenshots are for illustration purposes only, details depend on the ordered configuration.





RTM622-460

Clearance Monitor

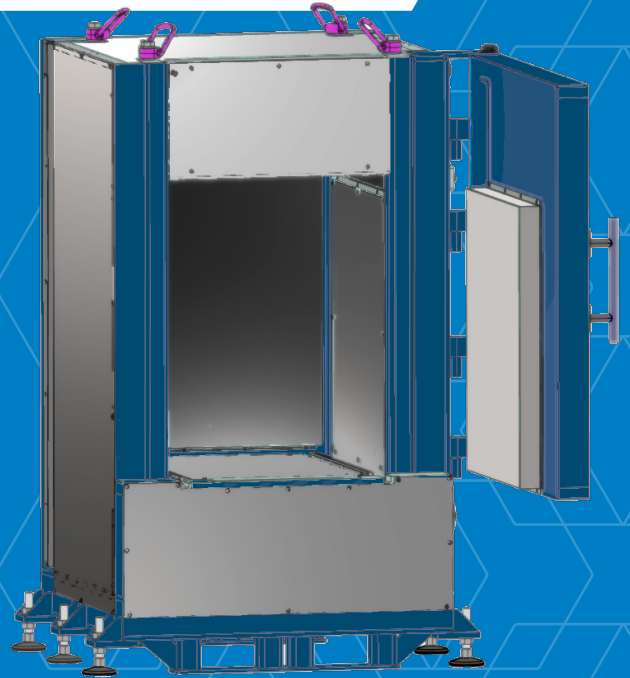

The Mirion RTM662-460 is designed for clearance measurements of large items like large waste bags, crates or drums.

DESCRIPTION

The RTM662-460 is an advanced clearance monitor for large objects. It consists of a measurement chamber with a manually operated swing door. The objects are detected and weighed by integrated scales and checked for gamma radiation by 6 state-of-the-art plastic scintillation detectors with spectroscopic read-out.

The RTM662-460 shares the common, modern Lighthouse monitor software platform with Windows 10 IoT operating system. This analysis software reports nuclide specific activity, brings lower measurement uncertainties, handles complex nuclide vectors and simplifies maintenance.

It is based on the well-proven algorithm principles and improved leading nuclide correlation method (LNC) technology as used in many Mirion RTM monitors. The state-of-the-art spectrometric detector read-out and the simulation-based object models allow an unprecedented measurement accuracy. It provides with reliable efficiency correction for all nuclides in the fingerprint. The automatic verification and optimization of the declared nuclide vector can further reduce the measurement uncertainties.

FEATURES

- **Gamma clearance monitor** compliant with Euratom 2013/59, IAEA RS-G-1.7, ISO11929:2019
- **Large Waste bags and drums:** counting chamber dimensions 70 x 70 x 95 cm³, volume 460 liters,
- **Low MDA:** 22 Bq Co-60 achieved by 6 plastic scintillator detectors in a 4 π configuration, modular lead lingot shielding of up to 75 mm on six sides,
- **Unprecedented precision and low uncertainty:** Spectrometric detector readout and signal processing, simulation-based object models, automatic efficiency and background correction,
- **Highly customizable:** Configurable fingerprints, release limits and object models,
- **Modern software platform:** Windows 10 IoT LTSC operating system and Lighthouse analysis software,
- **Simple use:** user-friendly and intuitive graphical user interface, optional remote control station, built-in weight scale,
- **Straightforward calibration and maintenance:** single source calibration, real-time spectrum display, software guided efficiency check and hardware diagnostics,
- **Robustness and safety:** Stainless steel chamber lining and external cladding, robust chassis, door hinges and position switches, fork pockets,
- **Safe transportation** by crane or forklift with full shielding installed.

RTM662-460 CLEARANCE MONITOR

The RTM662-460 comes with advanced administrator and maintenance features: the real-time energy spectrum display provides with a radiological health check of detector array on a single glance. All calibration and routine efficiency checks are user-configurable and software guided.

The comprehensive and intuitive monitor software comes with user configurable libraries for release limits, radiological fingerprints or editable standard objects like crates or waste drums.

To extend the functionality to application-specific objects or assess specific environmental conditions or nuclide vectors, validated Monte-Carlo simulations are available as a complementary service.

The self-contained results database facilitates personalized report generation, decision tracing, recalculation and interfacing to waste management systems.

RADIOLOGICAL CHARACTERISTICS

DETECTION

- 6 large-volume plastic scintillation detectors – total active volume: 113,4 litres,
- Spectrometric read-out, 256 channels,
- Lower energy threshold: 80 keV,
- Measurable activity range: 10 Bq to 1 000 000 Bq.

BACKGROUND PROCESSING

- Advanced background filter permitting the detection and suppression of transitory background variations and an accelerated adaptation to lasting changes.
- The background stability is monitored also during the measurement,
- Automatic calculation of the background reduction by the object.

ALGORITHM

- Calculation of the mass or surface specific activity per nuclide,
- Bayesian statistics based, compliant with the ISO11929:2019 for calculation and clearance decision,
- Simulation based object models, valid for all nuclides in the library,
- Single nuclide efficiency calibration, no dummy objects needed for geometry correction,
- Automatic correction of the detection efficiency and background attenuation for mass, density and geometry of the objects,
- Compensation of NORM contributions by nuclide including automatic density correction,
- Configurable nuclide vectors (fingerprints) and release limits.

SPECIAL

- Verification and optimization of the declared nuclide vector during clearance measurements,
- Residual chamber contamination checks,

DETECTION LIMITS

- Point source in chamber centre,
- Background (BKG) count-rate 900 cps (approx. 100 nSv/h, 75 mm lead),
- False alarm safety quantile $k_a=1.65$, detection safety quantile $k_p=1.65$, $T_{BKG}=300$ s

Measurement time (s)	10	30	60	180
Co-60	75 Bq	44 Bq	33 Bq	22 Bq
Cs-137	151 Bq	89 Bq	67 Bq	44 Bq
Ba-133	146 Bq	96 Bq	64 Bq	43 Bq

MECHANICAL CHARACTERISTICS

- Chamber: 70 x 70 x 95 cm³ (LxWxH), 460 litres,
- Ext. chassis dimensions: 115 x 158 x 235 cm³ (LxWxH),
- Built-in weight scale, maximum 500kg, 0.1 kg resolution,
- 25mm, 50mm or 75mm lead shielding, transportable by crane or forklift with the shielding installed,
- Total weight with shielding:

Shielding	Without (only bottom)	25 mm	50 mm	75 mm
Weight	2150 kg	3692 kg	5534 kg	7376 kg

FUNCTIONAL CHARACTERISTICS

- Single door, manual operation,
- Automatic object detection by the weight scale,
- Optional software controlled cameras,
- Remote user interface with colour screen, keyboard and pointing device, single RJ45 cable connection,
- Visual and audible contamination alarm,
- Report and label printing, optional barcode reader, user-configurable PDF report generator,
- Hierarchical password protected administrator access,
- Software assisted monitor diagnosis and calibration,
- Software module for configurable quality assurance system check procedures,
- Software libraries of
 - Objects (drums, bags, clothes, toolboxes etc.),
 - Nuclide vectors / Fingerprints,
 - Nuclides,
 - Release limits etc.
- Self-contained results database with raw spectra and object data for reporting, tracing and recalculation,
- Network capability with interface to waste-management system.


ENVIRONMENTAL CHARACTERISTICS

- Operating temperature range +5°C to +45°C
- Storage temperature range -25°C to +60°C
- Relative humidity (non-condensing) 40% to 100%

ELECTRICAL CHARACTERISTICS

- Operating voltage: 110-230 V, 50-60 Hz
- Nominal current 5 / 3 A
- UPS backup autonomy: 60 min
- 2 external USB connectors, 1 LAN connection
- 2 floating-contact outputs

RTM662-460 CLEARANCE MONITOR

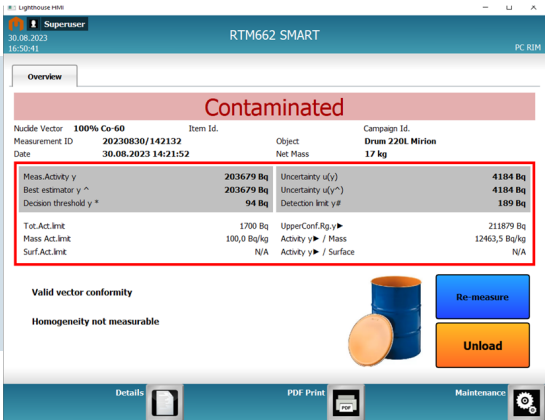

RESULTS SCREEN



Detailed display of measurement conditions and results for a case where the alarm level is exceeded.

The screen contains all information about the measured activity, its uncertainty as well as the decision and detection limit, as required by ISO11929.

REAL-TIME SPECTRA DISPLAY

The radiological health check is simplified by comparing visually an actual Co-60 spectrum with a reference.

With the spectrum in the accurate position, the detection efficiency will also have the expected value. Any deviations can be analysed and corrected in dedicated menus.

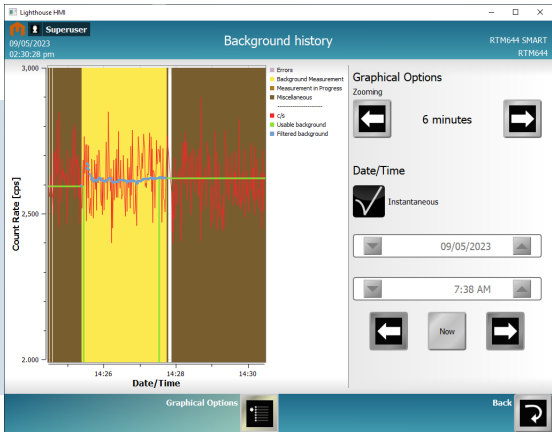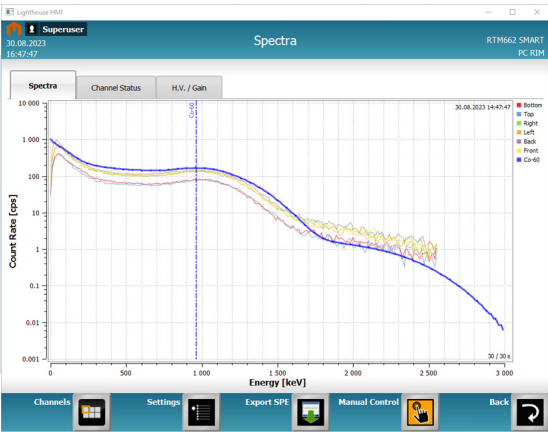


BACKGROUND DIAGNOSTICS

Graphical display of the background history including the count-rate, the filtering process and the reference background.

The background history is stored for 3 months with a resolution of 1 s for 3 days and 60 s for the remaining time.

RTM662-460 CLEARANCE MONITOR

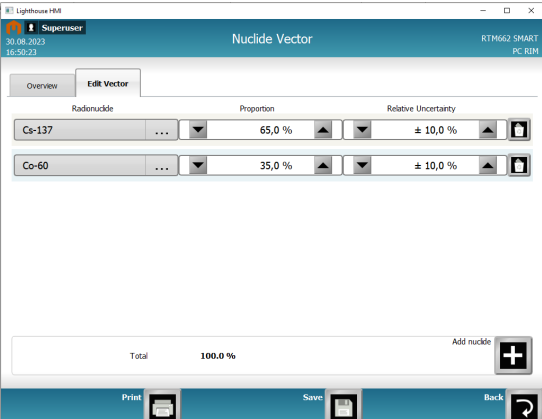


NUCLIDE VECTORS

Configuration screen for the nuclide vectors. The declared abundance of the nuclides is used to calculate the release limits and the expected detection efficiency. The uncertainty is included in the calculation of the total coverage range according to ISO11929.


RELEASE LIMITS

Library of the nuclide specific release limits. Different, user-configurable datasets can be selected.

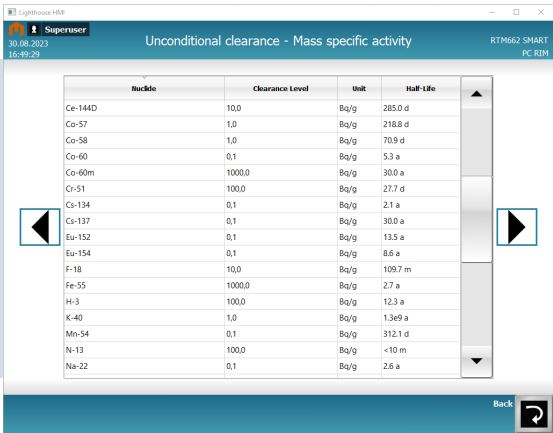

SYSTEM CHECK

Quality assurance procedures require periodic verification of the detection efficiency and correct operation of the system. The System Check module provides comprehensive functionalities to simplify periodic quality assurance.

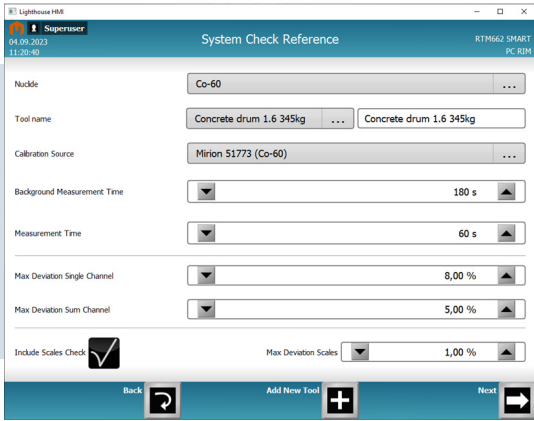

Copyright © 2023 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



RTM662-460C

Clearance Monitor



The Mirion RTM662-460C is designed for clearance measurements of 200 liters drums or other large items like waste bags.

DESCRIPTION

The RTM662-460C is an advanced clearance monitor for large objects. It consists of a measurement chamber with motor-operated swing doors and automatic chain conveyor system. The measurement objects are weighed by integrated scales and checked for gamma radiation by 6 state-of-the-art plastic scintillation detectors with spectroscopic read-out.

The RTM662-460C shares the common, modern Lighthouse™ monitor software platform with Windows 10 IoT operating system. This analysis software reports nuclide specific activity, brings lower measurement uncertainties, handles complex nuclide vectors, automatizes loading and simplifies maintenance.

It is based on the well-proven algorithm principles and the improved leading nuclide correlation (LNC) technology as used in many Mirion RTM monitors. The state-of-the-art spectrometric detector read-out and the simulation-based object models allow an unprecedented measurement accuracy. It provides reliable efficiency correction for all nuclides in the fingerprint. The automatic verification and optimization of the declared nuclide vector can reduce the measurement uncertainties further.

FEATURES

- **Gamma clearance monitor** compliant with Euratom 2013/59, IAEA RS-G-1.7, ISO11929:2019
- **Large Waste bags and 200 liters drums:** counting chamber dimensions 70 x 70 x 95 cm³, volume 460 L,
- **Low MDA:** 22 Bq Co-60, achieved by 24 plastic scintillator detectors with spectroscopic read-out in a 4 π configuration, modular lead lingot shielding of up to 75 mm on six sides,
- **Unprecedented precision and low uncertainty:** Spectrometric detector readout and signal processing, simulation-based object models, automatic efficiency and background correction,
- **Highly customizable:** 1 or 2 doors configuration, selectable conveyor length, container installation; Configurable fingerprints, release limits and objects,
- **Modern software platform:** Windows 10 IoT LTSC operating system and state-of-the-art Lighthouse analysis software
- **Simple use:** user-friendly and intuitive graphical user interface, software-controlled door and conveyor operation, remote control station, built-in weigh scale,
- **Straightforward calibration and maintenance:** single source calibration, real-time spectrum display, software guided efficiency check and hardware diagnostics,
- **Robustness and ergonomics:** Stainless steel chamber lining and external cladding,
- **Safe transportation** by crane lifting eyelets or forklift pockets

RTM662-460C CLEARANCE MONITOR

The RTM662-460C comes with advanced administrator and maintenance features: the real-time energy spectrum display provides with a radiological health check of detector array on a single glance. All calibration and routine efficiency checks are configurable and software guided. The comprehensive and intuitive monitor software comes with user configurable libraries for release limits, radiological fingerprints or editable standard objects like crates or waste drums. To extend the functionality to application-specific.

Validated Monte-Carlo simulations are available as a complementary service to extend the functionality to application-specific objects, the assessment of specific environmental conditions or nuclide vectors.

RADIOLOGICAL CHARACTERISTICS

DETECTION

- 6 large-volume plastic scintillation detectors – total active volume: 113,4 litres,
- Spectrometric read-out with 256 channels,
- Lower energy threshold: 80 keV,
- Measurable activity range: 10 Bq to 1 000 000 Bq.

BACKGROUND PROCESSING

- Advanced background filter permitting the detection and suppression of transitory background variations and an accelerated adaptation to lasting changes.
- The background stability is monitored also during the measurement,
- Automatic calculation of the background reduction by the object.

ALGORITHM

- Calculation of the mass or surface specific activity per nuclide,
- Bayesian statistics based, compliant with the ISO11929:2019 for calculation and clearance decision,
- Simulation based object models, valid for all nuclides in the library,
- Single nuclide efficiency calibration, no dummy objects needed for geometry correction,
- Automatic correction of the detection efficiency and background attenuation for mass, density and geometry of the objects,
- Compensation of NORM contributions by nuclide including automatic density correction
- Configurable nuclide vectors (fingerprints) and release limits.

SPECIAL

- Verification and optimization of the declared nuclide vector during clearance measurements,
- Residual chamber contamination checks.

DETECTION LIMITS

- Point source in chamber centre,
- Background (BKG) count-rate 900 cps (approx.100 nSv/h, 75 mm lead),
- False alarm safety quantile $k_a=1.65$, detection safety quantile $k_p=1.65$,
 $T_{BKG} = 300$ s

Measurement time (s)	10	30	60	180
Co-60	75 Bq	44 Bq	33 Bq	22 Bq
Cs-137	151 Bq	89 Bq	67 Bq	44 Bq
Ba-133	146 Bq	86 Bq	64 Bq	43 Bq

MECHANICAL CHARACTERISTICS

- Chamber: 70 x 70 x 95 cm³ (LxWxH), 460 liters,
- External dimensions: 115 x 158 x 235 cm³ (LxWxH),
- Conveyor: length 250 cm, max. object diameter 63 cm,
- Built-in weight scale, maximum 500 kg, 0.1 kg resolution,
- 50 to 75 mm lead shielding, in-field installation possible from the outside, transportable by crane or forklift with shielding installed,
- Total weight with shielding:

Shielding	Without (only bottom)	50 mm	75 mm
Weight	2150 kg	5534 kg	7376 kg

FUNCTIONAL CHARACTERISTICS

- Single door with chain conveyor, motorized operation with PLC,
- Up to 2 still cameras, triggered by position sensors,
- Automatic object loading, integrated in measurement software, object detection by the weight scale,
- Remote user interface with colour screen, keyboard and pointing device, single RJ45 cable connection,
- Visual and audible contamination alarm,
- Report and label printing, optional barcode-reader, user-configurable PDF report generator,
- Hierarchical password protected administrator access,
- Software module for configurable quality assurance system check procedures
- Software assisted monitor diagnosis and calibration,
- Preconfigurable software libraries of
 - Objects (drums, bags, clothes, toolboxes etc.),
 - Nuclide vectors / Fingerprints,
 - Nuclides,
 - Release limits etc.
- Self-contained results database with raw spectra and object data for reporting, tracing and recalculation
- Detailed, configurable PDF report generator,
- Network capability with interface to waste-management system.


ENVIRONMENTAL CHARACTERISTICS

- Operating temperature range +5°C to +45°C
- Storage temperature range -25°C to +60°C
- Relative humidity (non-condensing) 40% to 100%

ELECTRICAL CHARACTERISTICS

- Operating voltage: 220 / 380 V, 3 phases, 50-60 Hz
- Nominal current 10 / 5 A
- UPS backup autonomy (computer only): 60 min
- 2 external USB connectors, 1 LAN connection
- 2 floating-contact outputs

RTM662-460C CLEARANCE MONITOR

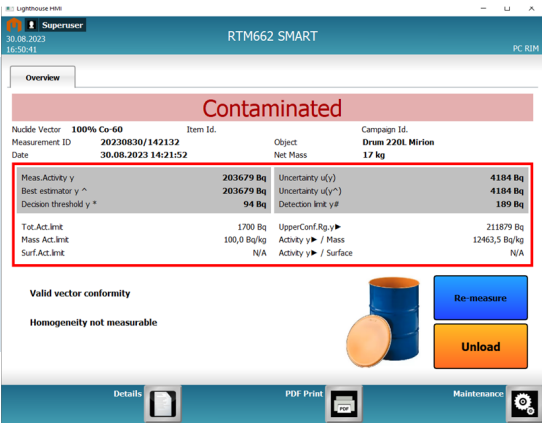


RESULTS SCREEN

Detailed display of measurement conditions and results for a case where the alarm level is exceeded.

The screen contains all information about the measured activity, its uncertainty as well as the decision and detection limit, as required by ISO11929.


REAL-TIME SPECTRA DISPLAY

The radiological health check is simplified by comparing visually an actual Co-60 spectrum with a reference. With the spectrum in the accurate position, the detection efficiency will also have the expected value. Any deviations can be analysed and corrected in dedicated menus.

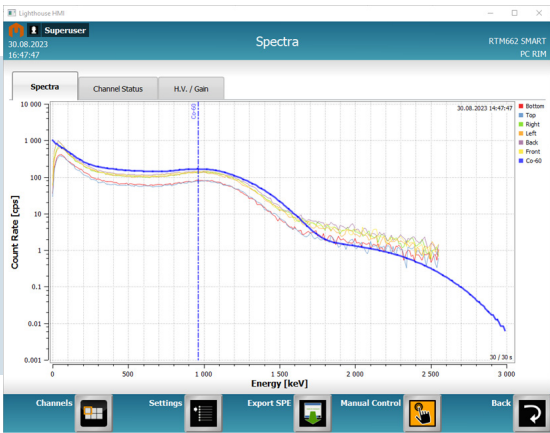


BACKGROUND DIAGNOSTICS

Graphical display of the background history including the count-rate, the filtering process and the reference background. The background history is stored for 3 months with a resolution of 1 s for 3 days and 60 s for the remaining time.

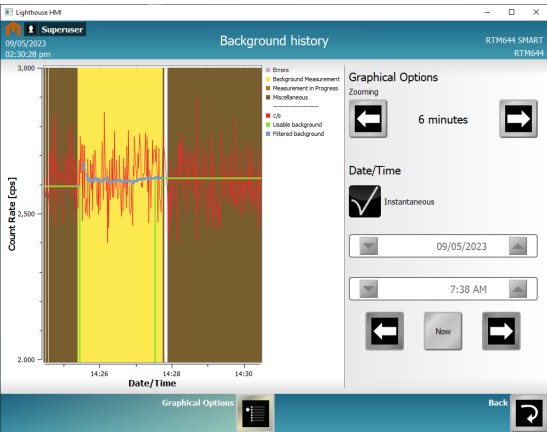

RTM662-460C CLEARANCE MONITOR

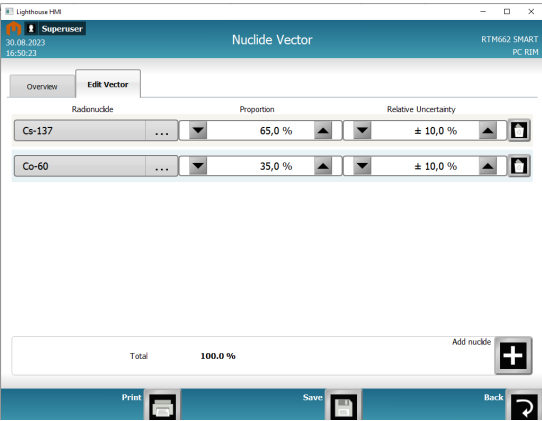


NUCLIDE VECTORS

Configuration screen for the nuclide vectors. The declared abundance of the nuclides is used to calculate the release limits and the expected detection efficiency. The uncertainty is included in the calculation of the total coverage range according to ISO11929.


RELEASE LIMITS

Library of the nuclide specific release limits. Different, user-configurable datasets can be selected.

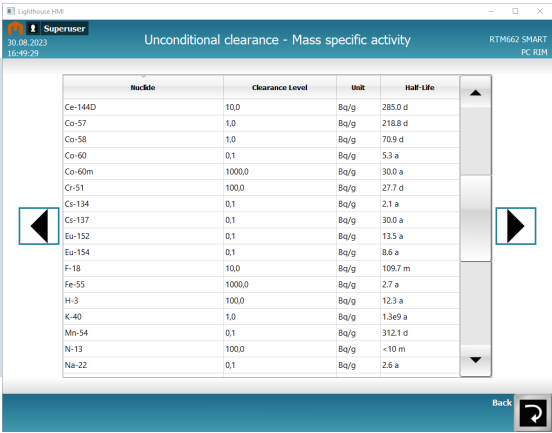

SYSTEM CHECK

Quality assurance procedures require periodic verification of the detection efficiency and correct operation of the system. The System Check module provides comprehensive functionalities to simplify periodic quality assurance.

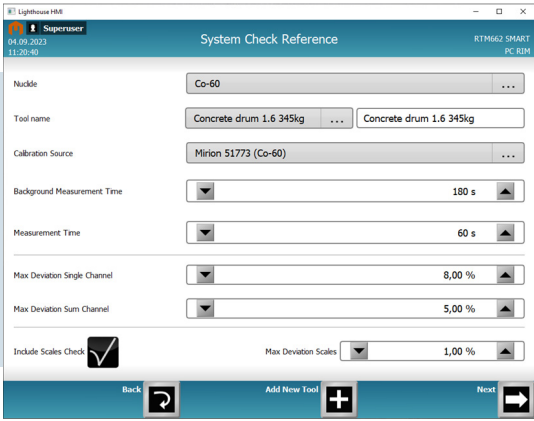

Copyright © 2023 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



GAMMA WASTE ASSAY SYSTEMS

Cronos[®]-4 and Cronos[®]-11

Gamma Object/Tool Monitors



DESCRIPTION

The Cronos-4 and Cronos-11 Gamma Object/Tool Monitors are extremely sensitive instruments used to detect gamma radiation in/on articles such as waste bags, tools, briefcases, hard hats, and other miscellaneous objects. Measurements which ensure that objects have no detectable radioactivity can result in significant cost savings in waste processing and/or storage.

By taking all the best features of Mirion contamination monitors together with new technology and input from health physicists and radiation protection workers worldwide, Mirion has produced a monitor that significantly outperforms any previous monitors in its class.

All Cronos monitors use a sophisticated “fast following” background trending and release-limit algorithm to provide the best performance in a stable or varying radiation field. The very low detection threshold is optimized by the quantity and sensitivity of the detectors, the thickness of the lead shielding and the measuring time, so that stringent user requirements can be met.

With Mirion WebRemote[®] software, an easy-to-use touch screen graphical user interface for industrial PC-based operation results in improved health physics programs, better tracking of contamination and faster, more thorough personnel throughput at boundary points. The devices are rugged and reliable; and they are extremely easy to use.

FEATURES

- ✓ Cronos-4 counting chamber volume: 128.7 L (4.5 cu. ft)
- ✓ Cronos-11 counting chamber volume: 345.5 L (12.2 cu. ft)
- ✓ Amongst the lowest MDA/largest counting chamber volume combinations
- ✓ Robust, ergonomic and easy-to-use and to decontaminate
- ✓ Counts gamma photons with energy >50 keV
- ✓ Six 50 mm (~2 in.) thick large surface area plastic scintillator detectors
- ✓ Six sides of removable 25 mm (~1 in.) thick lead ingot shielding standard
- ✓ Built-in 100 kg (~220 lb) range, 0.1 kg (0.22 lb) resolution, weigh scale
- ✓ Single or dual door operation
- ✓ Automatic or manual selection of transmission correction factors
- ✓ Alarms/messages provided audibly and visually
- ✓ Same “industry-best” software and serial bus electronics consistent with Mirion Argos[™]-3/5, GEM[™]-5 and Sirius[™] family; no re-training needed
- ✓ WebRemote enabled: provides an ergonomic and easy-to-use touch screen graphical user interface; accessible locally or via PC/tablet web browser
- ✓ Windows 7 Embedded operating system with LAN capability and USB ports
- ✓ Algorithm based on Gaussian or Bayesian statistics (compliant with the ISO 11929:2010 Standard requirements)

DETECTOR GEOMETRY AND BACKGROUND COMPENSATION

The Cronos' large cubic shaped measurement cavities are accessed through one or two doors. Six large area plastic scintillator detectors surround all sides of the cavities providing highly sensitive measuring volumes. Ambient background in the cavities is minimized by one (standard) or two (optional) 25 mm (~1 in.) thick layers of lead shielding. Adding the second layer of lead ingots does not change any internal dimensions or volume.

ELECTRONICS

The Cronos' computer operates on Windows 7 Embedded Operating System and uses USB flash for transferring data. Data may be retrieved either via USB or a LAN. The flat color display screen(s), the computer and the controls and optional indicator lights are located on top of the instrument. The High Voltage (HV), preamplification, amplification, discrimination, counting, test pulse generation and other processing electronics are mounted right on the detectors – therefore, no HV cabling exists.

SETTING PARAMETERS

Parameter settings, testing, calibration and maintenance is accomplished locally or from a remote location using Mirion WebRemote. WebRemote enables Tablet or PC connection to the Cronos-4/11 via LAN or direct link. Alternatively, the operator can use the standard Monitor Software, pre-installed on all Cronos Contamination Monitors, to provide local Monitor access and functionality. The following types of parameters are available for adjustment:

- Sensitivity of detection.
- Alarm activity levels can be set in units of Bq, dpm, or nCi.
- Weights (when applicable) in units of kg, g, lb.
- Specific Activities (when applicable) in units of Bq/kg, dpm/kg, nCi/kg, pCi/kg, Bq/g, dpm/g, nCi/g, pCi/g, Bq/lb, dpm/lb, nCi/lb and pCi/lb.
- False alarm non-detection and alarm confidence probabilities.
- HV Optimization using Figure-of-Merit (FOM) calculations.
- Fixed or variable count times (calculated and optimized as a function of the alarm level setpoint, the background and the desired accuracy of measurement).

MONITORING ASSISTANCE VIA USER INTERFACE

GENERAL

The various stages of the automatic measuring cycle are displayed on the screen(s) and a voice prompt will warn the user when a particular threshold has been exceeded (multiple languages are available). A trace can be kept of all checks made via the hard copy printout (if a printer is attached) and/or via software logging. In addition, performance monitoring data (such as detector efficiency check and calibration efficiency data can be saved to comma separated value (CSV) files for easy trending analysis with spreadsheet programs.


EASE OF USE

From cold startup to operation in as little as two minutes depending upon background conditions.

CRONOS-4® AND CRONOS-11® GAMMA OBJECT/TOOL MONITORS

To use the unit, one simply follows the messages displayed on the screen:


1. Open the door, place the object(s) to be monitored inside, close the door and press the Start button.

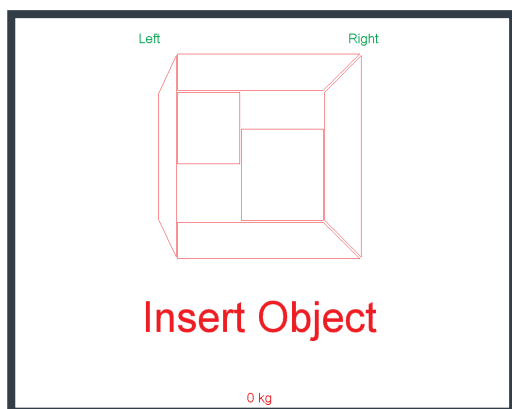

2. After the measuring period (and if the alarm threshold has not been reached), the message "Clean" is displayed and the operator can then remove the object by opening the door (or secondary door if in two-door operating mode).



3. If a pre set alarm threshold is exceeded, an audible alarm warns the operator and the red indicator "Contaminated" appears on the screen.

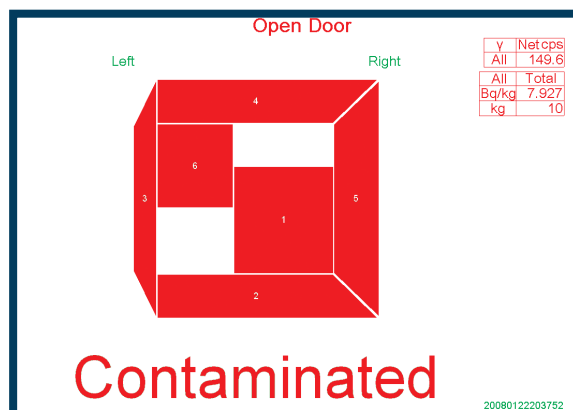

This display will show the quantity and location of the contamination based on which of the detectors is alarming, unless alarm is set on sum zone only. The operator opens the door, removes the object(s) and closes the door. The Cronos-1 will then perform a detector contamination check automatically to ensure there is no detectable amount of radioactivity remaining in the unit.

The measurement results can be printed out. This includes: time/date stamps, "BKG" background value, "Net" count and result of check ("CLEAN" or "CONTAMINATED" etc.). Once the object(s) has been removed from the unit and the doors closed, the device automatically switches to continuous background acquisition.

CRONOS-4® AND CRONOS-11® GAMMA OBJECT/TOOL MONITORS

MAINTENANCE

The system records data and time /date stamped logs showing the number of times the unit was used, parameters used, calibration settings, fault messages, etc. The system will also take itself out of service if the calibration interval is exceeded or other operational conditions exist which prevent the unit from achieving its desired sensitivity. These conditions can be configured by the user. Calibration can be easily executed by just one person and is highly automated.

Faults		Actions	Clear All Faults	Refresh	Return
Carrier Board	OK				
Sensor Board	OK				
Weight Sensor Board	OK				
Conditional Service	OK				
Temperature	OK				
Weight Zero	OK				
Background Update	OK				
+12 Volt	OK				
Measured	+12.10V +5.20V +3.30V 33.4 °C				

Zone	All	Type	Sum	Zone All Specific	Group Specific
In Service	YES				
Not Calibrated	NO				
Detector Contaminated	NO				
High Count Time	NO				
Due for Recalibration	NO				

Navigation buttons: α / β / γ, Type, Zone, First, Last, <, >, Clear Zone Faults, Place Zone in Conditional Service

REMOTE STATUS MONITORING

A user friendly dashboard enables the status monitoring (in service, contaminated, out of service, maintenance) of multiple contamination monitors over the LAN. The dashboard is accessible from a tablet or PC web browser and requires no proprietary software installation.



For ease of diagnostics numerous test screens are available to enable precision monitoring, and changing of parameters including high voltage and discrimination thresholds for each detector.

Setting	Status
Enabled	YES
Dwell Time	0.125 s
Option Switch	0
Front Keylock Option Switch	0
Back Keylock Option Switch	0
ADC Value	80000
Zero Scale Weight ADC value	80000
Maximum Scale Weight ADC value	2468592
Maximum Scale Weight	20 kg
Weight	0 kg ± 0 %
Valid Zero ADC Range ±	2500 (for Weight Zero Fault)
Object Detected Weight	0.1 kg
Require Object to Start	NO
Minimum Specific Weight	0.2 kg

Buttons: Find Zero (Tare Scale Tray), Set Zero Scale Weight ADC value, Set Maximum Scale ADC Value


Det#	Beta Counter		Alpha Counter		Gamma Counter	
	Count	Rate cps	Count	Rate cps	Count	Rate cps
1					384	384.59
2					423	423.72
3					428	428.73
4					391	391.61
5					368	368.54
6					373	373.56

Collecting Count Time 1.00 s





CRONOS-4® AND CRONOS-11® GAMMA OBJECT/TOOL MONITORS

SPECIFICATIONS

MODEL-SPECIFIC

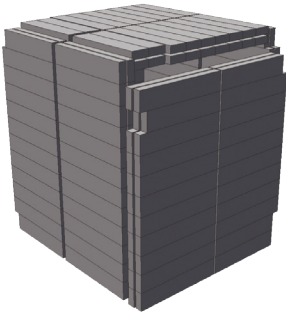TYPE	DESCRIPTION/ NOTES	Cronos-4	Cronos-11
RADIOLOGICAL			
Time to reach MDA:	Calculated count times for MDA = 83 Bq (5000 dpm) 80 nSv/h background, 1" lead shielding, $\alpha = 0.15\%$ and $1-\beta = 97.5\%$ confidence intervals.	- For ^{137}Cs: 48 seconds - For ^{60}Co: 10 seconds	- For ^{137}Cs: 130 seconds - For ^{60}Co: 22 seconds
Detectors:		- For doors and main unit: six 45.7 x 45.7 x 5.1 cm (18 x 18 x 2 in.) plastic scintillators with built-in photomultiplier tubes. 65.1 L (2.3 cu. ft) total detector volume.	- For doors: two 61 x 61 x 5.1 cm (24 x 24 x 2 in.) plastic scintillators with built-in photomultiplier tubes. - For main unit: four 61 x 74.9 x 5.1 cm (24 x 29.5 x 2 in.), plastic scintillators with built-in photomultiplier tubes. 130.5 L (4.6 cu. ft) total detector volume.
Shielding:	Top and bottom 25 mm (~1 in.) lead shielding (or optional 50 mm (~2 in.) shielding) around the six sides of the measurement cavity for nearly 4π counting geometry.		
MECHANICAL			
Internal Dimensions:	Width	46.5 cm (18.3 in.)	63.5 cm (25.0 in.)
	Depth	57.9 cm (22.8 in.)	87.2 cm (34.3 in.)
	Height	47.8 cm (18.8 in.)	62.4 cm (24.6 in.)
	Internal Volume	~128.7 L (~4.5 cu. ft)	~345.5 L (~12.2 cu. ft.)

CRONOS-4® AND CRONOS-11® GAMMA OBJECT/TOOL MONITORS

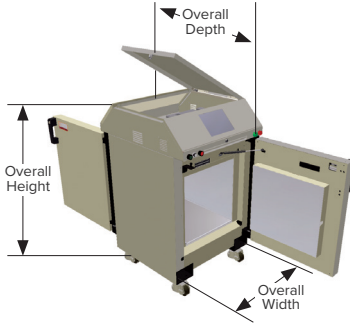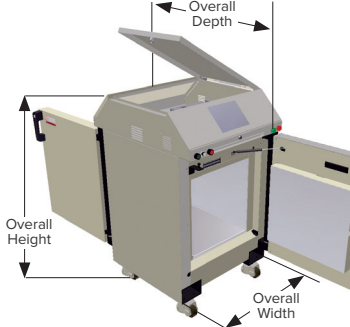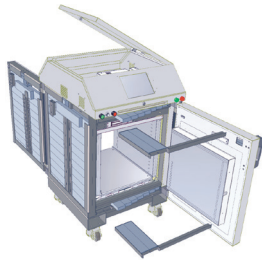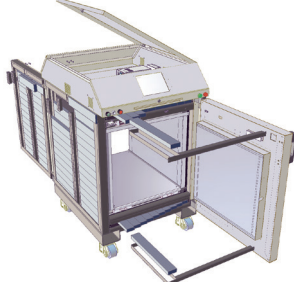TYPE	DESCRIPTION/ NOTES	Cronos-4	Cronos-11
External Dimensions:			
	Overall Width	73.2 cm (28.8 in.)	88.4 cm (34.8 in.)
	Overall Depth	85.5 cm (33.7 in.) for body 95.2 cm (37.5 in.) for body and door handles	114.7 cm (45.2 in.) for body 124.4 cm (49.0 in.) for body and door handles
	Overall Height (including leveling feet flush with bottom of Casters)	129.1 cm (50.8 in.)	145.7 cm (57.4 in.)
	Door Thickness	7.0 cm (2.7 in.)	7.0 cm (2.7 in.)
Weight:	Unit with No Lead	445 kg (981 lb)	563 kg (1241 lb)
	Lead (1 layer)	751 kg (1656 lb)	1264 kg (2787 lb)
	Lead (2 layers)	1503 kg (3314 lb)	2529 kg (5575 lb)
	Total (with 1 layer of lead)	1207 kg (2661 lb)	1841 kg (4059 lb)
	Total (with 2 layers of lead)	1958 kg (4317 lb)	3105 kg (6845 lb)
Accessibility:			

COMMON RADIOLOGICAL

RADIATION DETECTED

Gamma photons with energy over 50 keV: ²⁴¹Am, ¹³³Ba, ¹³⁷Cs, ⁶⁰Co, etc.

Automatic weighing of packages 100 g to 100 kg (~0.2 lb. to ~220.5 lb.) and calculation of the specific activity for a given radioisotope or mixture with transmission correction factor(s) is also available via software and/or rotary dial switch.

GENERAL

OPERATING MODES

The unit can be used with a two door operating mode (entrance and exit doors) or with one door operation only (the exit door is locked and only the entrance/front door is used for control). In either mode, doors are interlocked such that they must be closed to initiate a count.

PARAMETER ENTRY

Parameters may be entered with the touch of a finger using the capability of the built-in touch screen and WebRemote software. Additionally, a keyboard/trackball combo placed in a drawer in the top of the device is provided for entering parameters.



SPECIFICATIONS

UTILITY DEVICES

Lockable Keyboard Drawer:

- Houses special keyboard/trackball combo human interface device, integrated in top of unit for easy access



Rotary Switch:

- Used to manually select special preset user-defined parameter options (such as transmission correction factors) during normal operation without need to access keyboard

Display Screen:

- ~ 233.9 mm (10.4 in.) touch screen LCD display, integrated in top of unit (second display kit optionally available for exit side)

Bottom-mounted Input/Output and Power Entry Ports Box:


- Parallel (Centronics) printer port, printer not supplied
- One USB port and one Ethernet port (RJ45)
- IEC standard AC receptacle

Handling:

- Four casters: swiveling with integrated leveling feet (optional)
- Two integral fork lift channels to ease transportation

Internal Lining:

- Removable aluminum plate on top of load sensors for easy decontamination

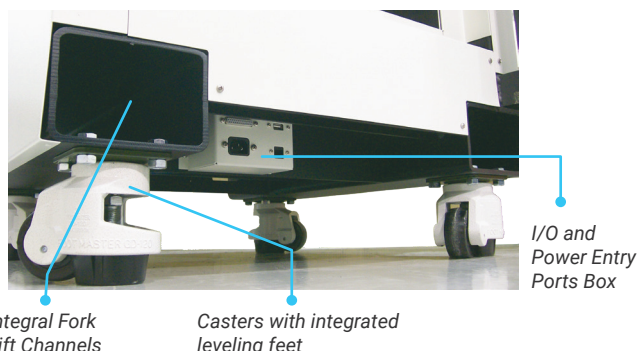

ELECTRICAL

Power Requirements:

- 220 V ac/50 Hz/1 Amp or 110 V ac/60 Hz/2 Amp mains 3 m (~10 ft) IEC standard cable (supplied; specify and special cable requirements on order)

CERTIFICATION



IEC 61098 compliant
ISO 11929:2010 compliant

ENVIRONMENTAL

Temperature:

- Operating temperature range 0 to +45 °C (+32 to +113 °F)

Humidity:

- 85% non-condensing

ORDERING INFORMATION

- Cronos-4 (SCN 817800) – 128.7 L (4.5 cu. ft) internal volume. Internal Dimensions (W x D x H): 46.5 cm x 57.9 cm x 47.8 cm (18.3 in. x 22.8 in. x 18.8 in.)
- Cronos-11 (SCN 817900) – 345.5 L (12.2 cu. ft) internal volume. Internal Dimensions (W x D x H): 63.5 cm x 87.2 cm x 62.4 cm (25.0 in. x 34.3 in. x 24.6 in.)

OPTIONS (FOR CRONOS-4, X=4; FOR CRONOS-11, X=11)

- CrnsxPB: Secondary layer of 25 mm (~1 in.) lead ingot shielding for Cronos-x; (to bring total thickness to ~50 mm (2 in.))
- CrnxJIG: Source Calibration jig for Cronos-x (source not supplied)
- CrnsxLR: Removable, non-metal Cronos-x liners kit with preprinted center points for decon./calibration
- Crnsx2D: Secondary color LCD display kit for exit side of unit for Cronos-x
- CrnsMAG: Magnetic Strip Reader
- CrnsBAR: Bar Code Reader
- CrnsPROX: Proximity Card Reader
- Crns4TAB: Stand/Plinth table to elevate Cronos-4 only
- CrnxLFT: Lifting Sling Arrangement for Cronos-x
- CRemote: Centralized Remote Control & Data Access Software for use with Mirion Argos, Sirius, GEM and Cronos contamination monitors
- 817885 (Cronos-4), 817985 (Cronos-11) – Secondary color touch screen LCD kit for exit of unit

WebRemote-Kit Options (For Rugged, Y=1; FOR PRO Y=2; FOR basic, Y=3):

- WebRemote-Kit#Y – WebRemote Software and Rugged/Pro/Basic Hardware. Includes Dashboard, WebRemote, and Monitor 9.0 Software. Includes Rugged, Pro, or Basic hardware, and applicable accessories.
- The Mirion contamination monitors can be integrated with Horizon® Supervisory Software to provide an integrated solution with Mirion instruments. Horizon complements the functionality of the WebRemote Contamination Monitor Interface.



MIRION
TECHNOLOGIES



RTM750™

Laundry and Small-Items Conveyor Monitor



Detection of radioactive contamination on clothing and other small and/or long items such as tubes, poles and valves.

DESCRIPTION

The laundry and small items RTM750 monitor is used for detection of radioactive contamination on clothing and other small and/or long items such as tubes, poles and valves.

Detector arrays above and below the stainless-steel mesh belt guarantee high sensitivity. The detector arrangement ensures measurements without any dead zones. The gap between the belt and upper detector array is adjustable to achieve as low detection limits as possible, monitored by light barriers.

The RTM750 monitor can be equipped with various detector combinations to meet specific requirements.

FEATURES

- ✓ High sensitivity, no dead zones
- ✓ Beta plastic, gamma plastic, gas detectors, or combinations
- ✓ Belt available in various dimensions
- ✓ Automatic speed control
- ✓ Height adjustment (2 - 18 cm; optionally more)
- ✓ Automatic background subtraction
- ✓ Selectable alarm levels in cps, cpm, Bq, Bq/cm²
- ✓ Audible and visible alarm indication
- ✓ Alpha/beta discrimination (optional)
- ✓ Second conveyor for automated sorting of items (optional)
- ✓ Uninterruptible power supply (optional)

RTM750™ LAUNDRY AND SMALL-ITEMS CONVEYOR MONITOR

FUNCTIONALITY

The belt speed is calculated and set automatically in a range between 0.6 and 12 m/min dependent on measurement mode, current background, alarm threshold, detection safety and false alarm rate (acc. to ISO 11929). In case of alarm the belt reverses its movement to the start and stops. An alarm message is displayed on the screen. A high contamination alarm, e.g., in case of hot spots, triggers an additional acoustic alarm. All contaminations are clearly indicated by visual and audible alarm. The results are stored in a measurement database. To avoid puncturing detectors by the measured goods a plastic belt can be utilized (optional). An additional conveyor allows for automatic sorting of the measured goods according to the measurement result (optional).

USERS BENEFITS


- High throughput: up to 375 overall/h
- Contamination measurement from below and above
- Adjustable height of upper detectors (2 - 18 cm; optional up to 40 cm)
- Large TFT 19" color display (touch screen optional)
- Automatic system check
- Uninterruptible power supply (optional)

TECHNICAL SPECIFICATIONS

- Standard dimensions:
 - Length: 2000 - 3400 mm
 - Width: 900 - 1400 mm
 - Height: 1730 - 1980 mm
- Detectors: beta plastic scintillation or gas-flow detectors or gamma plastic scintillation or combinations
- Detection limit: 45 Bq (Co-60, 1.2 m/min)
- Belt speed: 0.6 m/min - 12 m/min
- Energy range: 50 keV - 3 MeV

OPTIONS

- Impermeable plastic conveyor belt
- Additional conveyor for sorting clothes according to measurement result
- Mechanical height adjustment for whole RTM750 monitor
- Tray and trackball, plus finger protection
- Alpha/beta discrimination
- ISO 11929 implementation

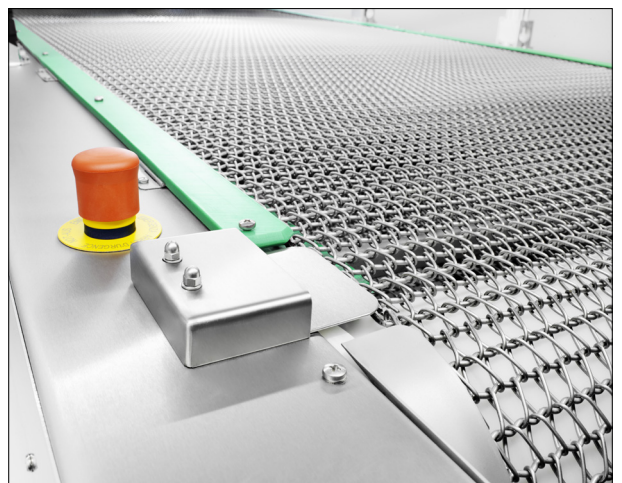

MIRION
TECHNOLOGIES

Copyright © 2023 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



MIRION
TECHNOLOGIES




Supervision



MIRION
TECHNOLOGIES

Vital[®] Supervision

Centralized, Simplified Supervisory Software for Radiological Instrumentation

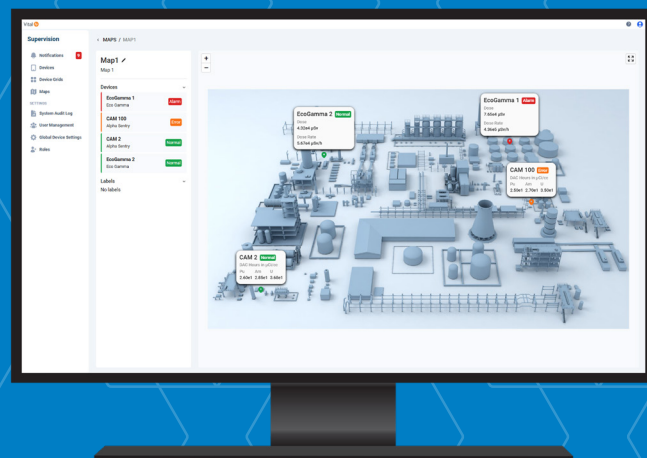

Reshape radiological instrumentation monitoring with comprehensive supervisory software from Mirion Technologies. Vital Supervision, part of the Vital Platform, simplifies radiological instrument data collection and visualization for safe, real-time decision-making — from one central tool.

A comprehensive supervisory software application, Vital Supervision enhances monitoring and management of radiological instrumentation.

All your Vital Instruments, One Vital Platform

Vital Supervision is the first application built on Mirion's Vital Platform, a connected digital ecosystem designed to simplify data aggregation and expert review. By directly integrating with a wide range of instruments, Vital Supervision provides a unified view of radiological data, breaking down information silos and empowering teams to work more effectively.

FEATURES

- ✓ **Direct Device Integration:** Connects with Mirion instruments to aggregate data in real-time
- ✓ **Warning Thresholds:** Customizable alert levels for key instruments
- ✓ **Centralized Monitoring:** A single interface for monitoring many instruments
- ✓ **Real-time Notifications:** Immediate alerts for instrument alarms, alerts, or faults
- ✓ **Device Management:** Detailed views of instrument data, such as individual channel readings and alarm states
- ✓ **Maps Feature:** Graphical maps display instrument locations and data
- ✓ **Data History:** Historical instrument data storage for review and analysis

ONE-TIME DEVICE SETUP, ONGOING SITE VISIBILITY

Managing instruments across a site can be challenging. Vital Supervision is designed with a robust communication engine that can scale with your site needs.

Communication to each instrument is tailored to an instrument's protocols – capturing all its analysis data, recording its state of health, and handling fault conditions such as communication loss.

This mission critical supervisory system allows instruments to be added, modified, disabled, or removed from a live system without affecting operations with other instruments. In addition, Vital Supervision is designed for fast, low-cost deployment by providing the recommended default communication parameters for each instrument. Quickly stand up temporary systems, or even a large site, in minutes rather than days or weeks of complex configuration.



Notifications

Drive immediate action and informed decision making through clear visualization in the Notifications feature.

- **Visualize Events Clearly:** Instantly see alarms, alerts and faults.
- **Act Fast:** Identify the source, priority and duration of each event.
- **Stay Informed:** Authorized users can acknowledge events and access full details anytime from the dashboard.

Date	Origin Type	Origin Name	Type	State	Priority	Duration
7/19/2025, 9:40:29 AM	AlphaGenery	GMF 100	Acute Release	Clear	Priority2	7 minutes 10 seconds
7/19/2025, 9:40:30 AM	Ecocinema	Ecocinema 2	Raw Data	Clear	Priority2	20 seconds
7/19/2025, 9:40:30 AM	Ecocinema	Ecocinema 2	Raw Data	Clear	Priority2	20 seconds
7/19/2025, 9:40:30 AM	Ecocinema	Ecocinema 2	Raw Data	Clear	Priority2	20 seconds
7/19/2025, 9:40:30 AM	Ecocinema	Ecocinema 2	Raw Data	Clear	Priority2	20 seconds
7/19/2025, 9:40:30 AM	AlphaGenery	GMF 100	Acute Release	Alerts	Priority1	7 minutes 20 seconds
7/19/2025, 9:27:30 AM	Ecocinema	Ecocinema 2	Door Alarm	Clear	Priority1	20 seconds
7/19/2025, 9:27:30 AM	Ecocinema	Ecocinema 2	Door Alarm	Alerts	Priority1	20 seconds
7/19/2025, 9:23:55 AM	AlphaGenery	GMF 100	Acute Release	Clear	Priority1	5 seconds
7/19/2025, 9:23:55 AM	AlphaGenery	GMF 100	Acute Release	Alerts	Priority1	5 seconds
7/19/2025, 9:21:18 AM	AlphaGenery	GMF 100	Acute Release	Clear	Priority1	27 seconds
7/19/2025, 9:20:10 AM	AlphaGenery	GMF 100	Acute Release	Alerts	Priority1	27 seconds
7/19/2025, 9:20:45 AM	AlphaGenery	GMF 100	GMF Disabled	Disabled	Priority2	12 minutes 10 seconds
7/19/2025, 9:40:30 AM	AlphaGenery	GMF 100	GMF Disabled	Disabled	Priority2	12 minutes 10 seconds
7/19/2025, 9:40:30 AM	AlphaGenery	GMF 100	GMF Disabled	Alerts	Priority2	1 hour 10 minutes 10 seconds
7/19/2025, 9:40:30 AM	Ecocinema	Ecocinema 2	Raw Data	Clear	Priority2	20 seconds

View and acknowledge alarm notifications




Devices

The Devices feature provides easy access to detailed views of instruments within the network. Key capabilities include:

- **Inspect Alarming Devices:** Access device-specific data from any screen to understand and react to events.
- **Review Devices and Access Controls:** View individual instrument channel readings, alarm states, and measurement data tailored to each instrument.
- **Interact with Devices:** Perform actions such as acknowledging or clearing alarms, changing alarm setpoints, advancing filters, or performing calibration checks based on instrument capabilities.
- **Analyze Data and Optimize:** Use interactive time-series plots to view measurement data and alarm setpoints. Export data for customized analysis, and display spectra for spectroscopic instruments.

Name	Type	Location	Status
ALARM 1	ALARM	Building 1	OK
ALARM 2	ALARM	Building 1	OK
ALARM 3	ALARM	Building 1	OK
ALARM 4	ALARM	Building 1	OK
ALARM 5	ALARM	Building 1	OK
ALARM 6	ALARM	Building 1	OK
ALARM 7	ALARM	Building 1	OK
ALARM 8	ALARM	Building 1	OK
ALARM 9	ALARM	Building 1	OK
ALARM 10	ALARM	Building 1	OK
ALARM 11	ALARM	Building 1	OK
ALARM 12	ALARM	Building 1	OK
ALARM 13	ALARM	Building 1	OK
ALARM 14	ALARM	Building 1	OK
ALARM 15	ALARM	Building 1	OK
ALARM 16	ALARM	Building 1	OK
ALARM 17	ALARM	Building 1	OK
ALARM 18	ALARM	Building 1	OK
ALARM 19	ALARM	Building 1	OK
ALARM 20	ALARM	Building 1	OK
ALARM 21	ALARM	Building 1	OK
ALARM 22	ALARM	Building 1	OK
ALARM 23	ALARM	Building 1	OK
ALARM 24	ALARM	Building 1	OK
ALARM 25	ALARM	Building 1	OK
ALARM 26	ALARM	Building 1	OK
ALARM 27	ALARM	Building 1	OK
ALARM 28	ALARM	Building 1	OK
ALARM 29	ALARM	Building 1	OK
ALARM 30	ALARM	Building 1	OK
ALARM 31	ALARM	Building 1	OK
ALARM 32	ALARM	Building 1	OK
ALARM 33	ALARM	Building 1	OK
ALARM 34	ALARM	Building 1	OK
ALARM 35	ALARM	Building 1	OK
ALARM 36	ALARM	Building 1	OK
ALARM 37	ALARM	Building 1	OK
ALARM 38	ALARM	Building 1	OK
ALARM 39	ALARM	Building 1	OK
ALARM 40	ALARM	Building 1	OK
ALARM 41	ALARM	Building 1	OK
ALARM 42	ALARM	Building 1	OK
ALARM 43	ALARM	Building 1	OK
ALARM 44	ALARM	Building 1	OK
ALARM 45	ALARM	Building 1	OK
ALARM 46	ALARM	Building 1	OK
ALARM 47	ALARM	Building 1	OK
ALARM 48	ALARM	Building 1	OK
ALARM 49	ALARM	Building 1	OK
ALARM 50	ALARM	Building 1	OK
ALARM 51	ALARM	Building 1	OK
ALARM 52	ALARM	Building 1	OK
ALARM 53	ALARM	Building 1	OK
ALARM 54	ALARM	Building 1	OK
ALARM 55	ALARM	Building 1	OK
ALARM 56	ALARM	Building 1	OK
ALARM 57	ALARM	Building 1	OK
ALARM 58	ALARM	Building 1	OK
ALARM 59	ALARM	Building 1	OK
ALARM 60	ALARM	Building 1	OK
ALARM 61	ALARM	Building 1	OK
ALARM 62	ALARM	Building 1	OK
ALARM 63	ALARM	Building 1	OK
ALARM 64	ALARM	Building 1	OK
ALARM 65	ALARM	Building 1	OK
ALARM 66	ALARM	Building 1	OK
ALARM 67	ALARM	Building 1	OK
ALARM 68	ALARM	Building 1	OK
ALARM 69	ALARM	Building 1	OK
ALARM 70	ALARM	Building 1	OK
ALARM 71	ALARM	Building 1	OK
ALARM 72	ALARM	Building 1	OK
ALARM 73	ALARM	Building 1	OK
ALARM 74	ALARM	Building 1	OK
ALARM 75	ALARM	Building 1	OK
ALARM 76	ALARM	Building 1	OK
ALARM 77	ALARM	Building 1	OK
ALARM 78	ALARM	Building 1	OK
ALARM 79	ALARM	Building 1	OK
ALARM 80	ALARM	Building 1	OK
ALARM 81	ALARM	Building 1	OK
ALARM 82	ALARM	Building 1	OK
ALARM 83	ALARM	Building 1	OK
ALARM 84	ALARM	Building 1	OK
ALARM 85	ALARM	Building 1	OK
ALARM 86	ALARM	Building 1	OK
ALARM 87	ALARM	Building 1	OK
ALARM 88	ALARM	Building 1	OK
ALARM 89	ALARM	Building 1	OK
ALARM 90	ALARM	Building 1	OK
ALARM 91	ALARM	Building 1	OK
ALARM 92	ALARM	Building 1	OK
ALARM 93	ALARM	Building 1	OK
ALARM 94	ALARM	Building 1	OK
ALARM 95	ALARM	Building 1	OK
ALARM 96	ALARM	Building 1	OK
ALARM 97	ALARM	Building 1	OK
ALARM 98	ALARM	Building 1	OK
ALARM 99	ALARM	Building 1	OK
ALARM 100	ALARM	Building 1	OK


Device list screen with status (above); device detail screen (below)

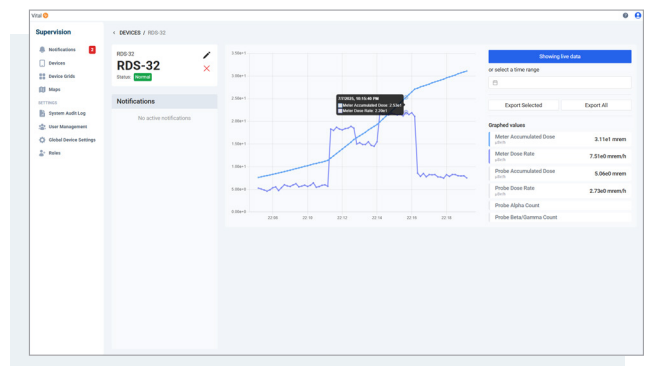



An intuitive Maps feature offers a comprehensive, interactive way to monitor and manage site instruments, enhancing visibility and control.

- **Sitewide Visibility:** Monitor instrument status and location across the site(s).
- **Interactive Maps:** Navigate buildings, floors, and rooms with custom site and floor maps.
- **Live Insights:** View real-time readings and alarm status directly on the map.
- **Quick Access:** Click on any instrument to jump to detailed data and controls.
- **Flexible Setup:** Add multiple maps with graphical overlays to match your site layout.

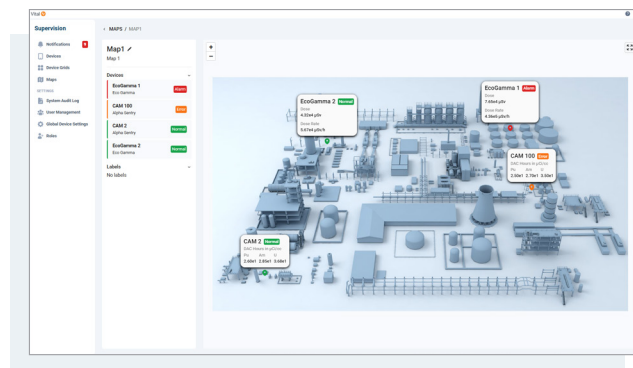

Customizable site maps show your facility layout
with device locations and status


Device Grids

The Device Grids feature allows users to monitor specific instruments based on customizable criteria, including instrument type, location, or Radiation Work Permit (RWP) and task information. This is particularly useful in telemetry situations, such as a nuclear power plant outage.

Key Capabilities:

- **Customizable Monitoring:** Create multiple device grids to monitor specific instruments based on various criteria.
- **Dynamic Filtering:** Automatically include new devices that meet defined filter criteria, ensuring all relevant instruments are monitored in real-time.
- **Warning Thresholds:** Set customizable alert levels for key instruments to notify users of rising dose rates, enabling proactive responses.

With the Device Grids feature, users can enhance monitoring capabilities, improve response times, and maintain a safe working environment.

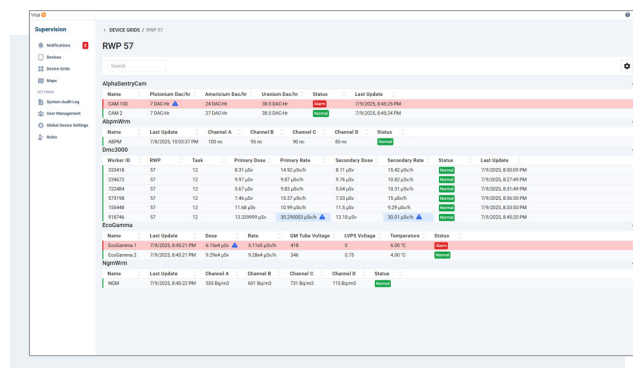

Device Grid Thresholds and Statuses

The Vital Platform, Powered by Mirion

In real-time response situations and daily operations, you need solutions that inform smart, quick action. The Vital Platform is a connected digital ecosystem that simplifies data aggregation and expert review. It addresses the challenges of managing radiological instruments across large sites, breaking down information silos and surfacing critical insights.

Learn more: mirion.com/vital





OPERATIONAL, SECURITY, AND SCALABILITY EXCELLENCE

The Vital Platform is designed to simplify set-up and scaling for evolving operational needs while providing a robust, secure foundation.

SECURE AND SCALABLE

- **User Authentication and Authorization:** Role-based security dictates access to information and operational control, ensuring user permissions align with their responsibilities.
- **Audit Logging:** Comprehensive logging supports compliance with safety regulations, troubleshooting, and system security.
- **Cybersecurity:** Robust data security is maintained through adherence to guidance from NEI 08-09, NIST SP 800-53, and 10 CFR 73.54.

OPERATIONAL BENEFITS

The Vital Platform offers numerous benefits, including:

- Enhanced operational efficiency through real-time visibility and reduced staff entry into radiological areas
- Improved safety through prompt responses to events
- Regulatory compliance through accurate reporting and historical data access
- Simplified administration through centralized access management
- Scalability to integrate with up to thousands of instruments
- Robust cybersecurity measures

By leveraging the Vital Platform, organizations can streamline operations, improve safety, and maintain regulatory compliance while benefiting from a secure and scalable solution.

SPECIFICATIONS

VITAL SUPERVISION APPLICATION - CORE SUPPORTED FEATURES AND BENEFITS

Application Features	Practical Benefits
Collect and store instrument data	Easily access instrument data for real-time responsiveness and optimized operations.
Real-time instrument monitoring	Access live data – including radiological alarms, events, and state of health (SoH) – to optimize daily operations and make an informed response.
Instrument oversight: • Track maintenance and calibration per site requirements and regulations. • Monitor and track status and state of health.	Maintain and optimize operations: • Maintain quality control, ensure compliance, and simplify auditing. • Detect equipment anomalies early and take action to reduce unplanned maintenance and instrument downtime. • Efficiently manage routine maintenance and keep critical instruments operational and ready.
Remote instrument operation	Streamline processes and reduce staff entry into radiological areas to perform instrument operations, including configuration changes, alarm setpoint changes or triggers.
Supported Instruments	• AlphaSentry CAM with ASM2000 • DMC 3000™ Personal Dosimeter • DRM-3000™ & EcoGamma™-g Radiation Monitoring Systems • iCAM™ Alpha/Beta Particulate Monitor • ABPM Particulate Monitors • NGM Noble Gas Monitors • RDS-32™ & RDS-31™ Survey Meter • Additional instruments will be added regularly with new software releases

PRODUCT SPECIFICATIONS

Desktop Installation	Windows 11
On-Premise Server	Windows Server 2022
Database	SQL Server 2022
Browser Support	Google Chrome, Microsoft Edge

PLATFORM SECURITY

- Secure development based on NEI 08-09, NIST SP 800-53,82, and 10 CFR 73.54 guidance
- Generation of Software Bill of Materials (SBOM) in standard formats to aid easy/consistent security evaluations
- All modules are code signed using x.509 certificate provisioned by Mirion's Public Key Infrastructure (PKI)
- Automated vulnerability scans on code to identify weaknesses and prevent exploitation

The Mirion Product Security Inquiry Response Team (PSIRT) is an available resource to help customers with security-related inquiries for our software products.

ORDERING INFORMATION

Product Code	Short Description	Long Description
VS Base System Licenses		
VS-BASE-DT	Vital Supervision Desktop System	Includes Desktop license and 1 Client license (all runs on 1 PC). Must be combined with instrument communication (CM) Licenses.
VS-BASE-C5	Vital Supervision Server System, 5 Clients	Vital Supervision Server System, 5 Clients Includes Server license. Must be combined with instrument co
VS-BASE-CU	Vital Supervision Server System, Unlimited Clients	Vital Supervision Server System, Unlimited Clients Includes Server license. Must be combined with instrument communication (CM) Licenses.
Telemetry Communication (CM) Licenses		
VS-CM-TEL-XX	Vital Supervision Comm License for up to XX Telemetry Devices	Vital Supervision Comm License for up to XX Telemetry Devices Includes instrument communication, data historian, and device detail screens for any instrument transmitting via WRM2/WRM3 telemetry protocols using wired or wireless connection.
Instrument Communication (CM) Licenses		
VS-CM-INS-XX	Vital Supervision Comm License for up to XX Instruments	Vital Supervision Comm License for up to XX Instruments Supports instruments via direct serial or Ethernet connection. For all instruments other than Spectroscopy and Telemetry. Includes instrument communication, data historian, device detail screens, and any remote two-way command & control functions for instruments that support it.



Copyright © 2025 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.



MIRION
TECHNOLOGIES

Copyright © 2026 Mirion Technologies, Inc. or its affiliates. All rights reserved. Mirion, the Mirion logo, and other trade names of Mirion products listed herein are registered trademarks or trademarks of Mirion Technologies, Inc. or its affiliates in the United States and other countries. Third party trademarks mentioned are the property of their respective owners.

MKTG-2819-EN-C - 08/2026

[MIRION.COM](https://www.mirion.com)